


Assembly Guide - ENDEAVOUR

3D printed RC Model


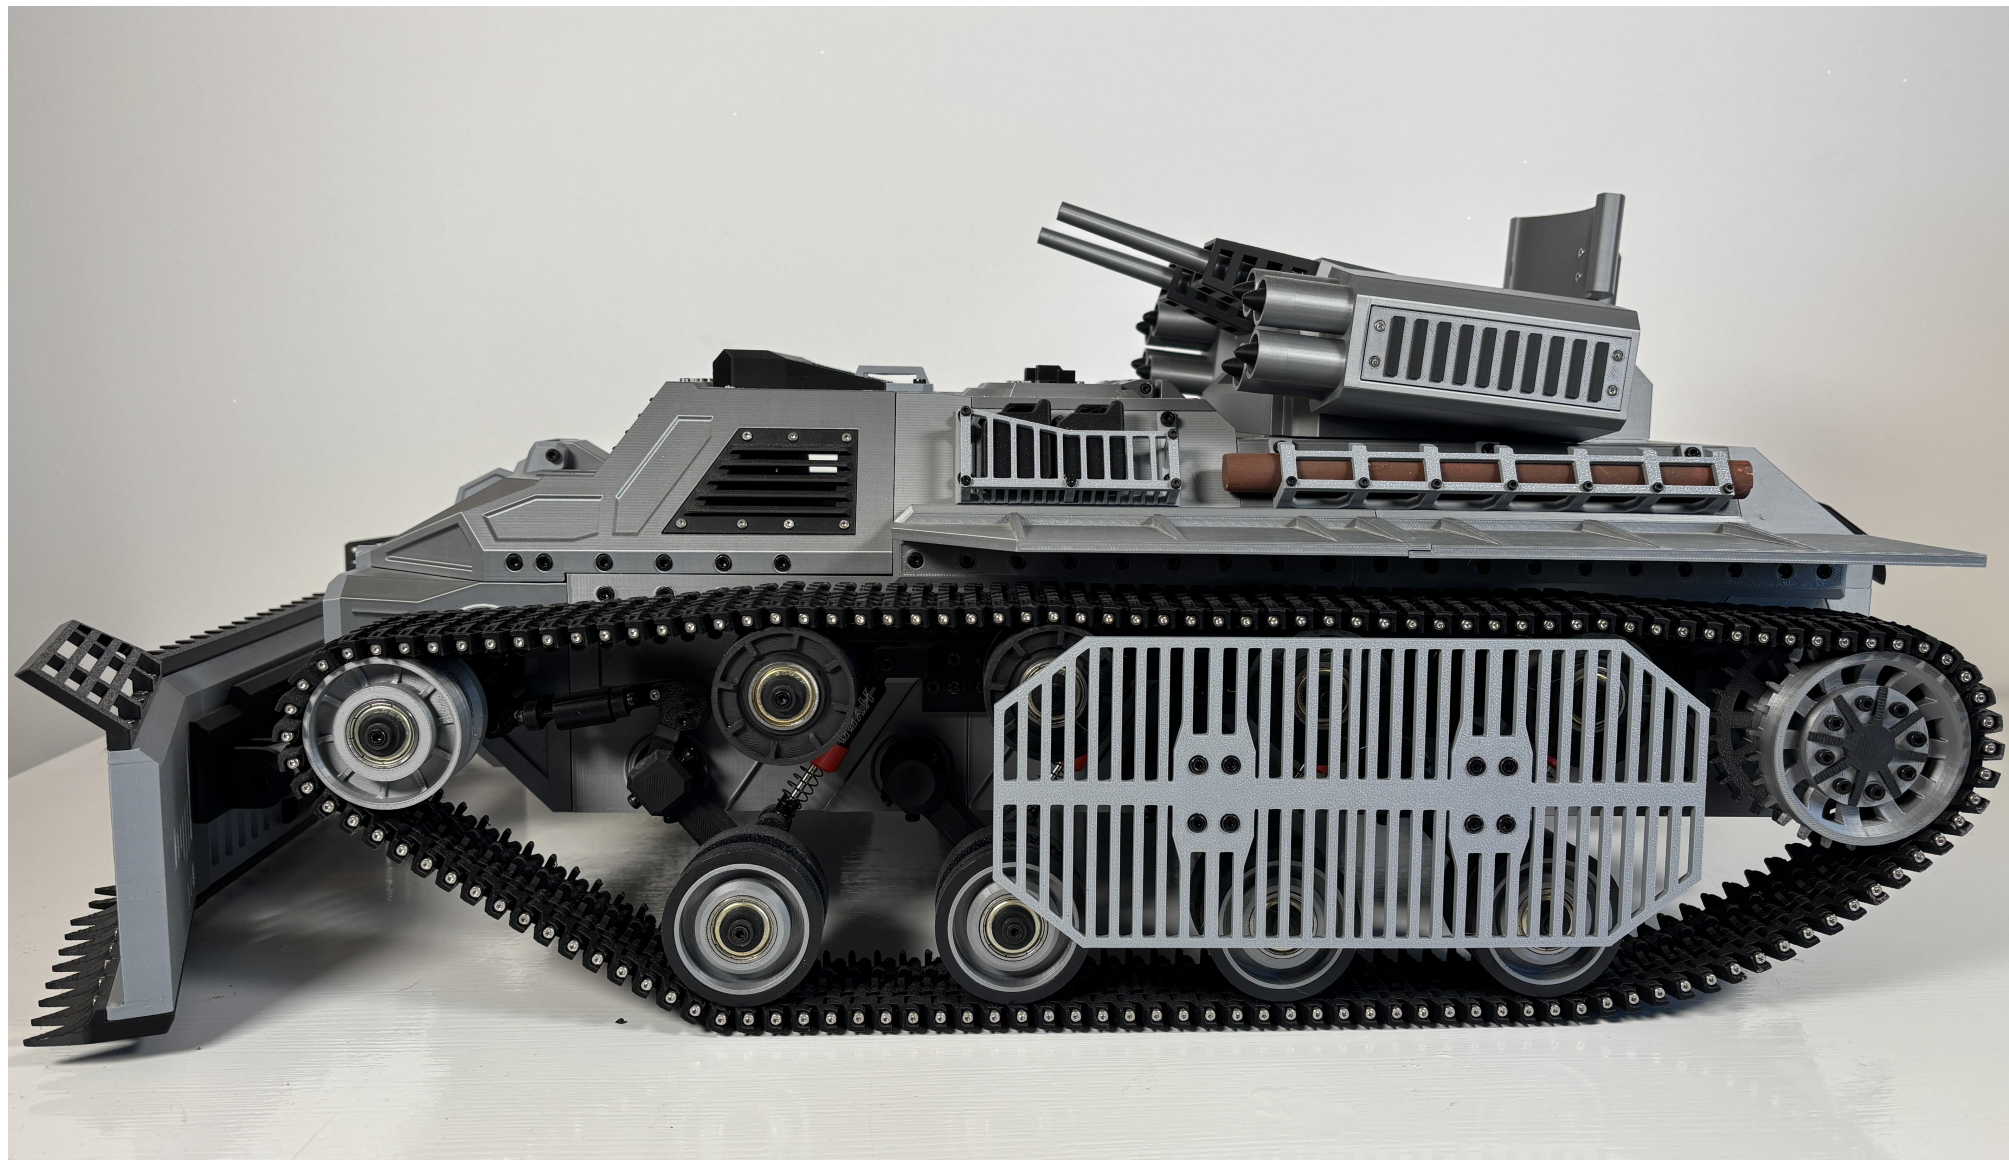


1.1

STL Part : HULL3

Insert the brass inserts into all highlighted holes.

For inserting the brass insert use soldering iron with specific tip. The brass insert needs to be heated to place in the hole.

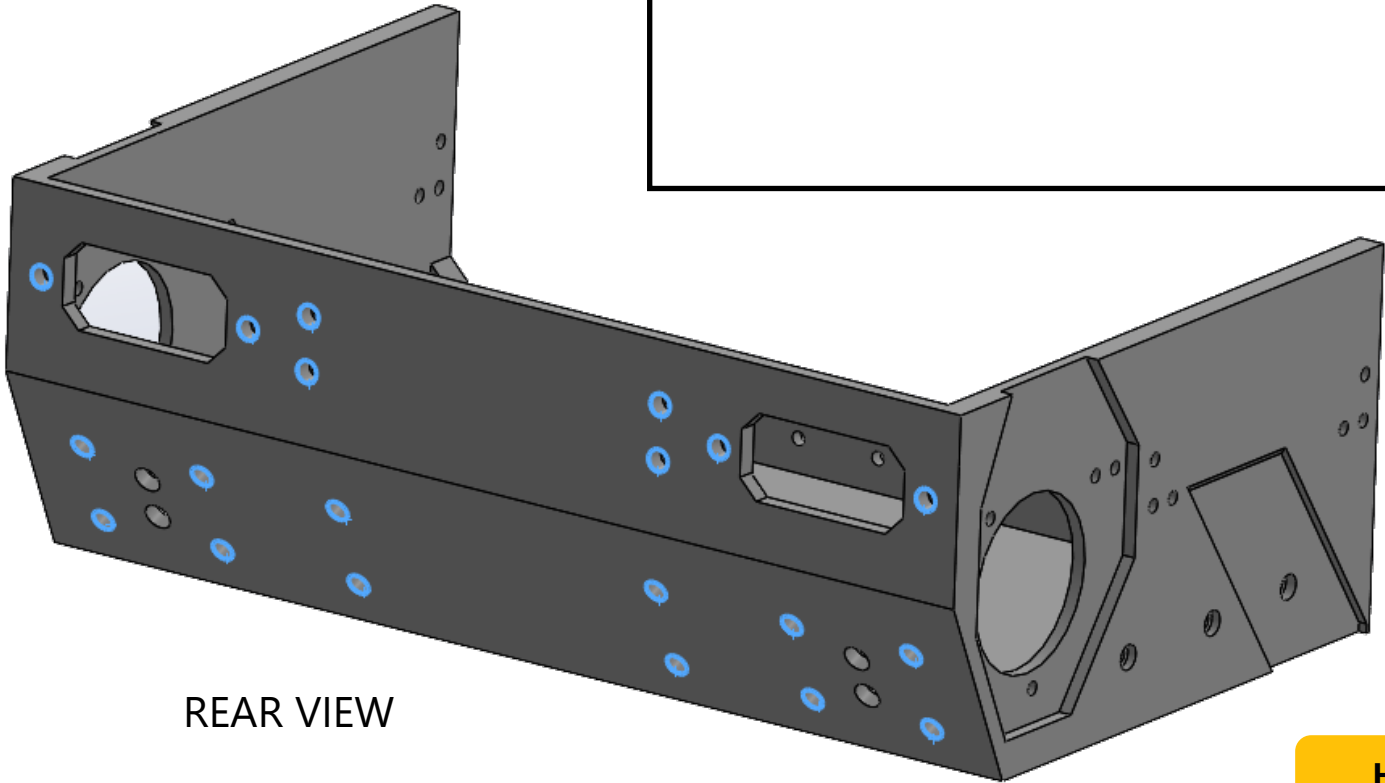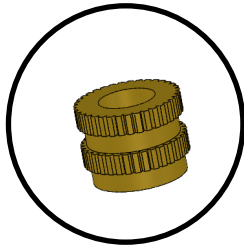

REAR VIEW

HULL3

For section 1 you need :




Brass inserts : 111 pieces



Screws M3x10 : 26 pieces





Soldering iron with tip for inserting the brass inserts

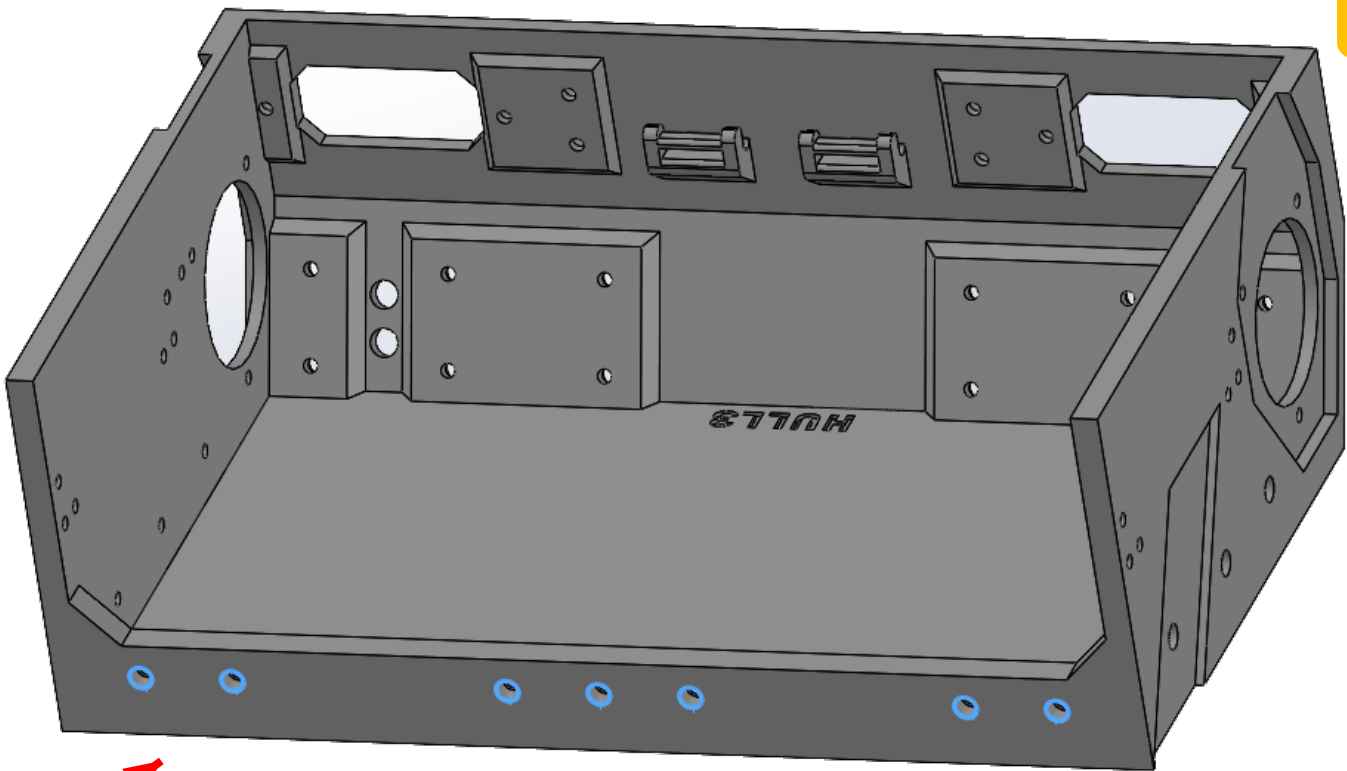

FRONT VIEW

HULL3

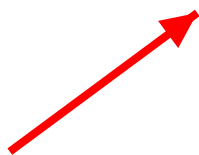
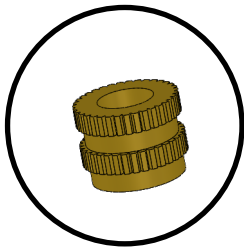


Insert the brass inserts into all highlighted holes.

1.2

STL Part : HULL2

Insert the brass inserts into all highlighted holes.

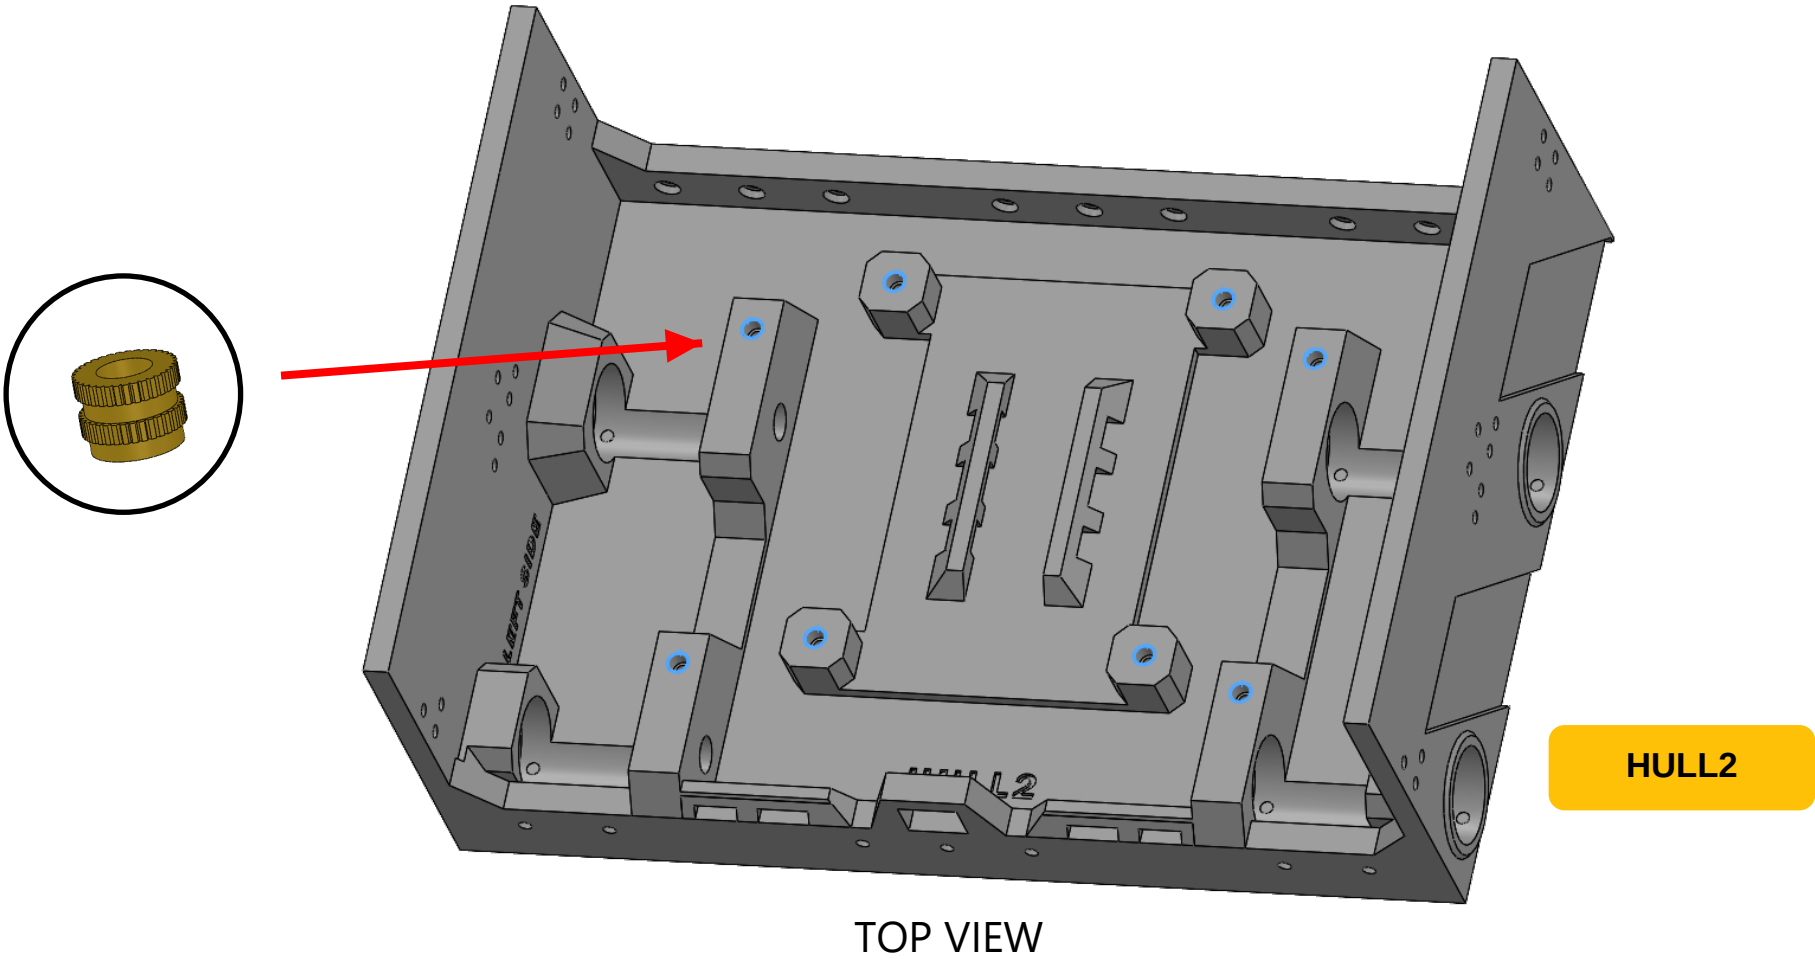
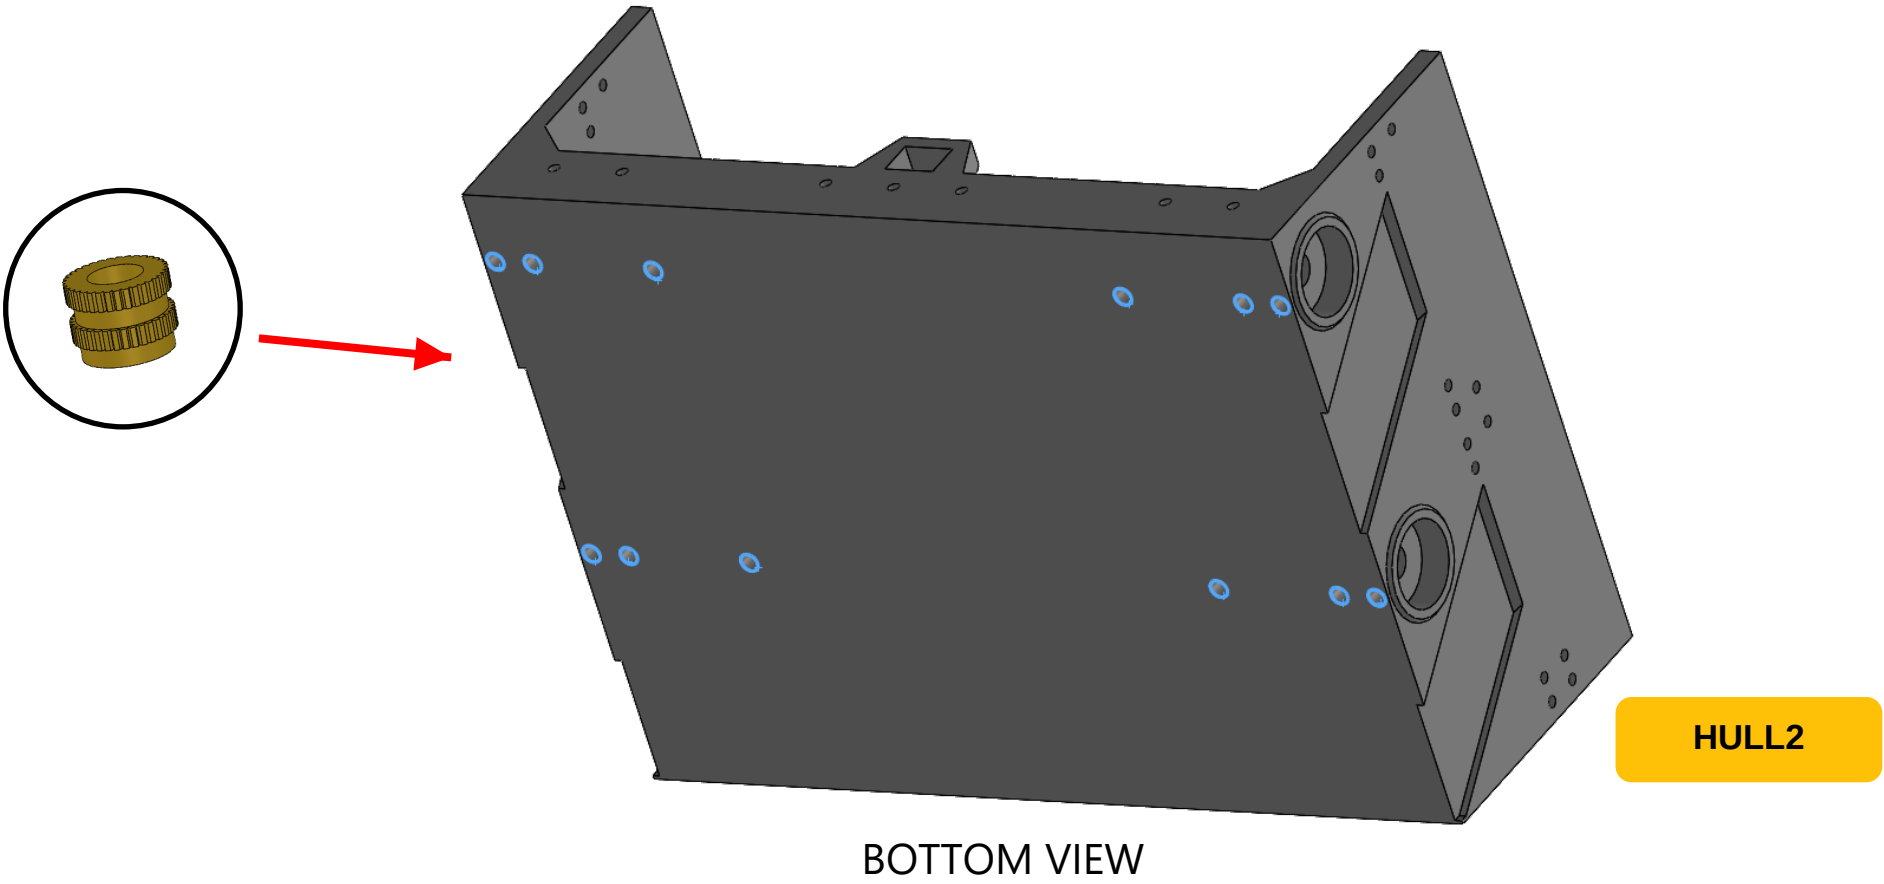


Insert the brass inserts into all highlighted holes.

1.3


STL Part : HULL1

Insert the brass inserts into all highlighted holes.

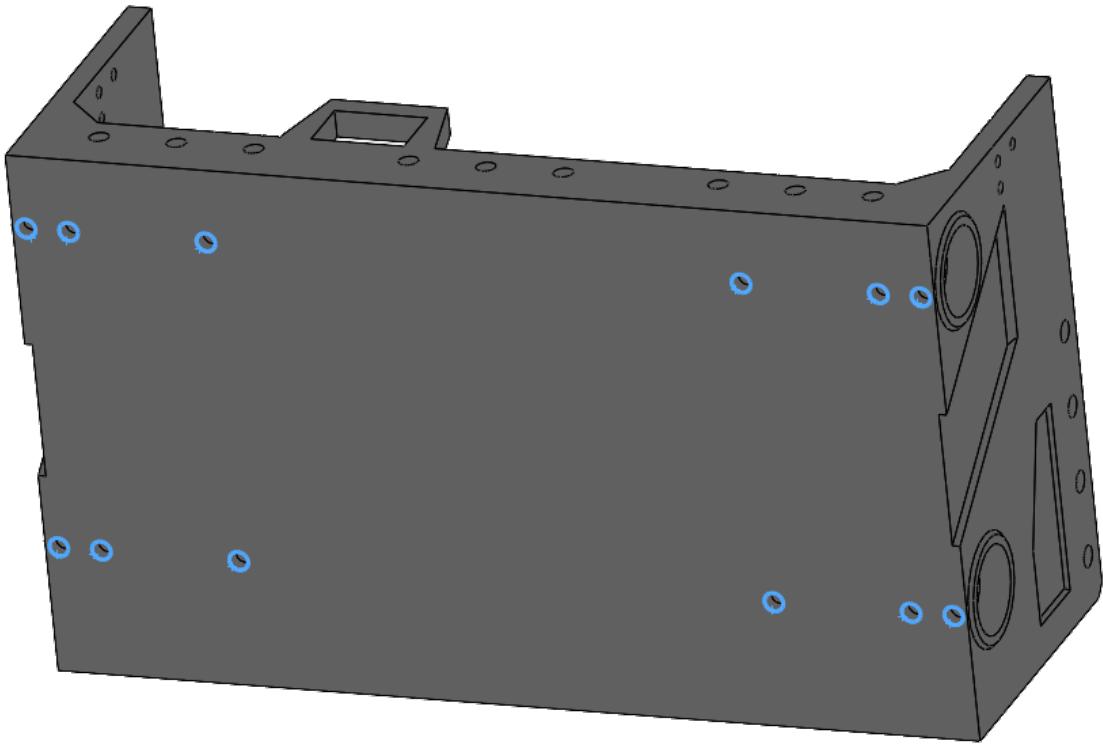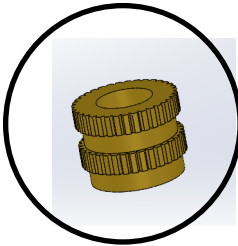

BOTTOM VIEW

HULL1

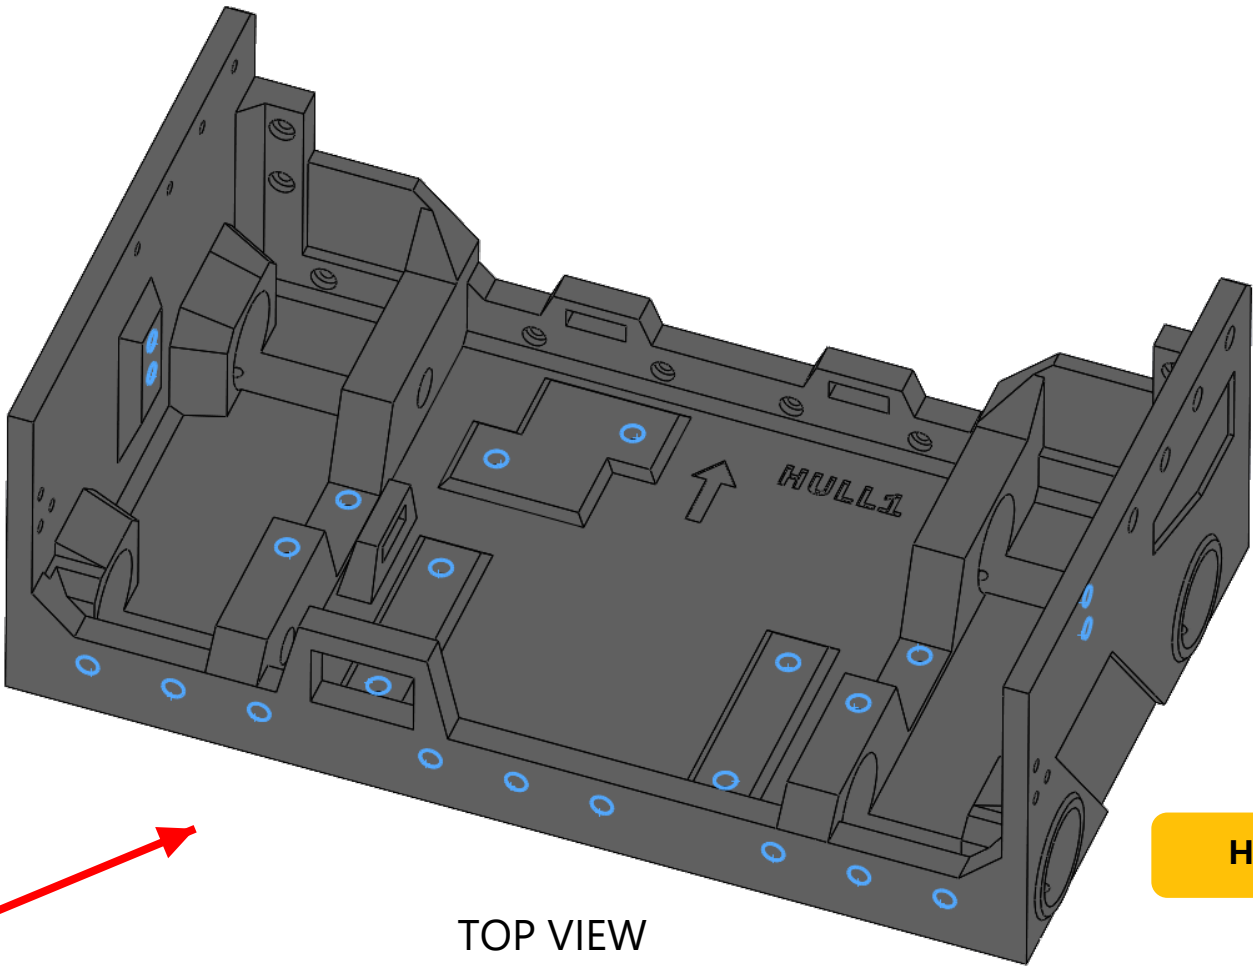

TOP VIEW



HULL1

Insert the brass inserts into all highlighted holes.

1.4

STL Part : HULL-FRONT

Insert the brass inserts into all highlighted holes.

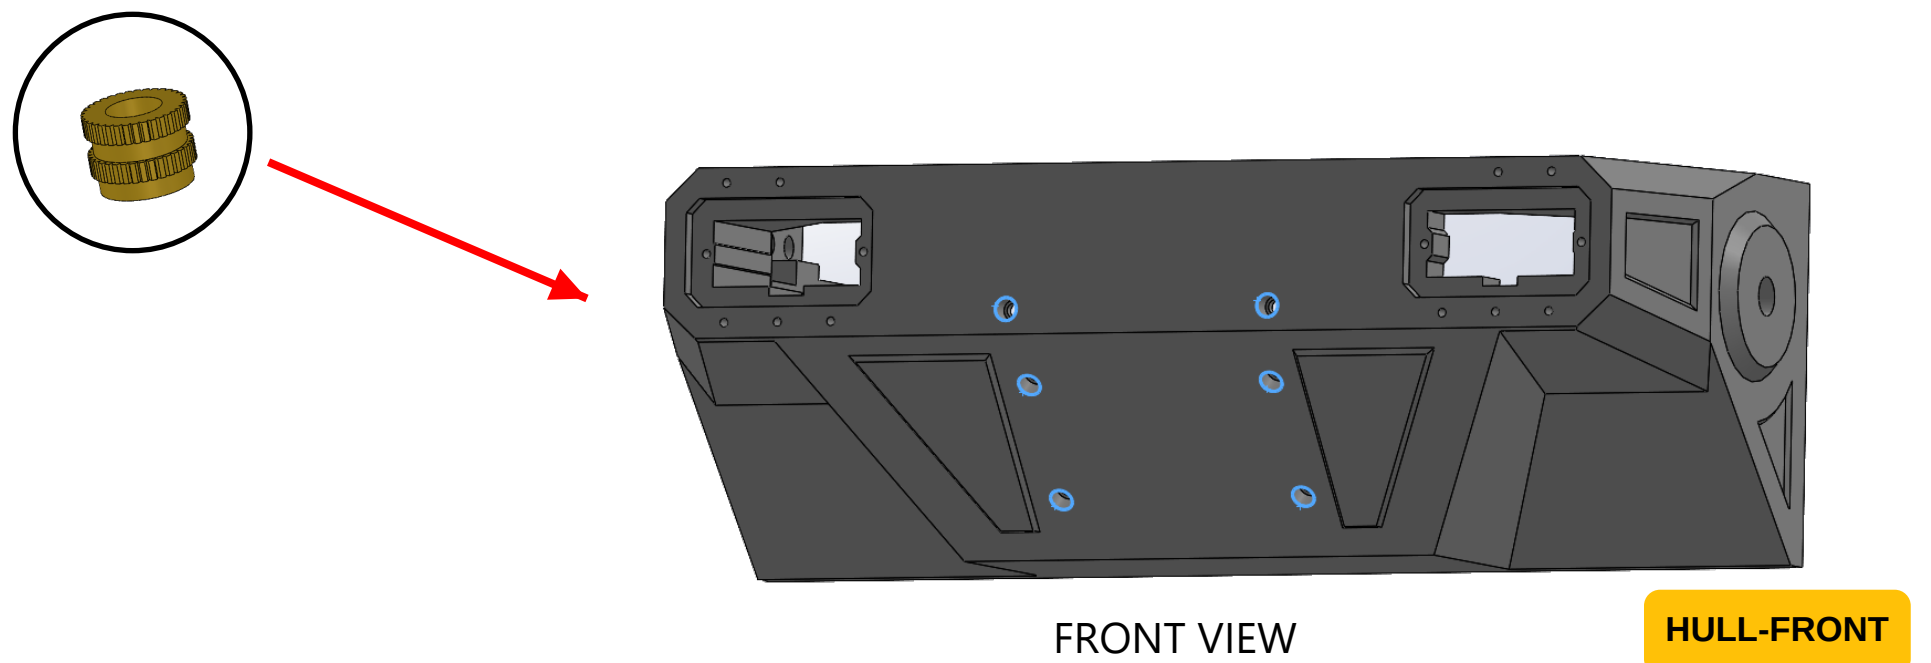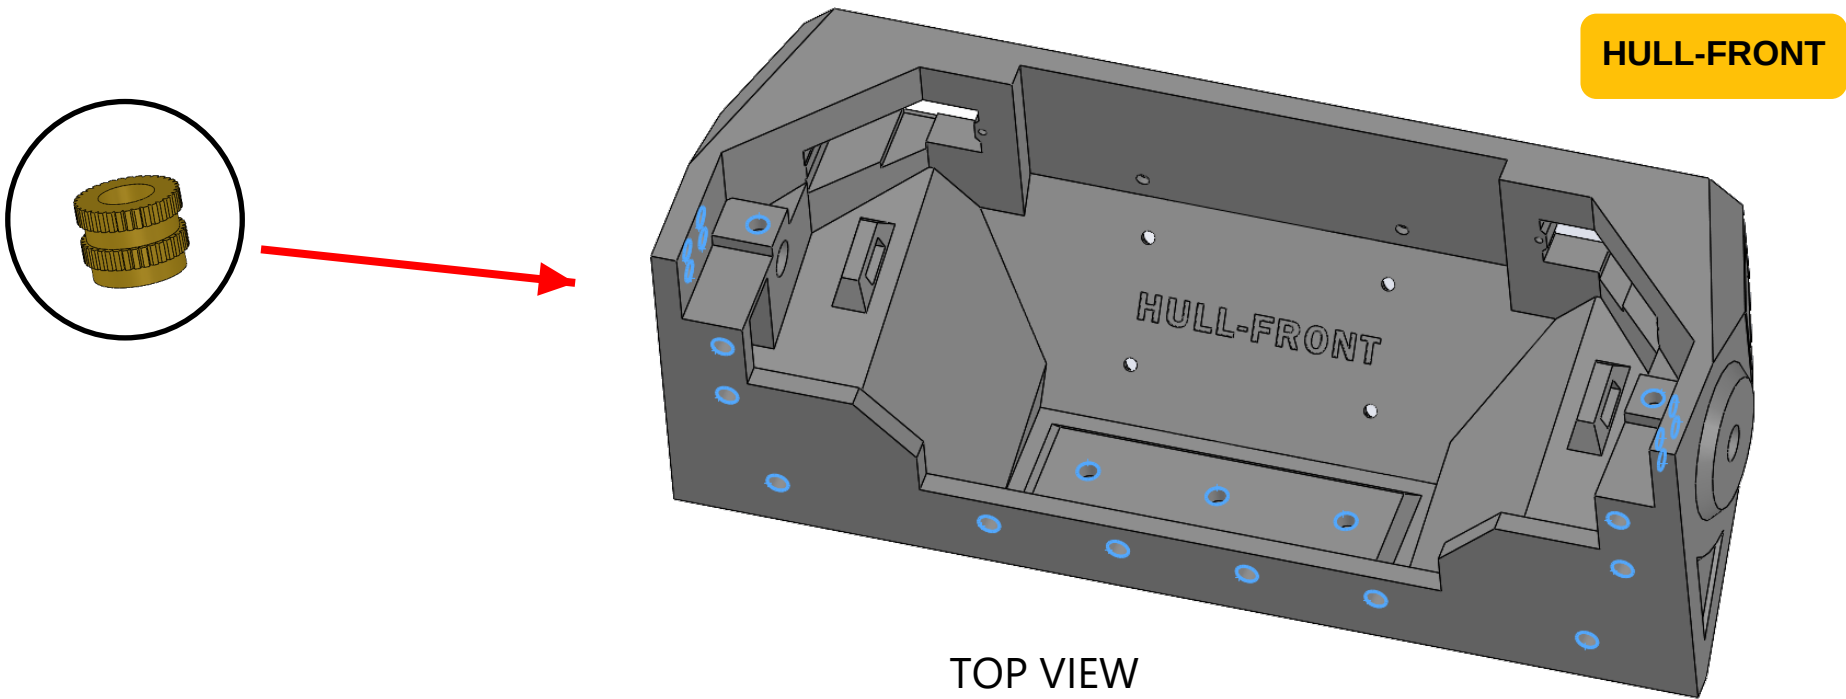

Insert the brass inserts into all highlighted holes.


1.5

STL Parts : HULL1, HULL2, HULL3


Join HULL2 and HULL3 with M3 screws.

You need :

screw M3x10 : 16x

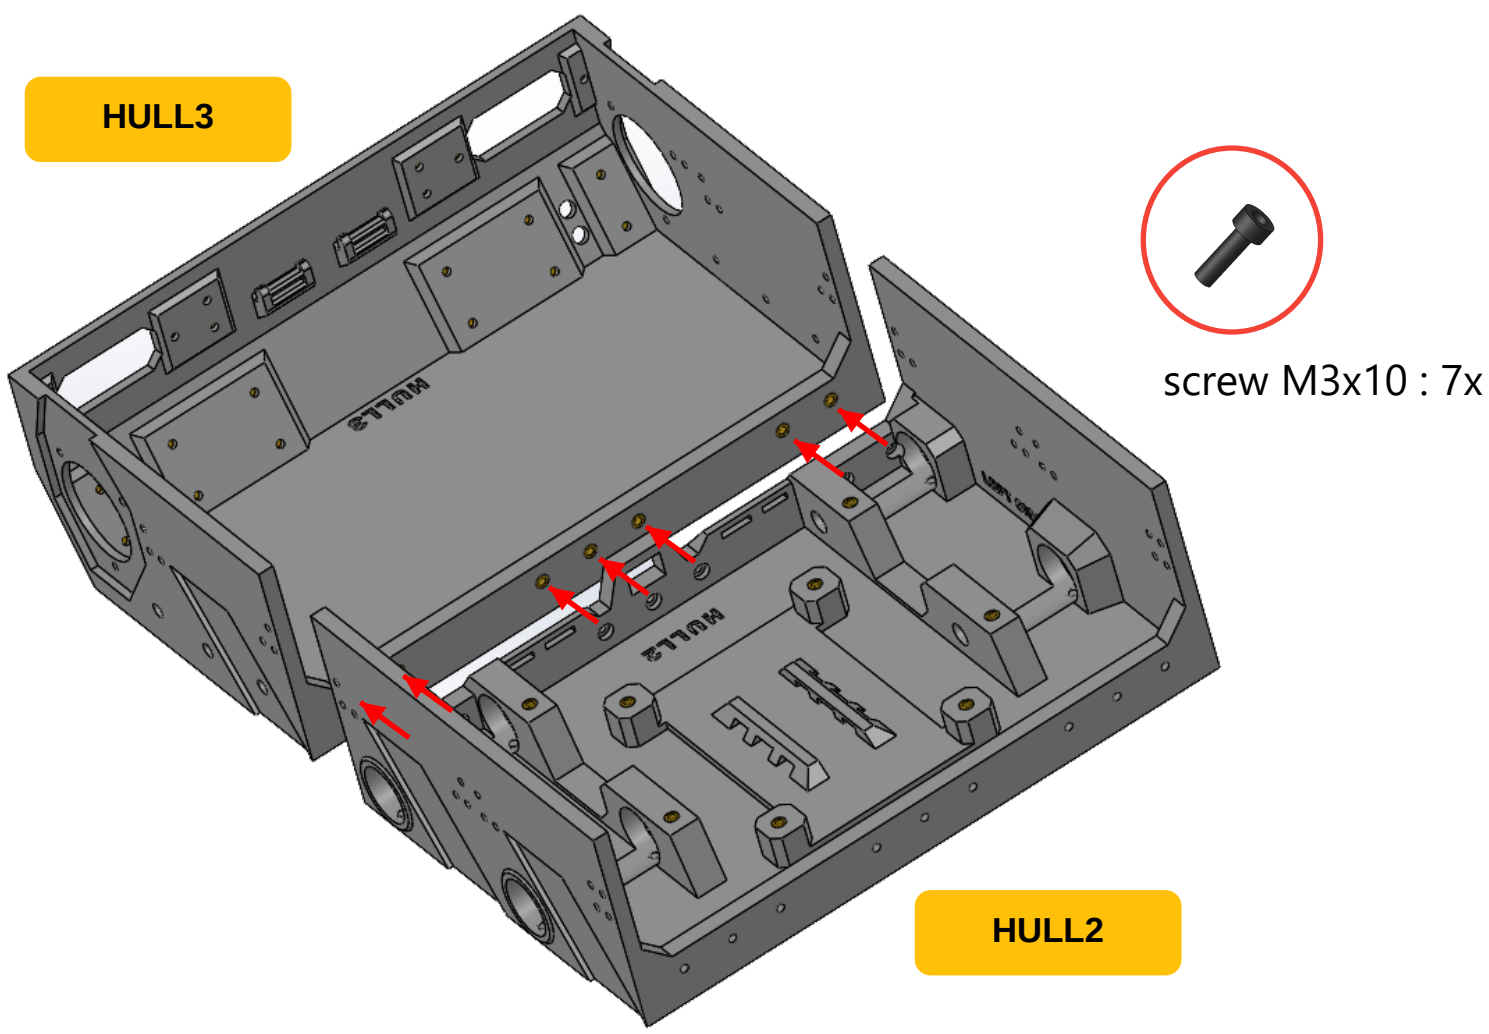

Join HULL1 with M3 screws.

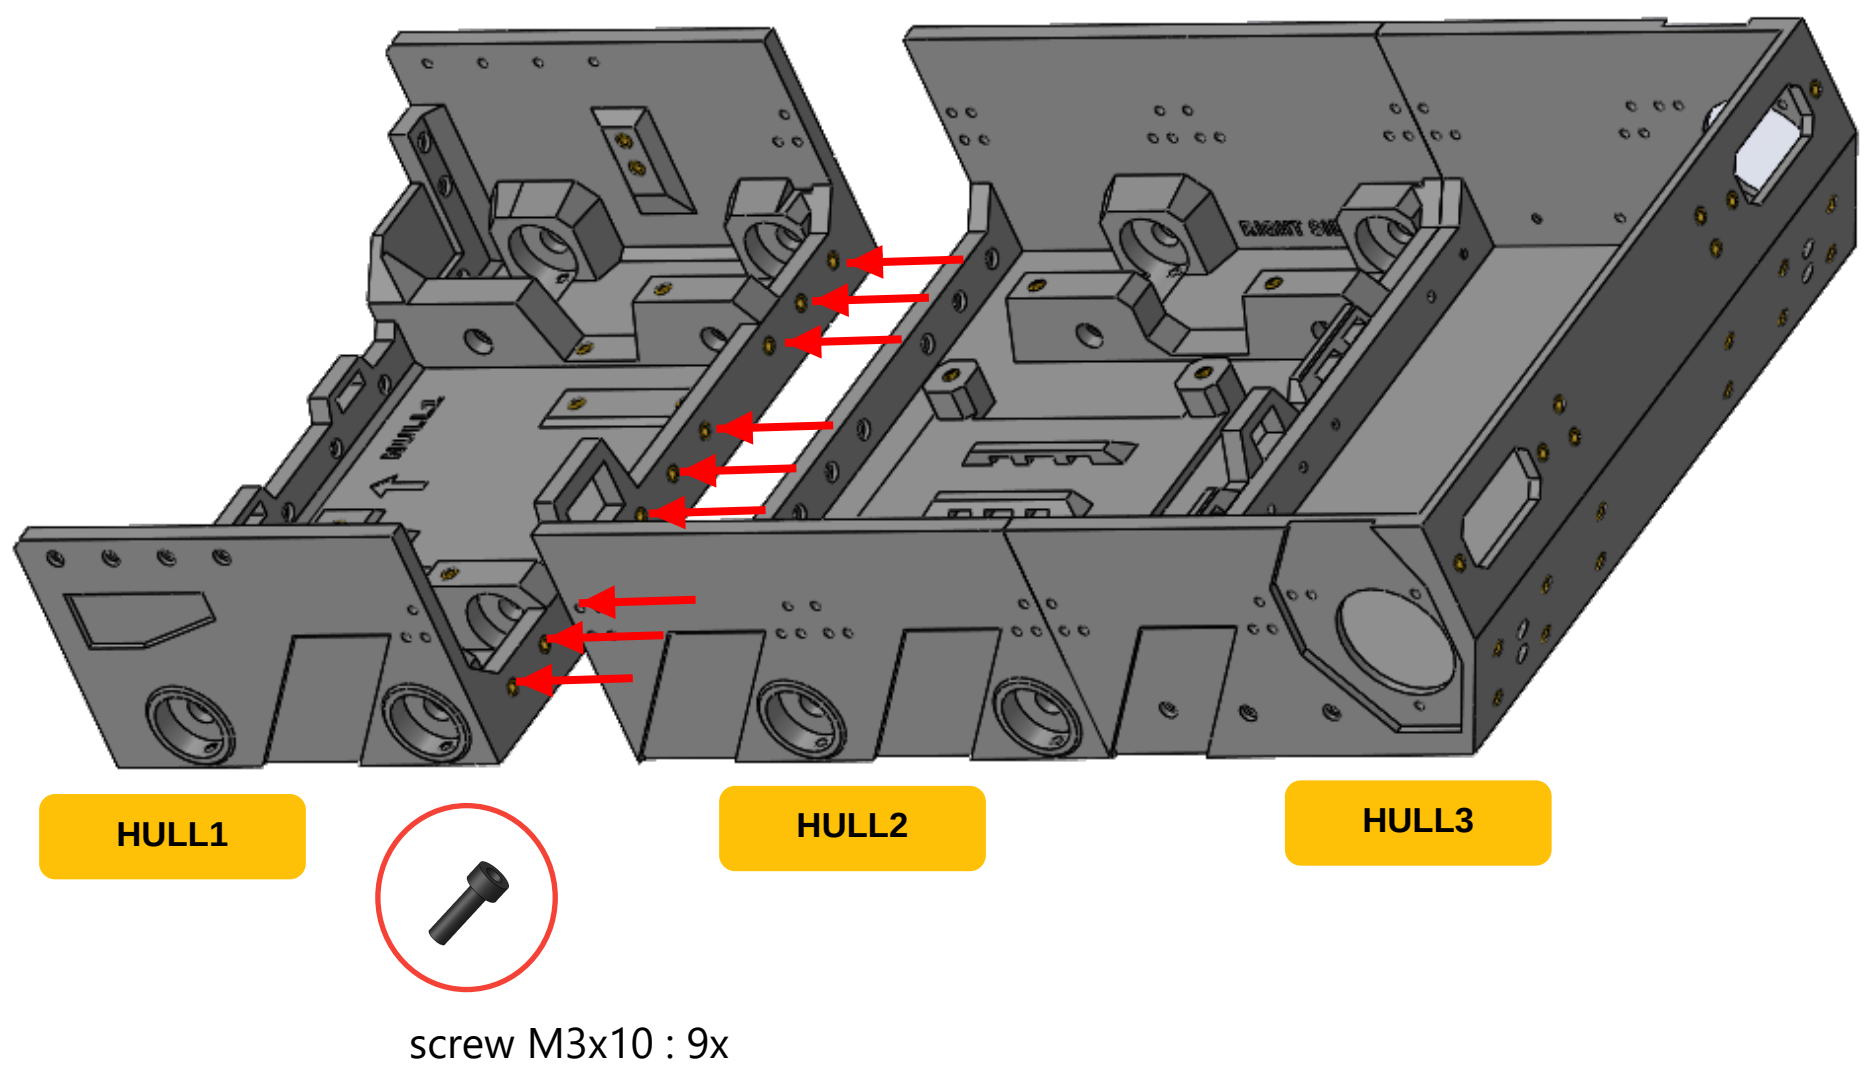


1.6 STL Parts : HULL-FRONT, HULL1, HULL2, HULL3


Join HULL-FRONT with M3 screws

You need :

 screw M3x10 : 10x

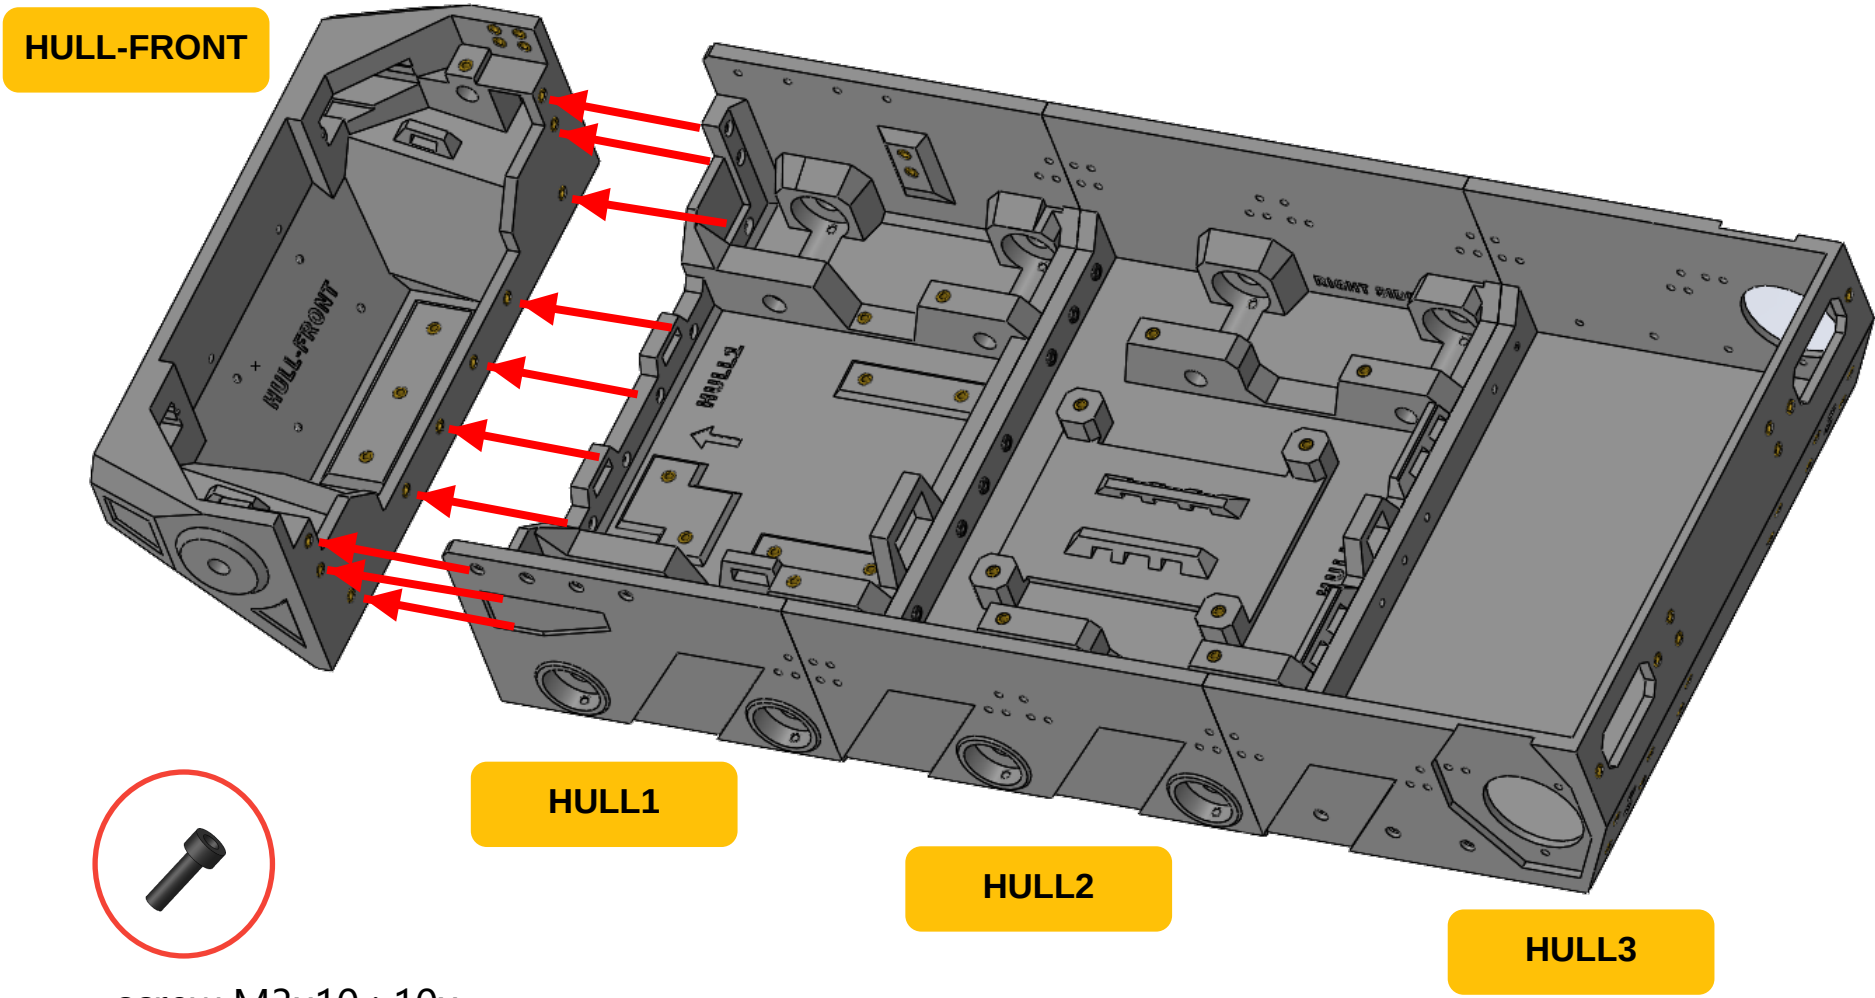

Assembly of Bottom Hull

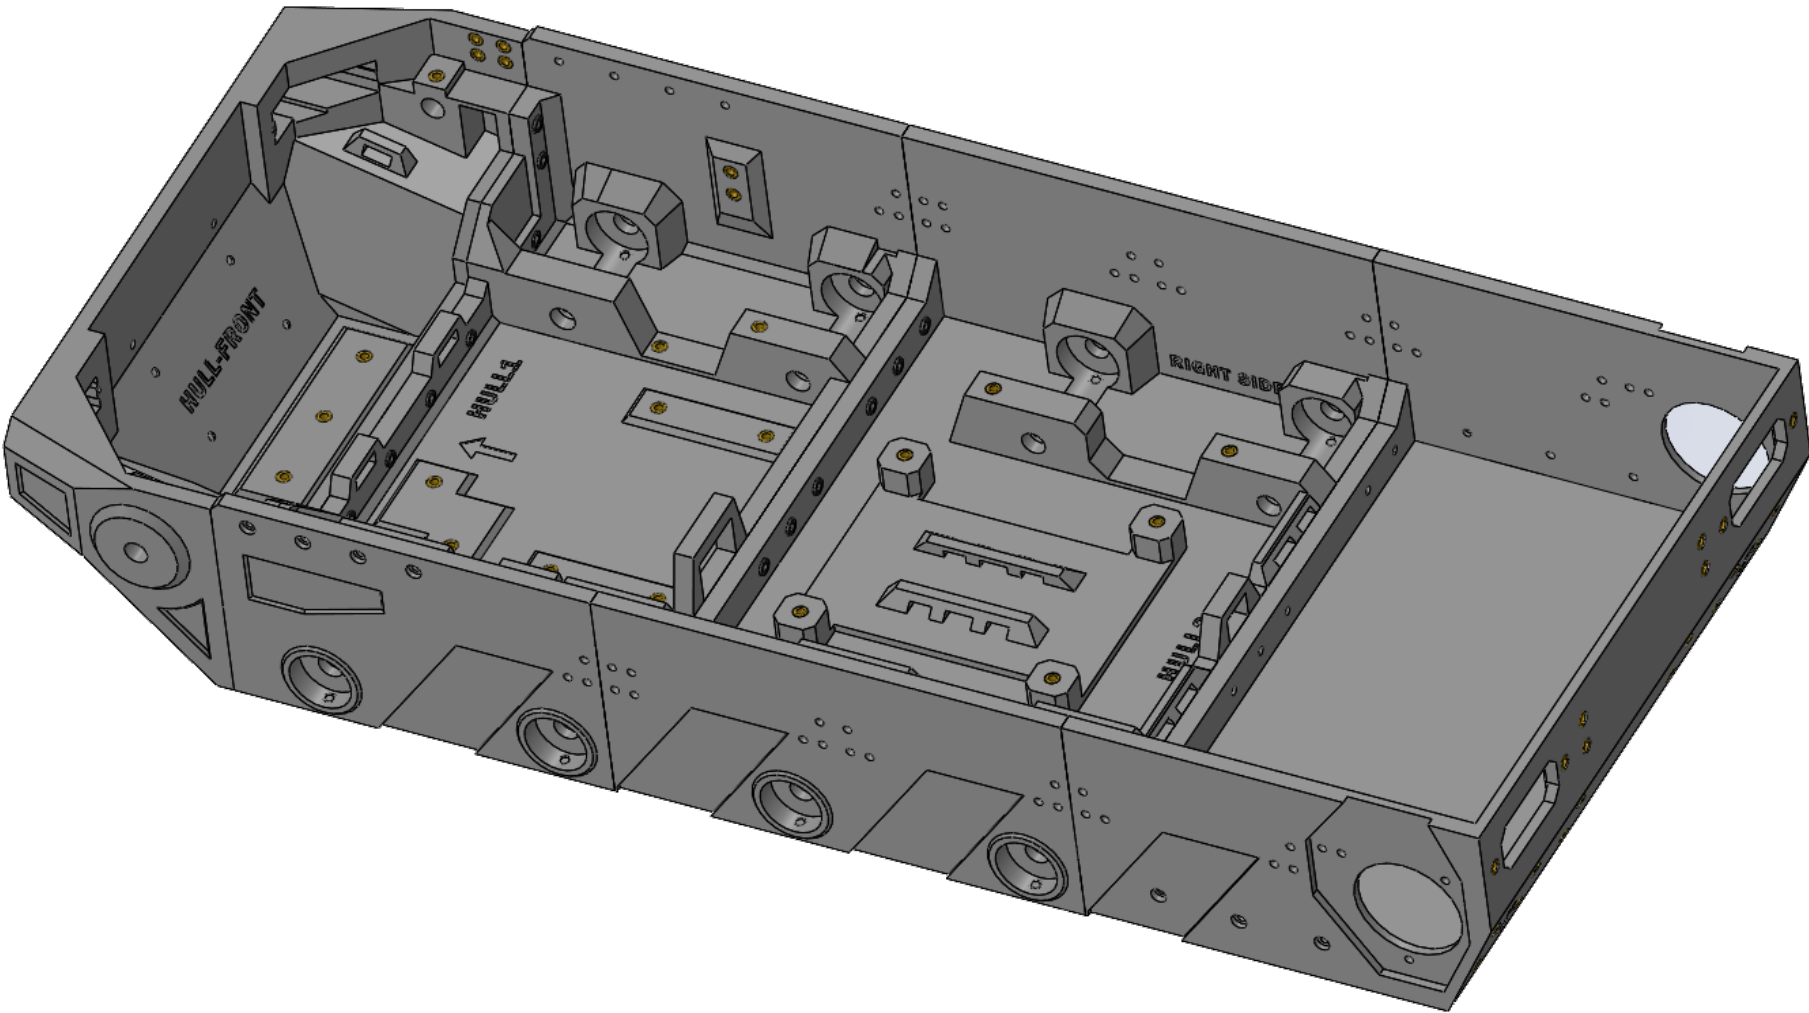




2.1

Inserting bearings into assembly

Join HULL2 and HULL3 with screws.

You need :

 bearings 22x7x8 : 24 pieces

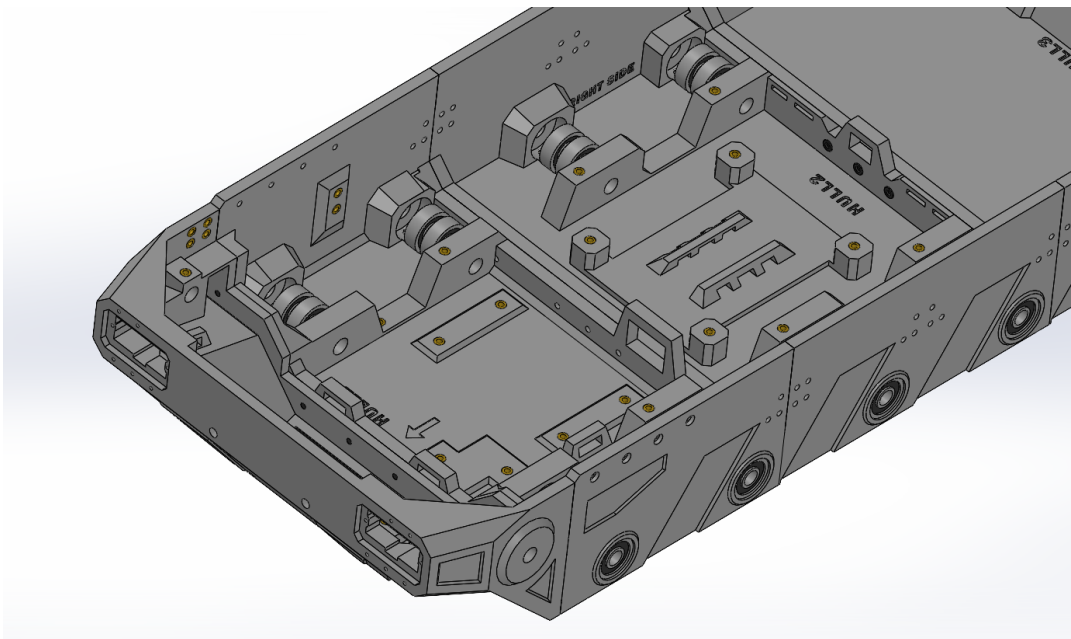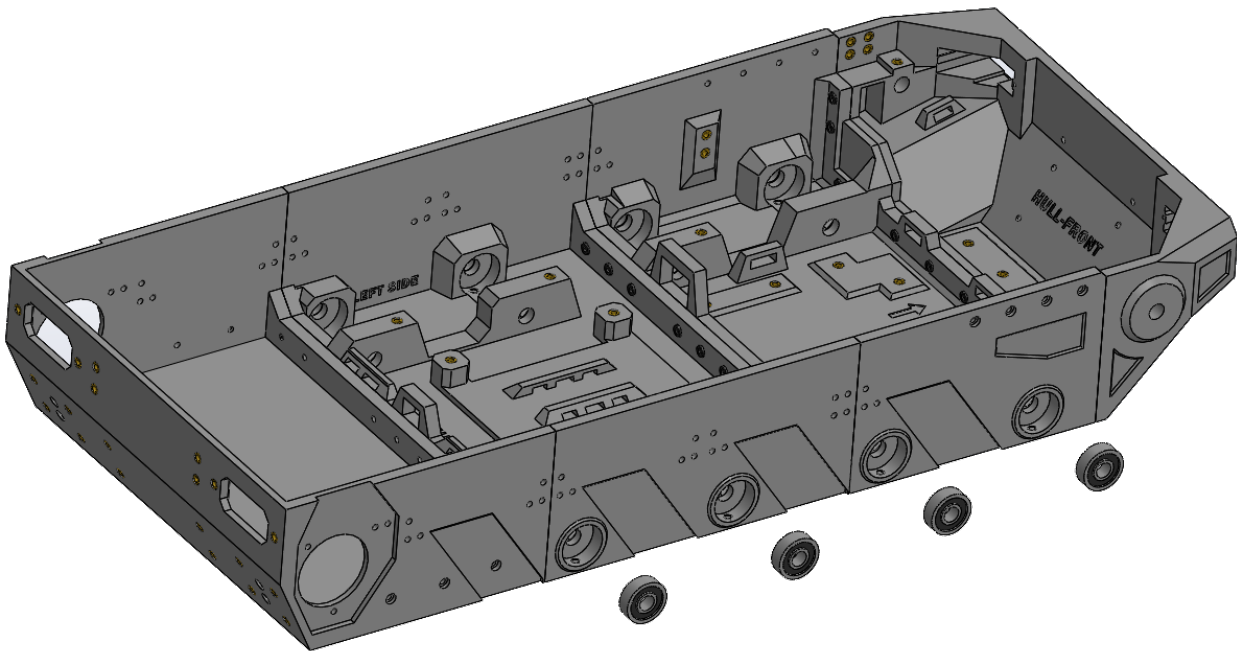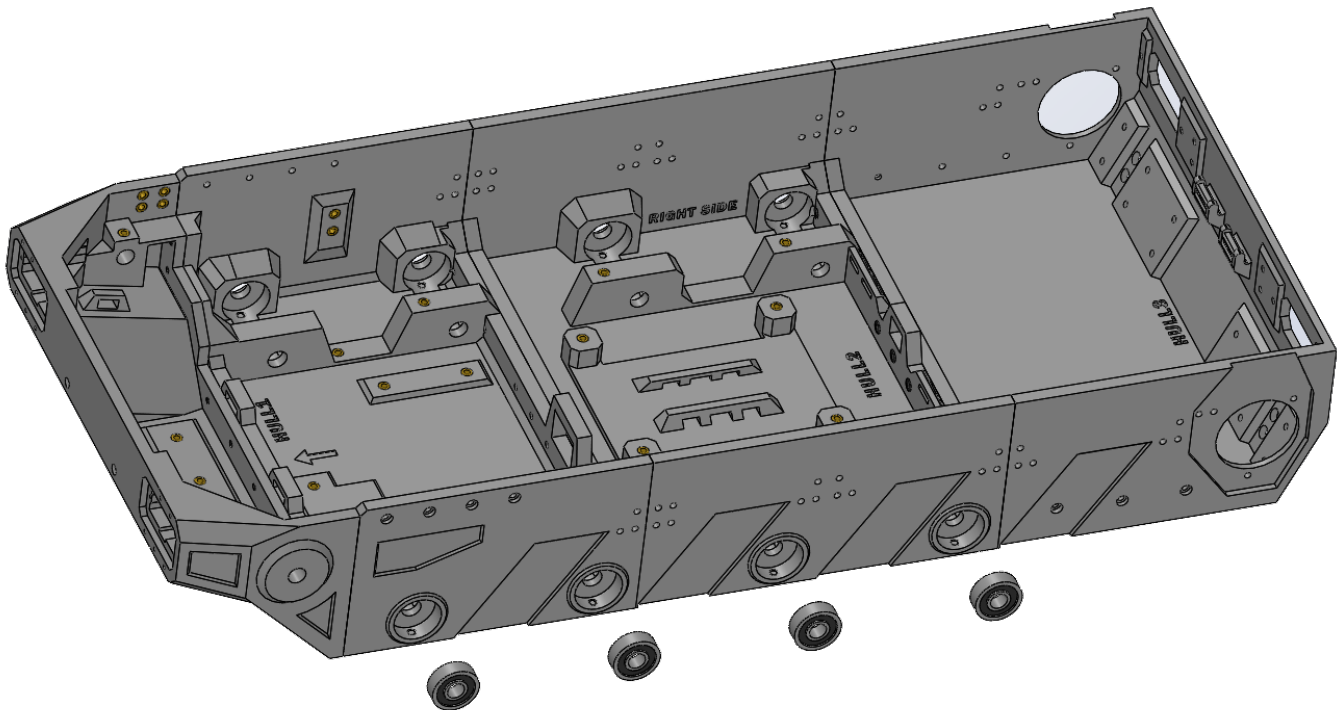



6 STL Parts : HULL1. HULL2, HULL3

You need :





screw M3x10 : 16x


Join HULL2 and HULL3 with screws.

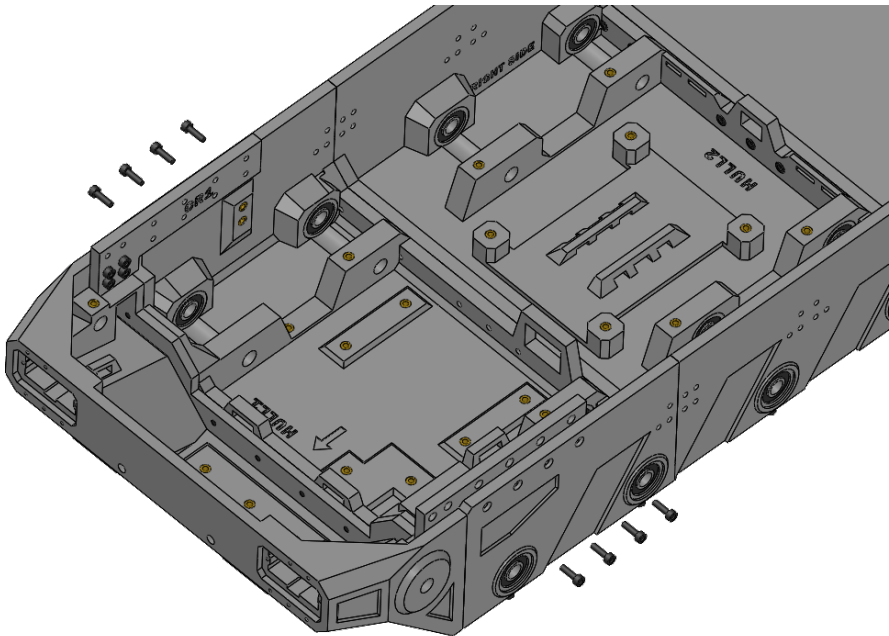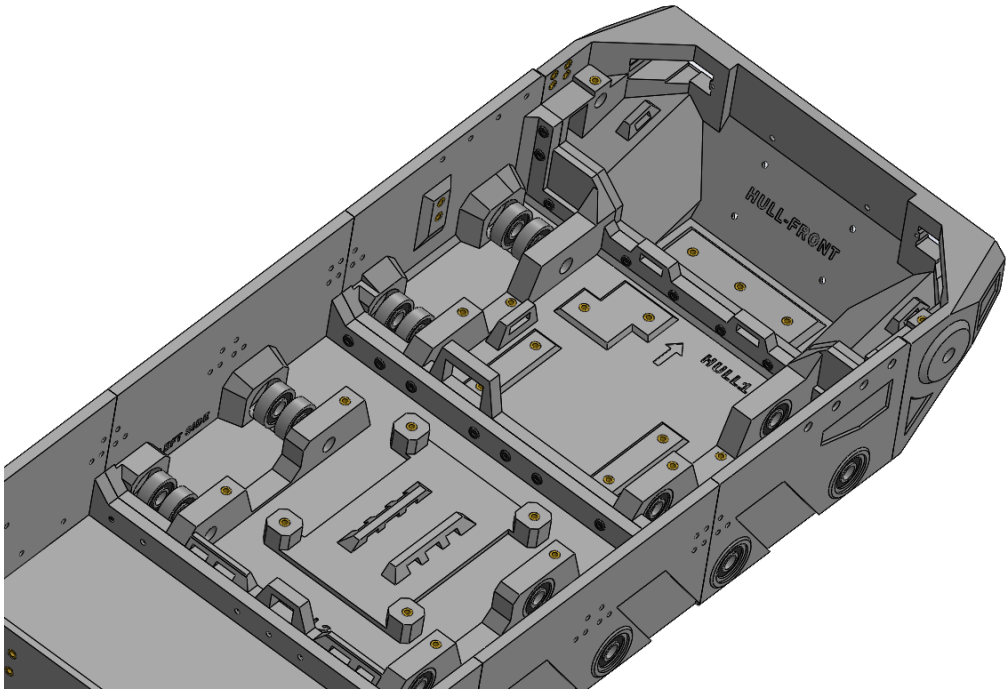



screw M3x6 : xx


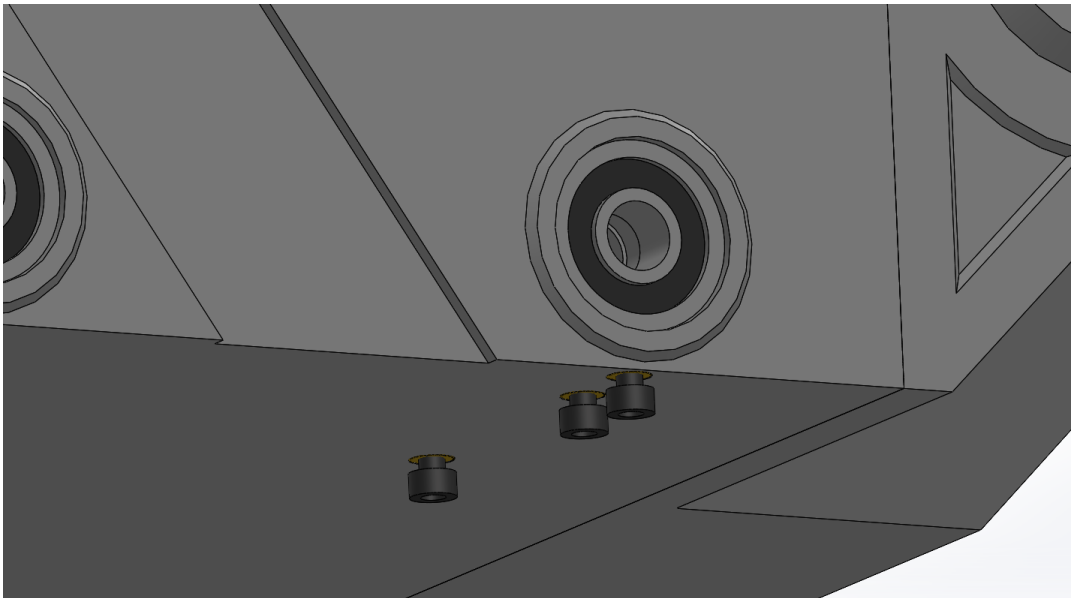


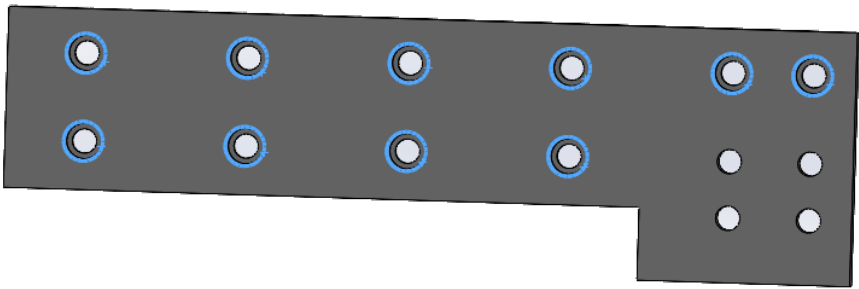

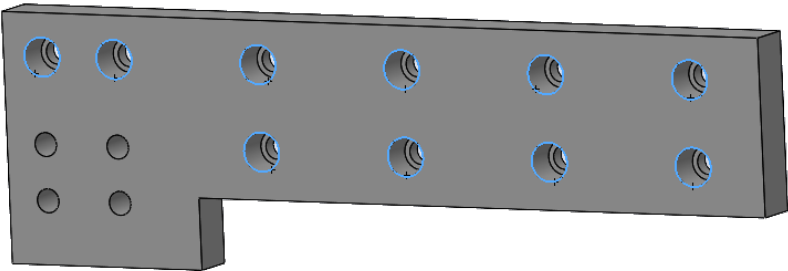


screw M3x8 : xx

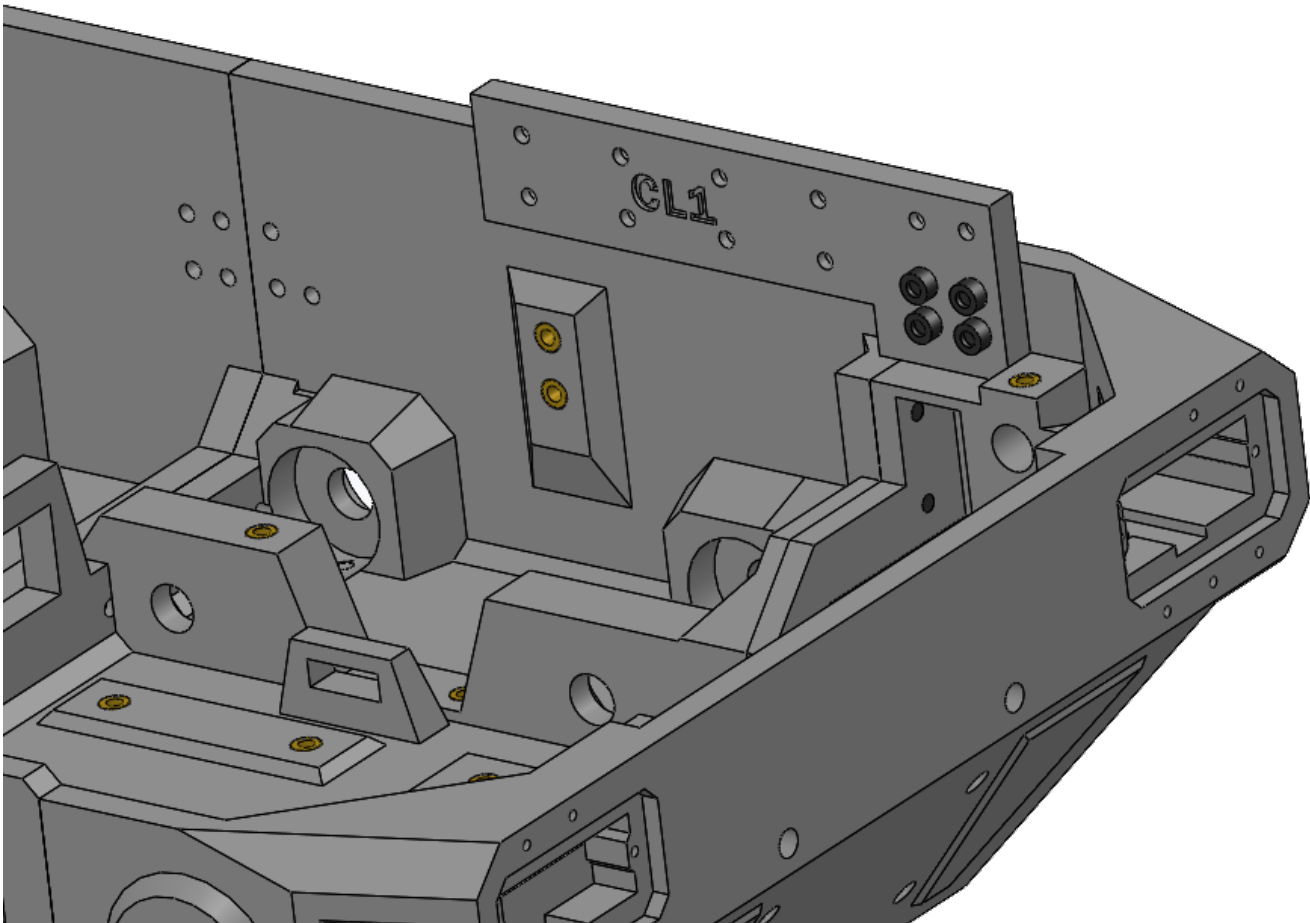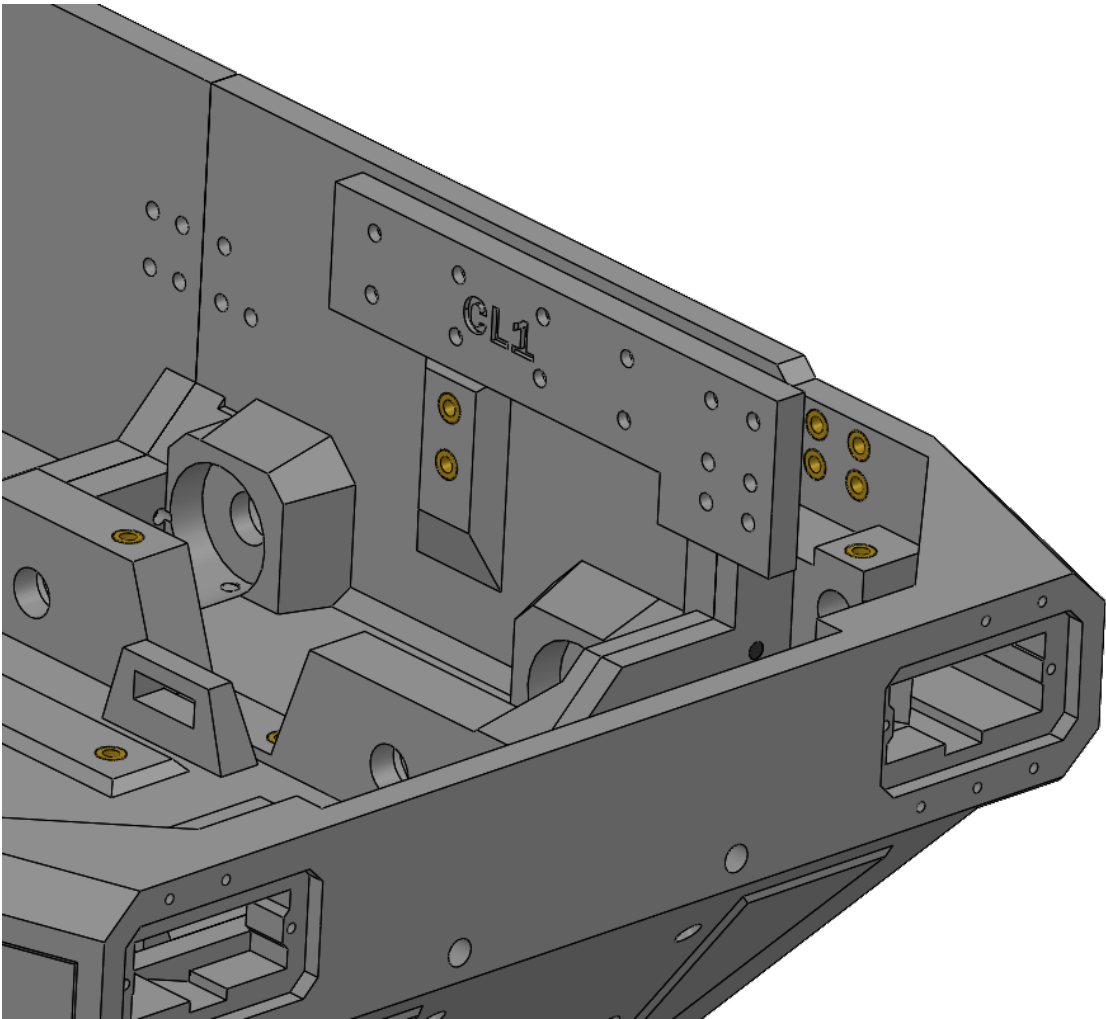


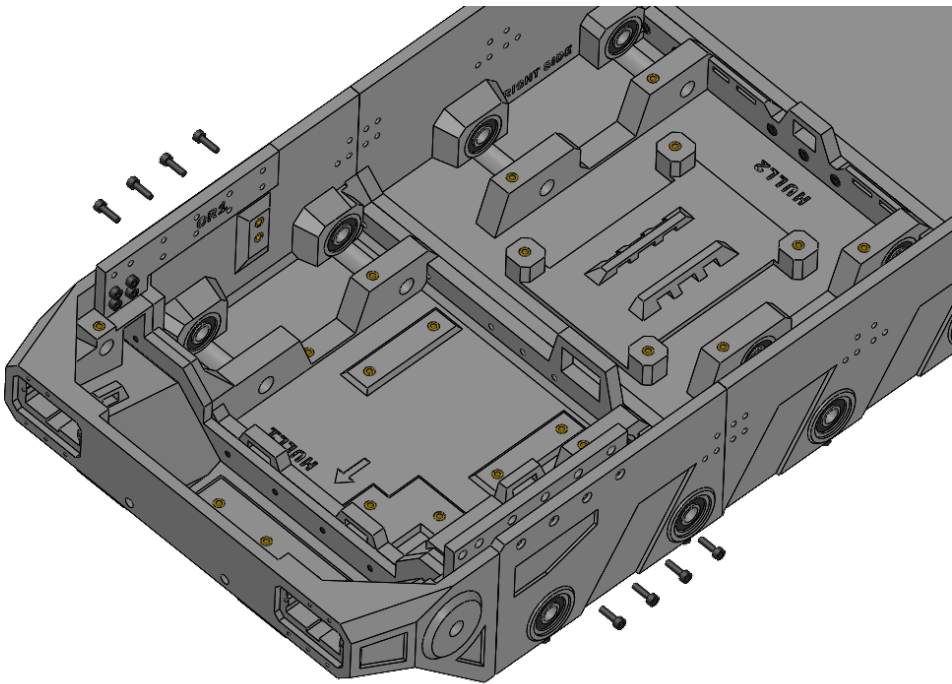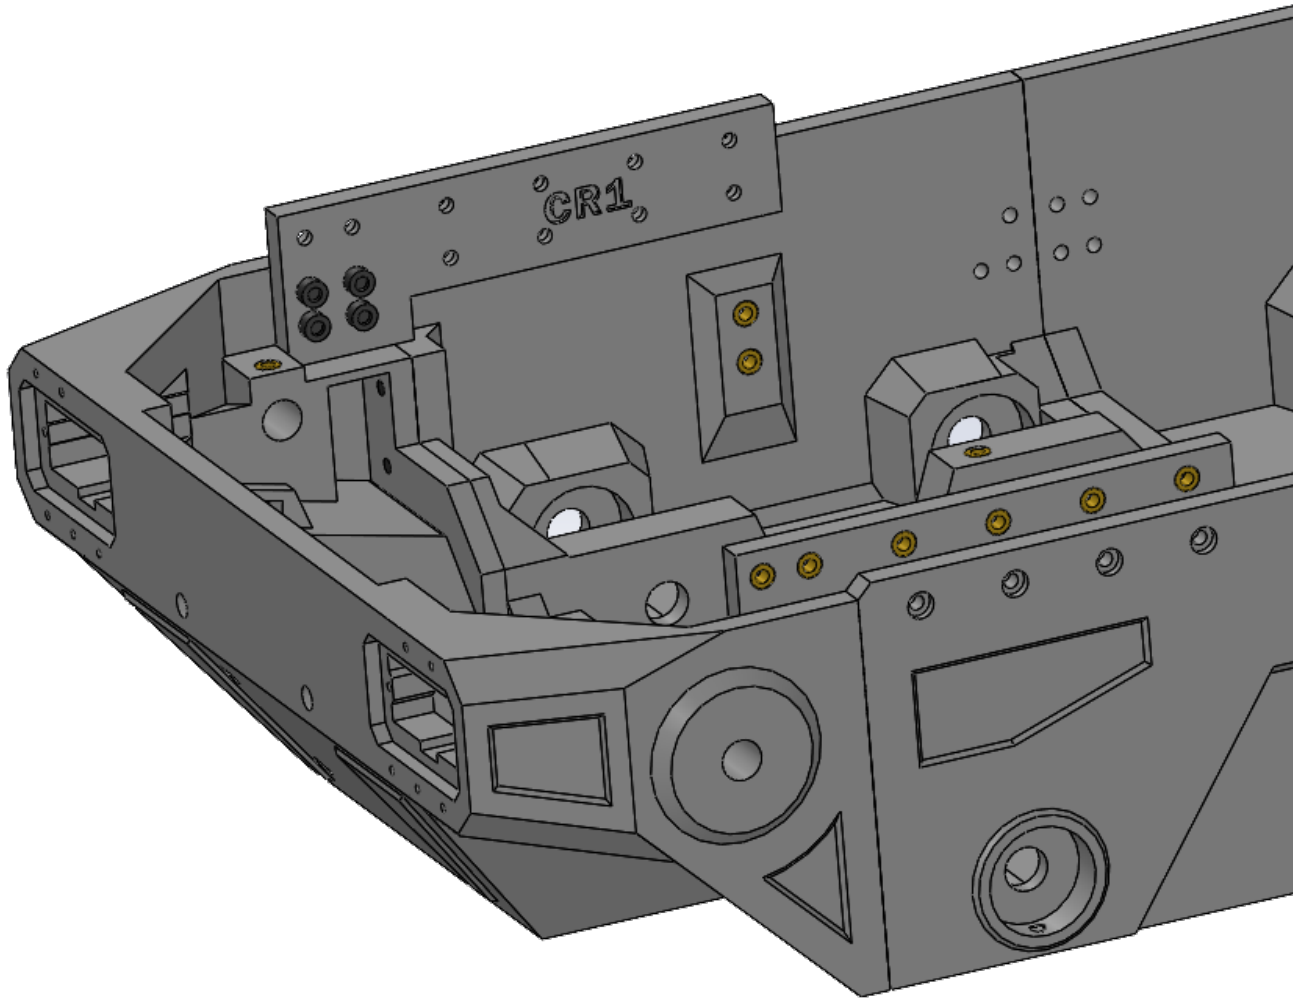


screw M3x10 : xx



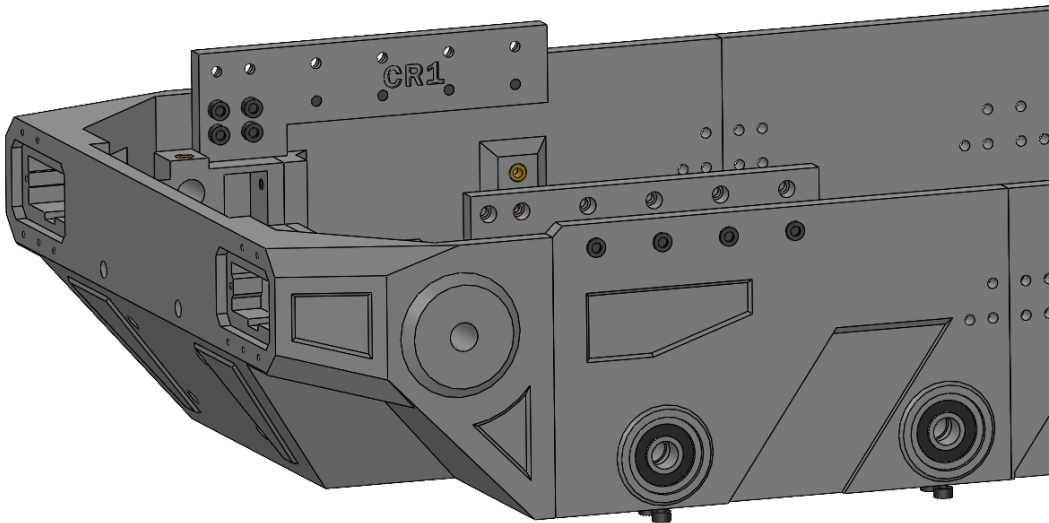




screw M3x8 : xx

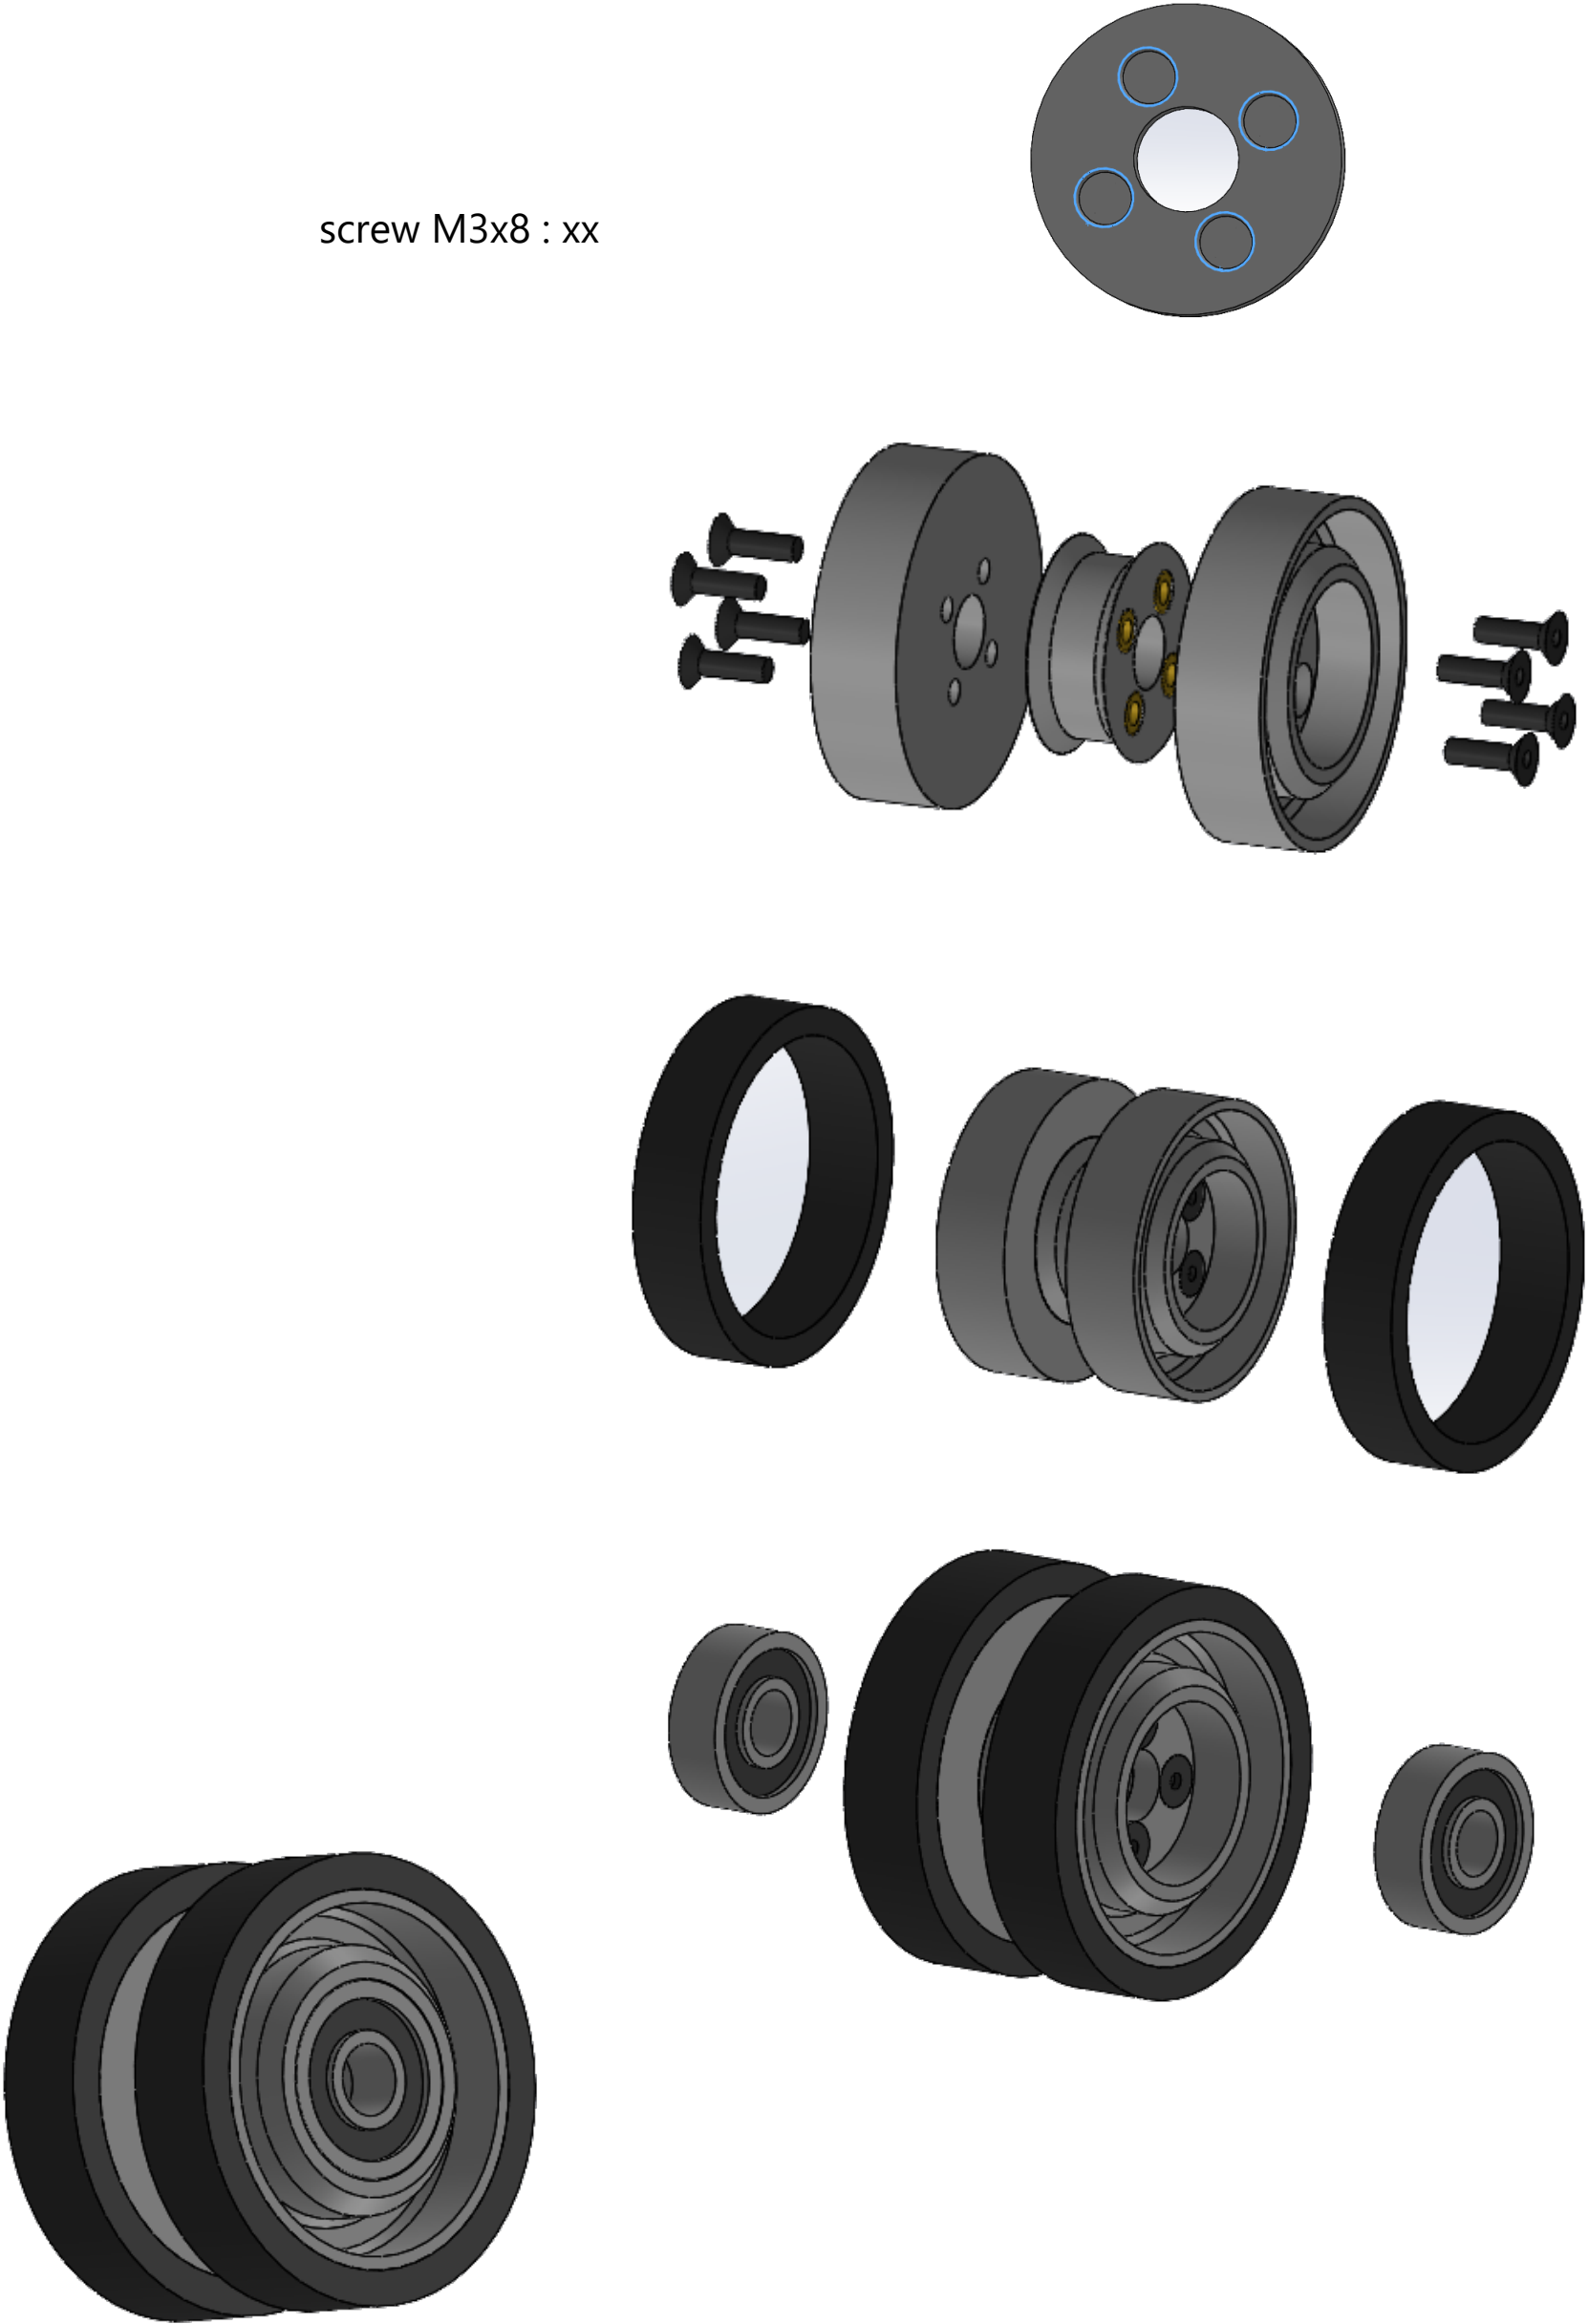




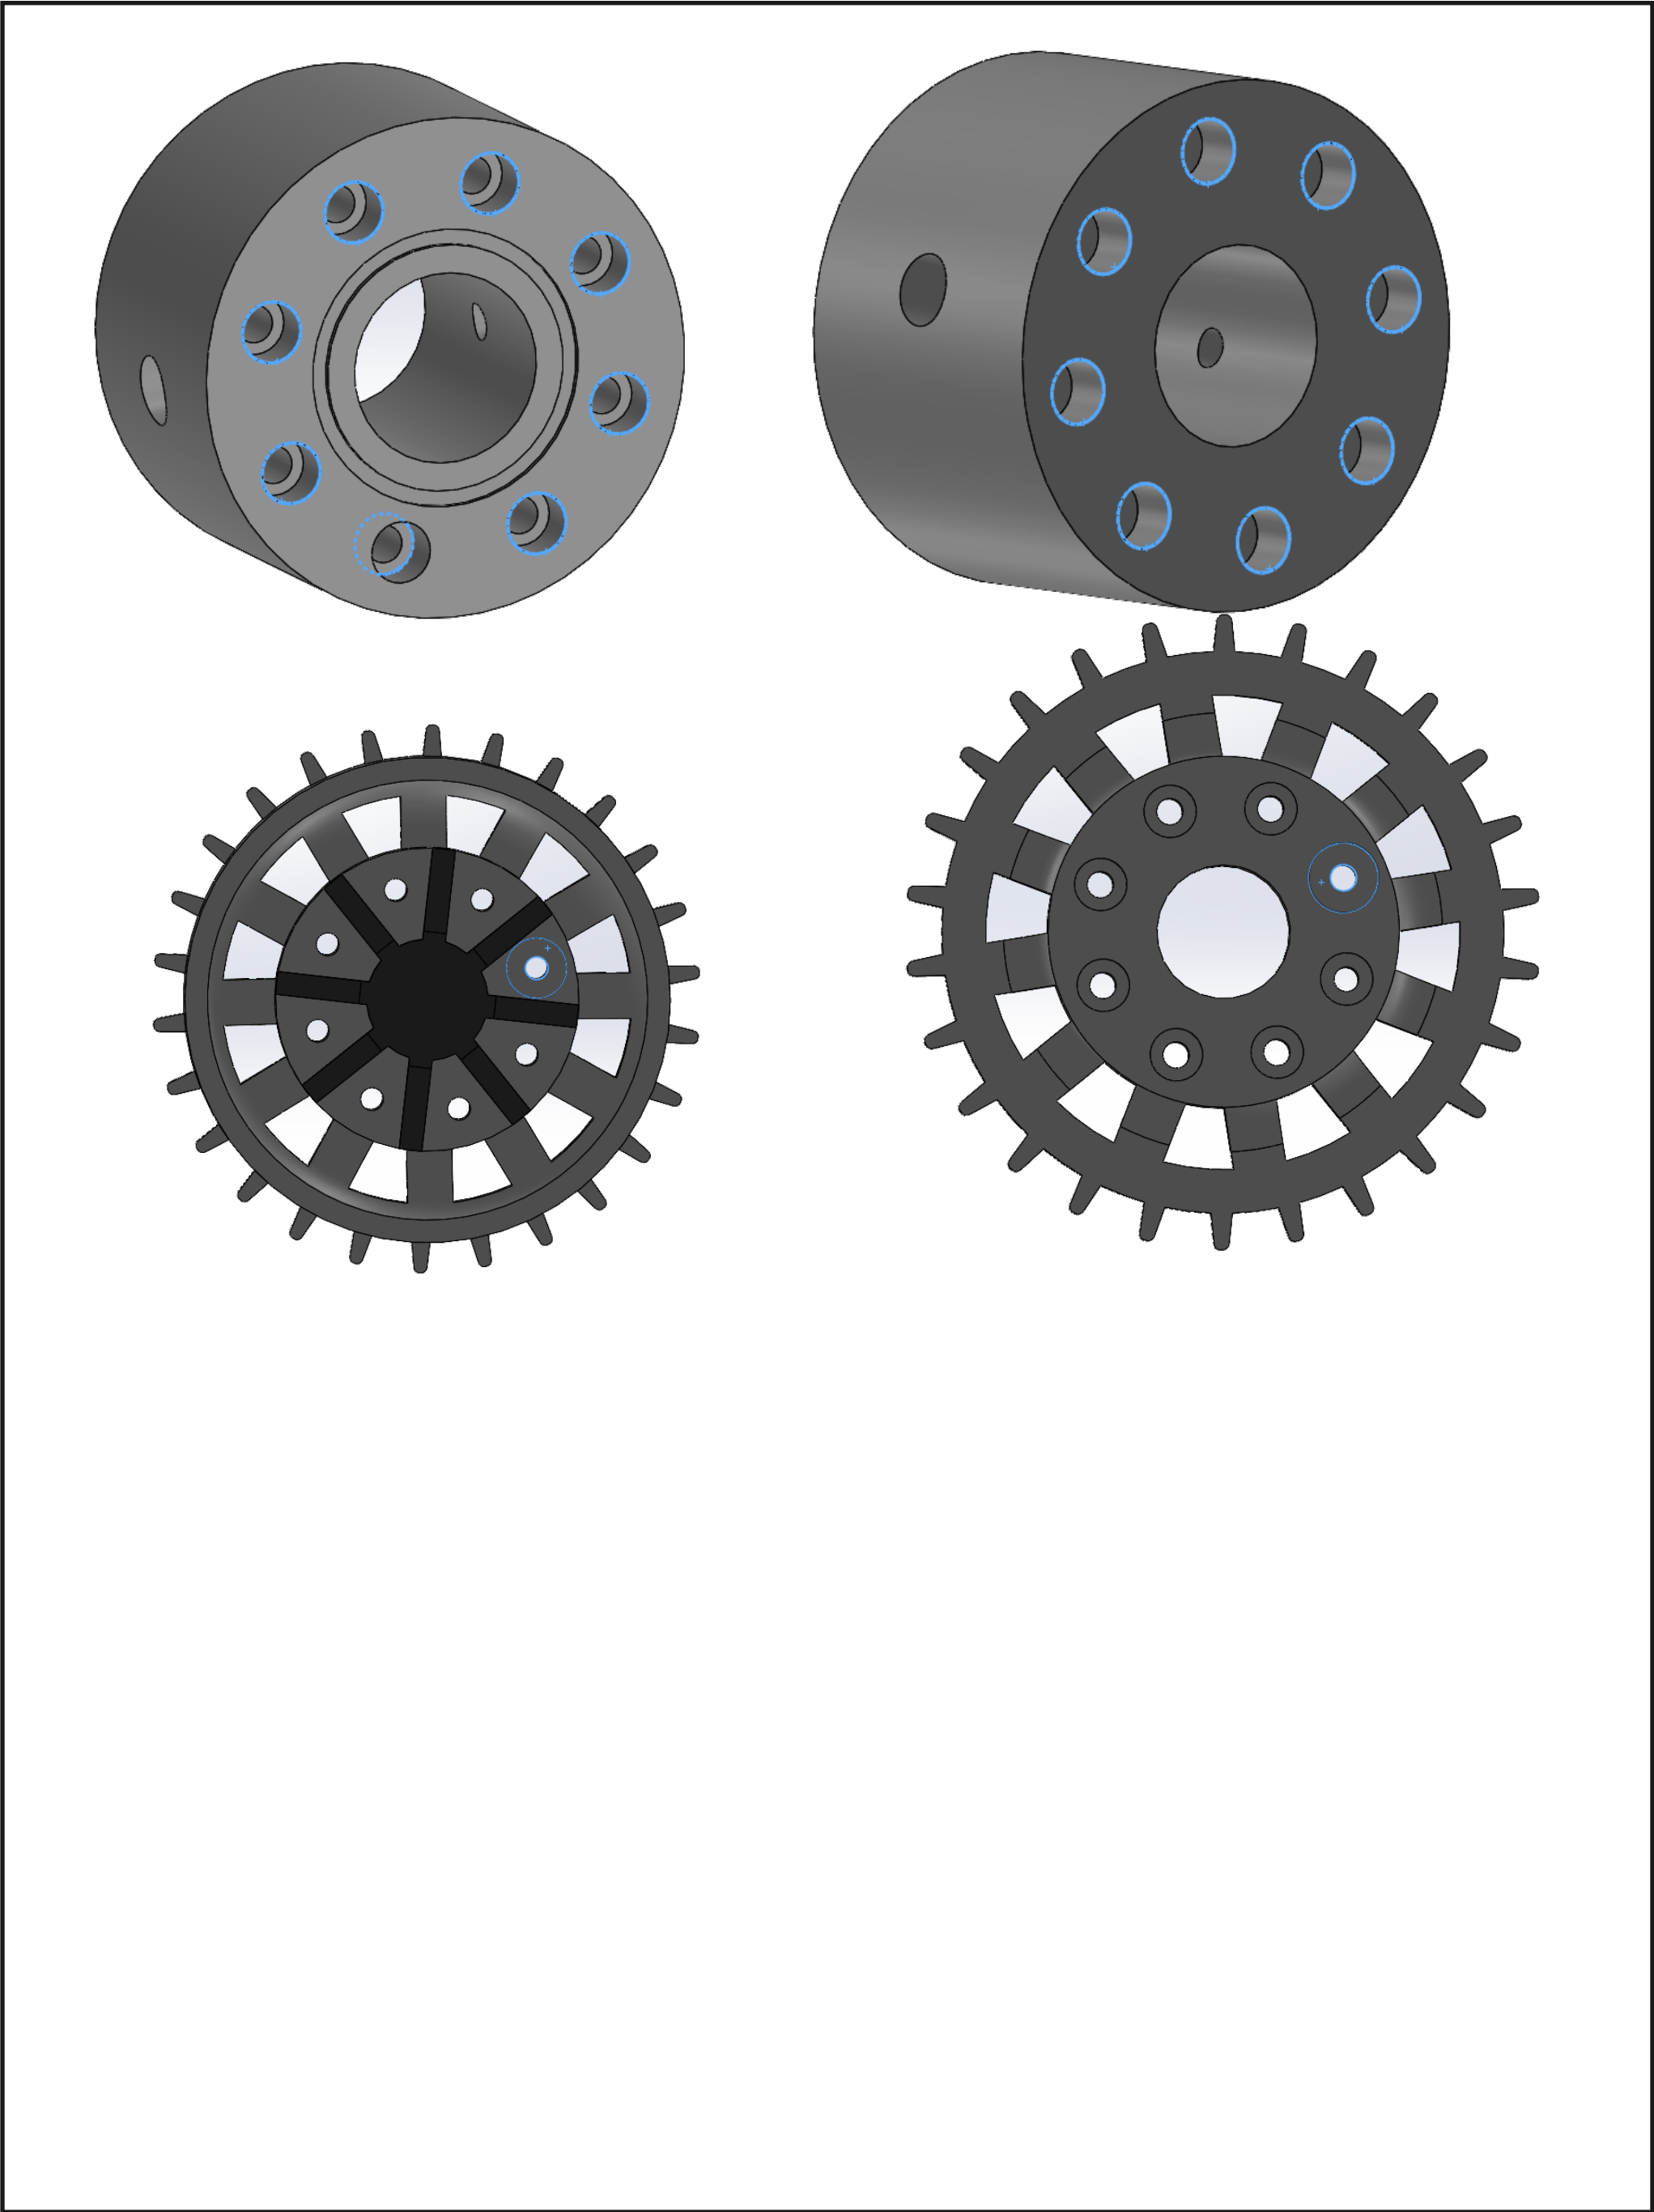





screw M3x12 : xx

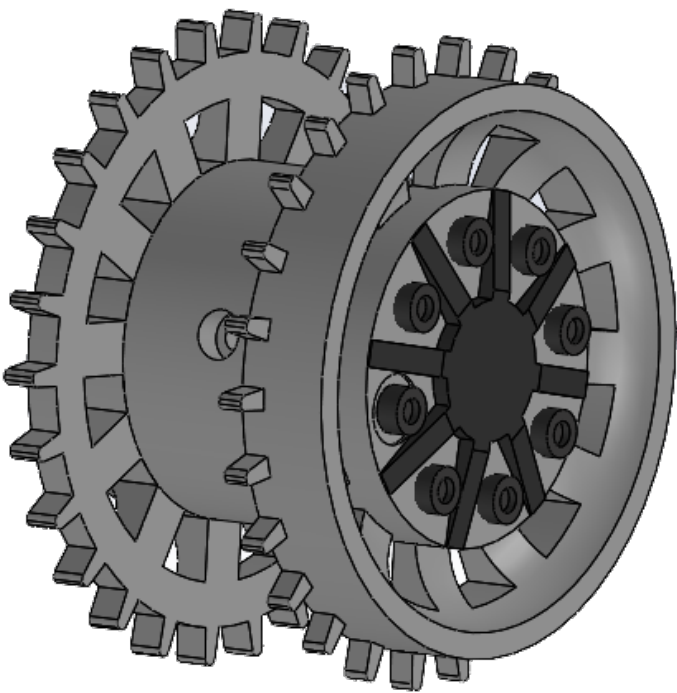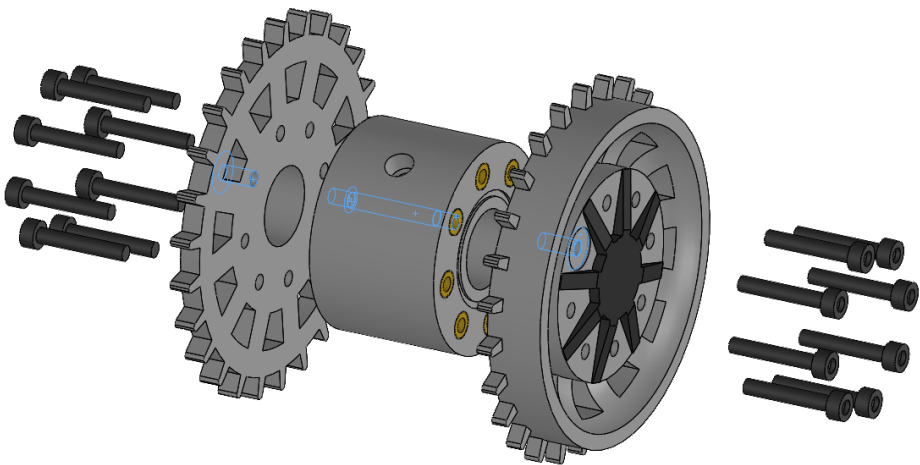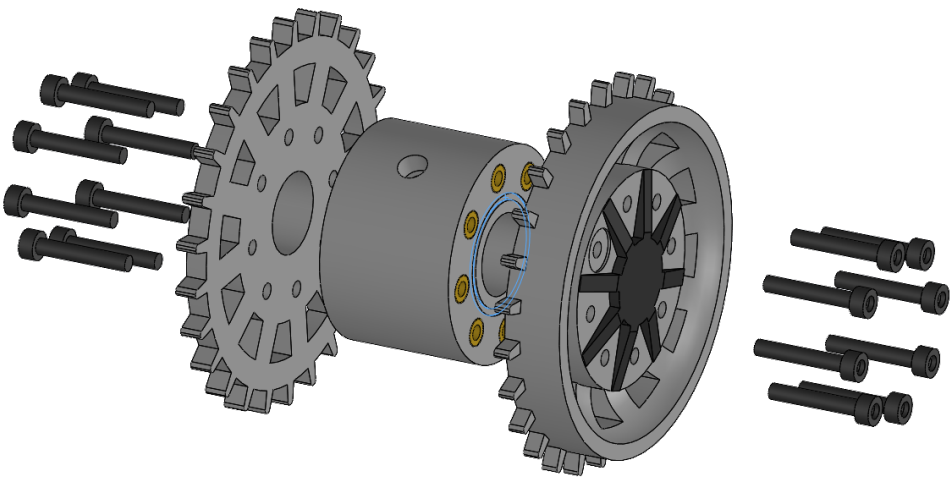

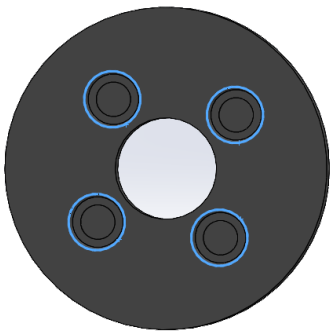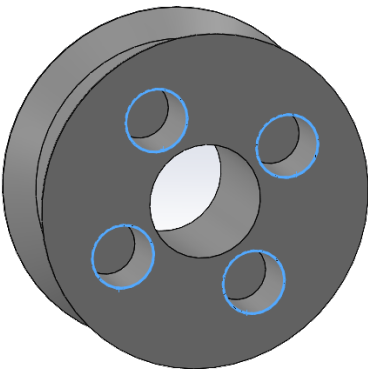




screw M3x8 : xx

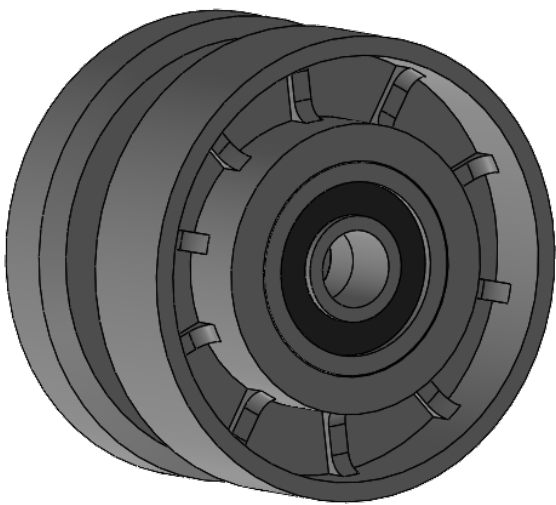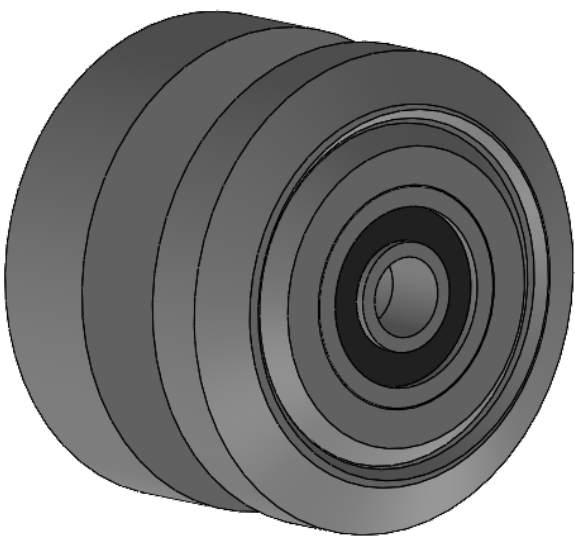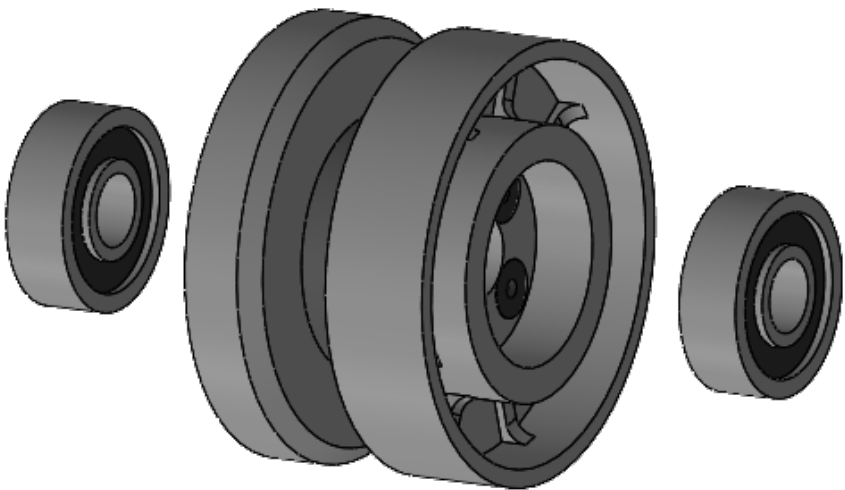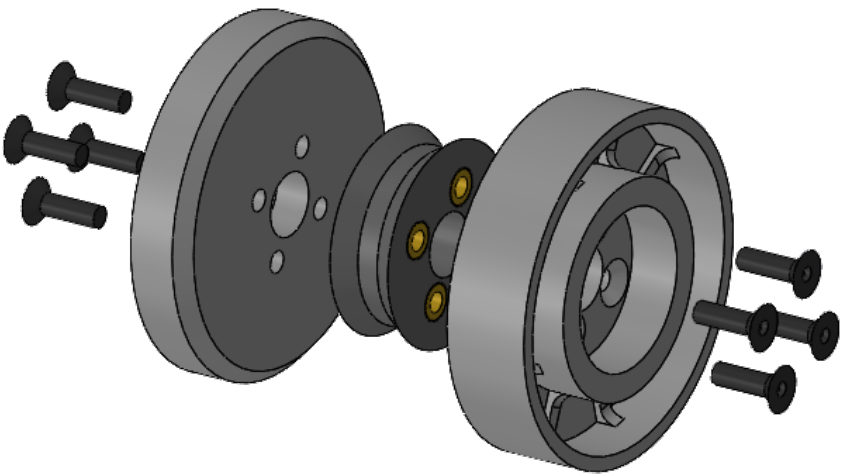

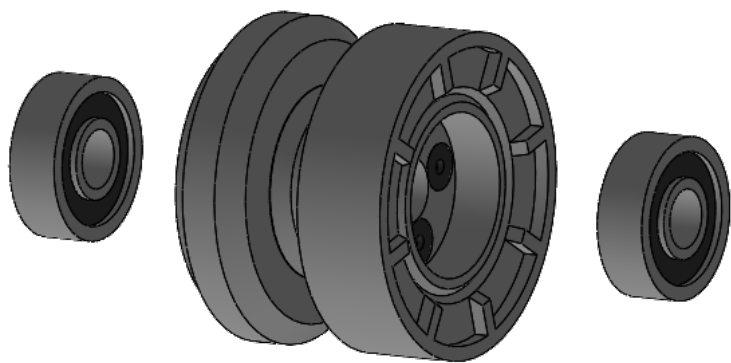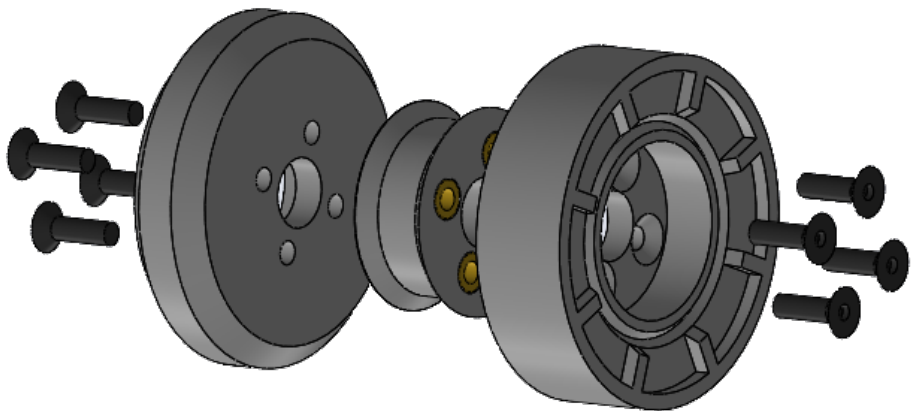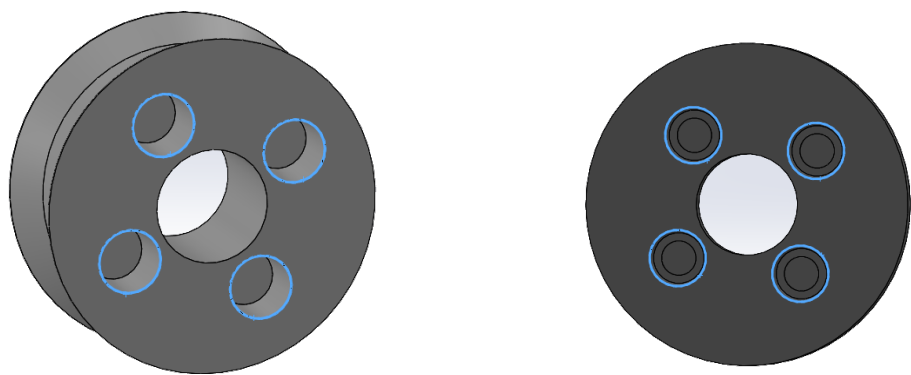


screw M3x8 : xx

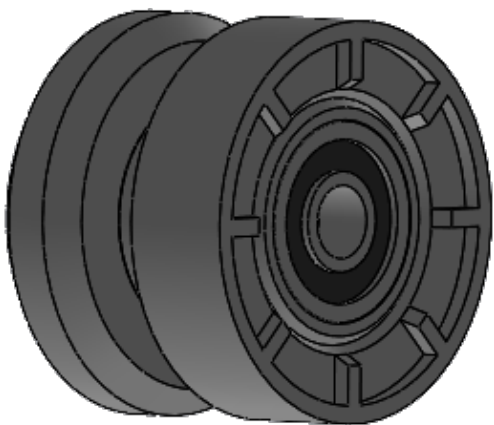


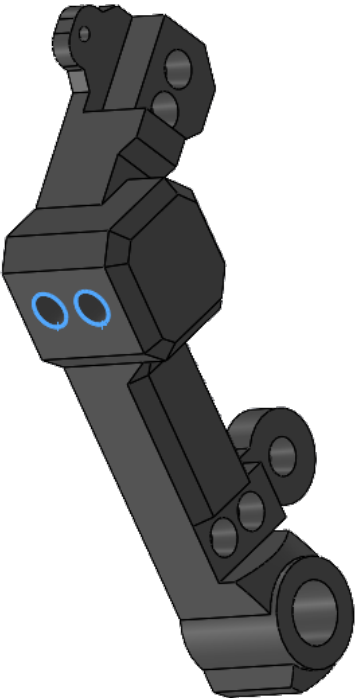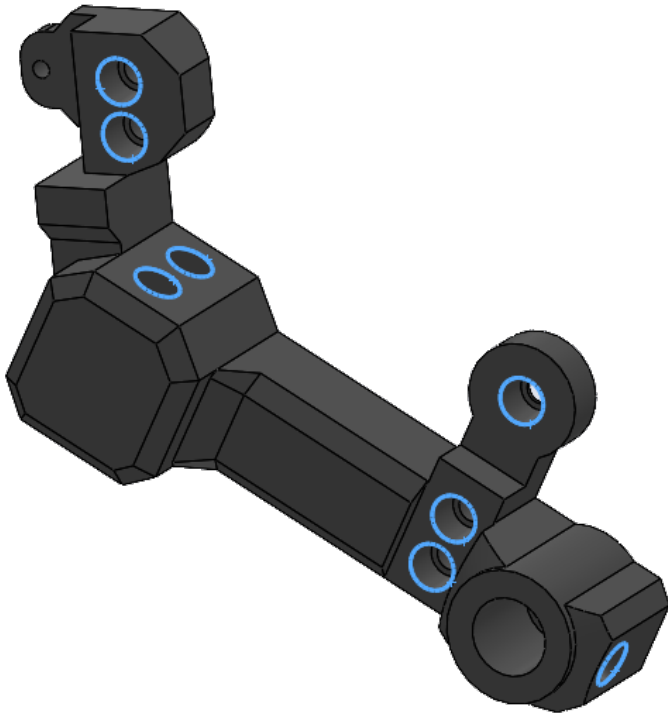



screw M3x10 : xx

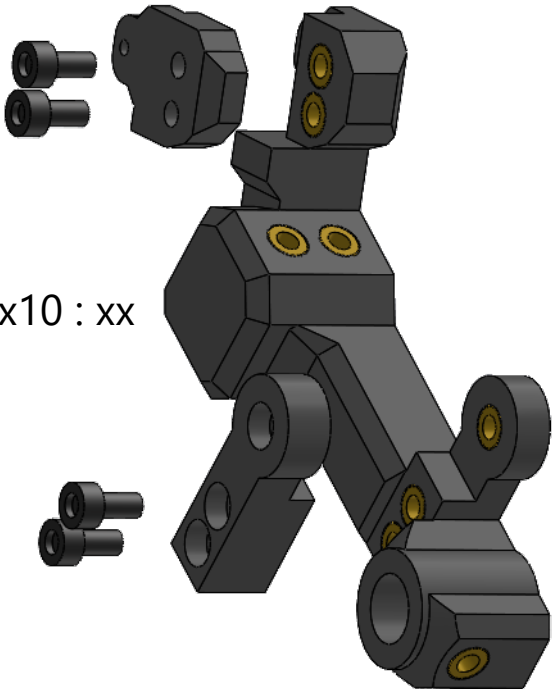


screw M3x6 : xx

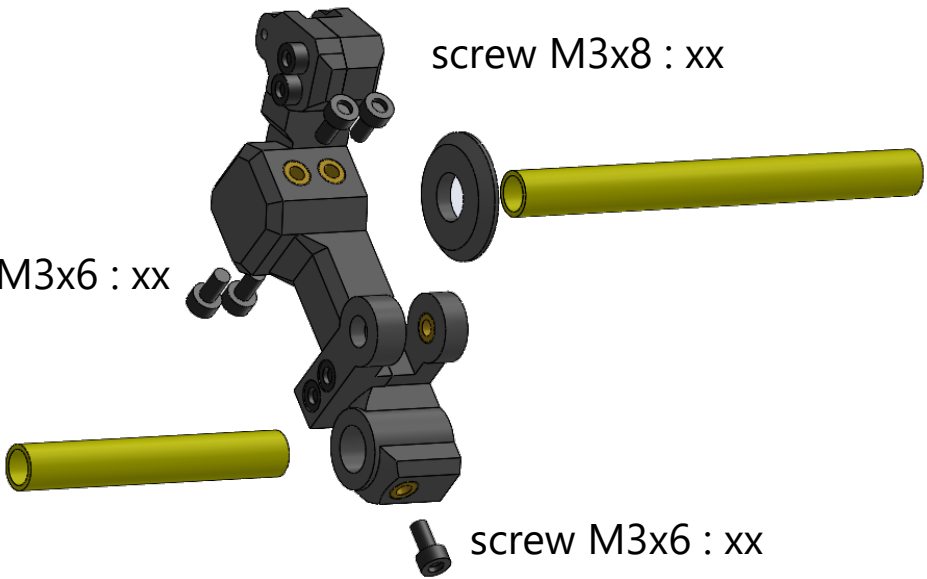

screw M3x6 : xx

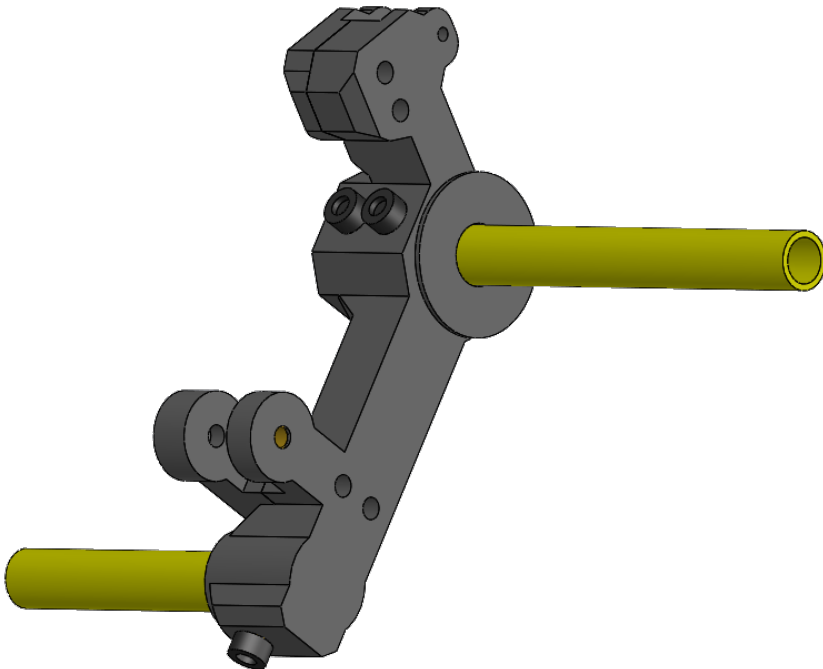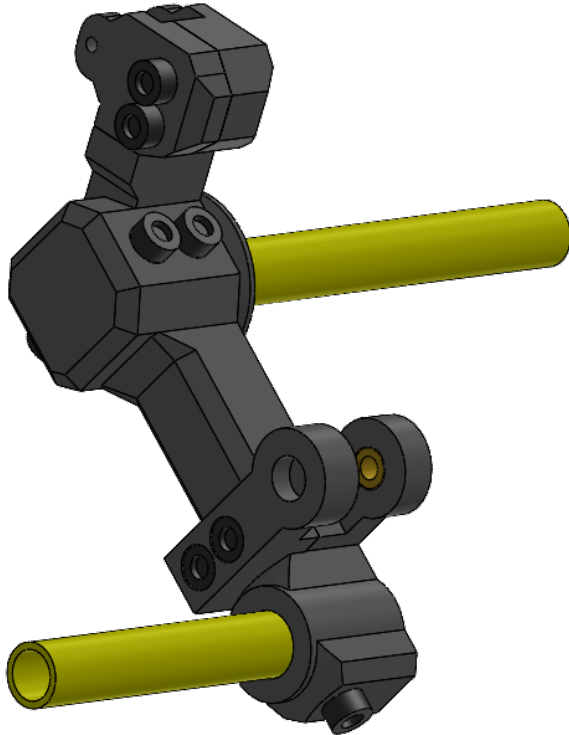


TiahloP2



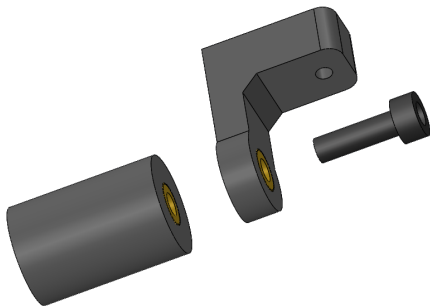




screw M3x10 : xx

screw M2x14 : xx

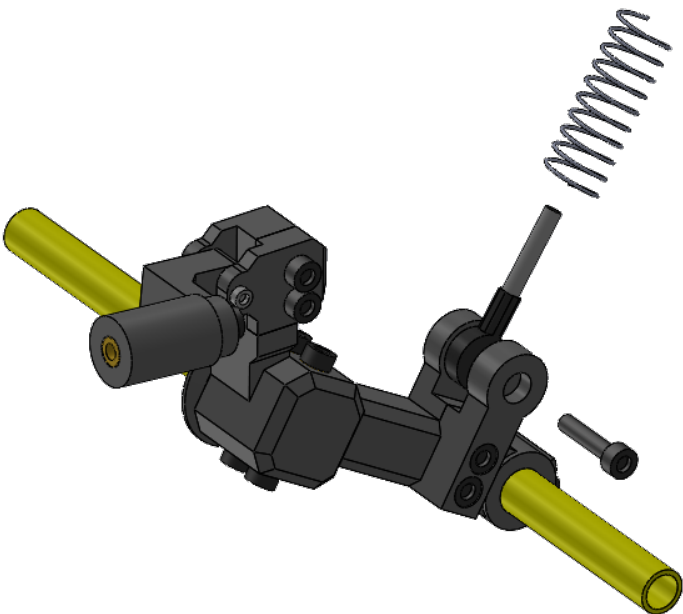


screw M3x14 : xx

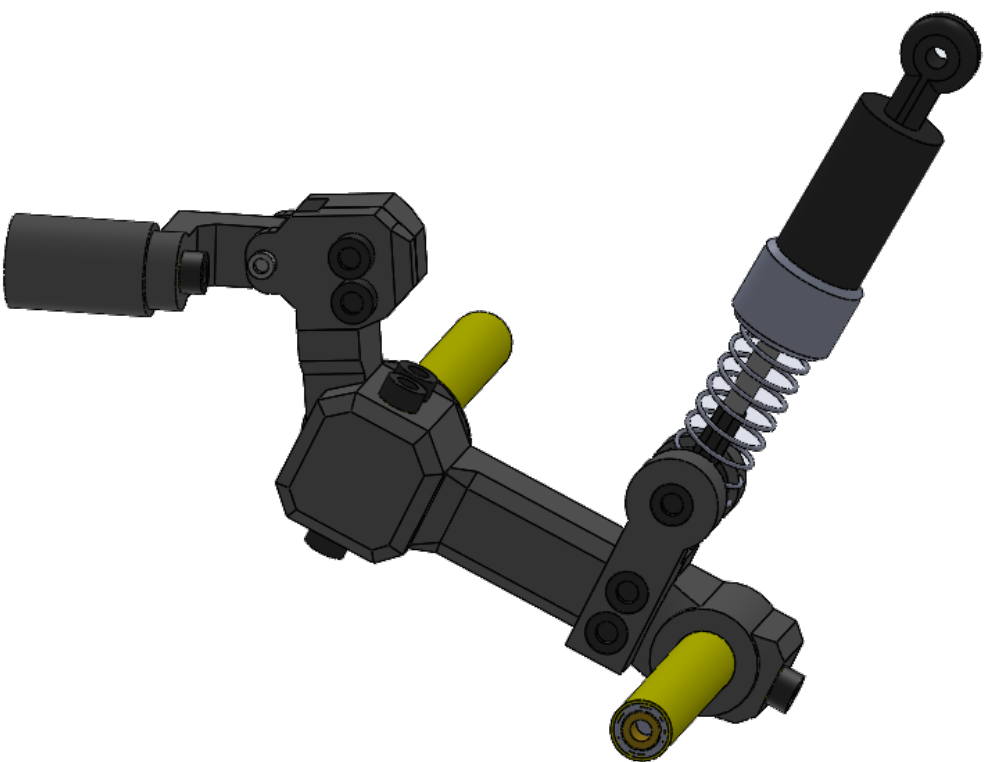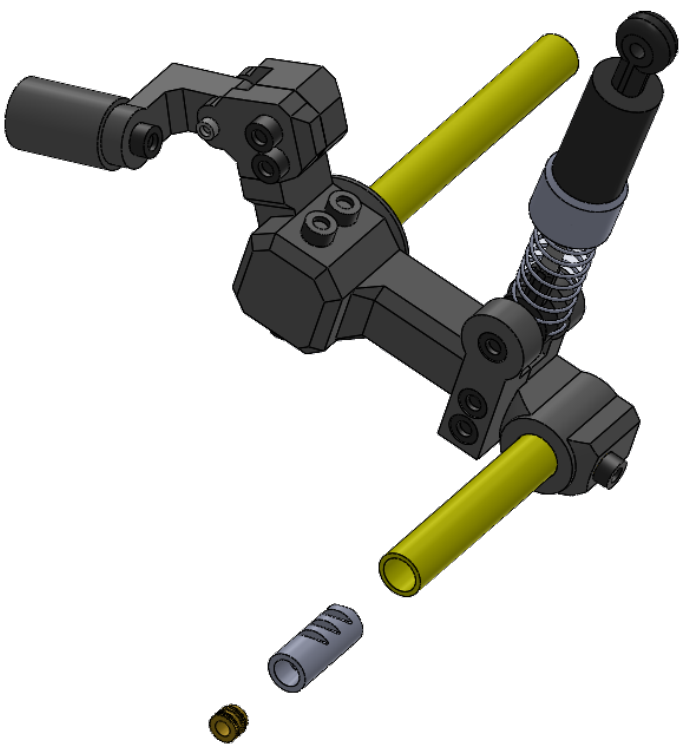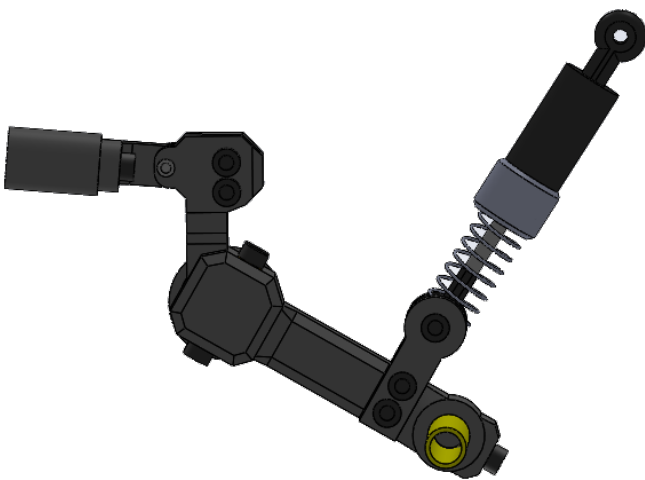


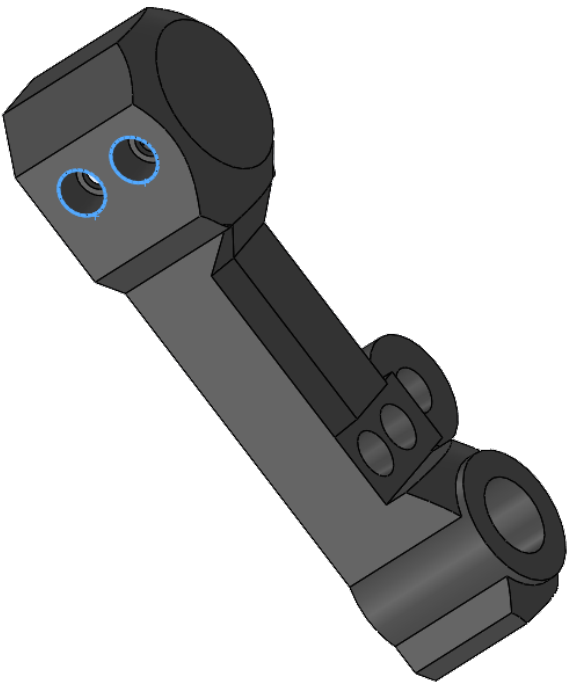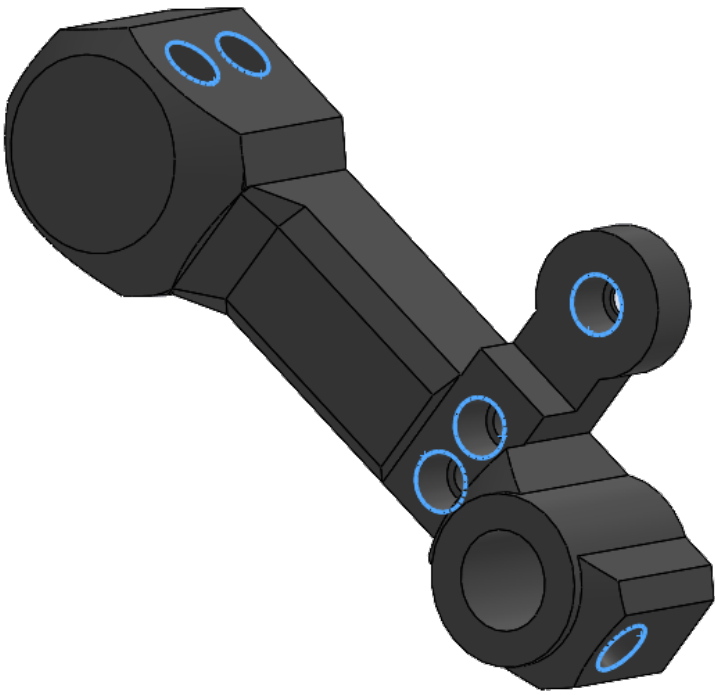




81mm

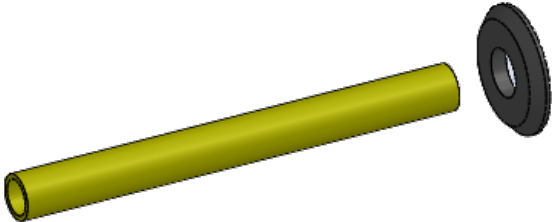



screw M3x10 : xx

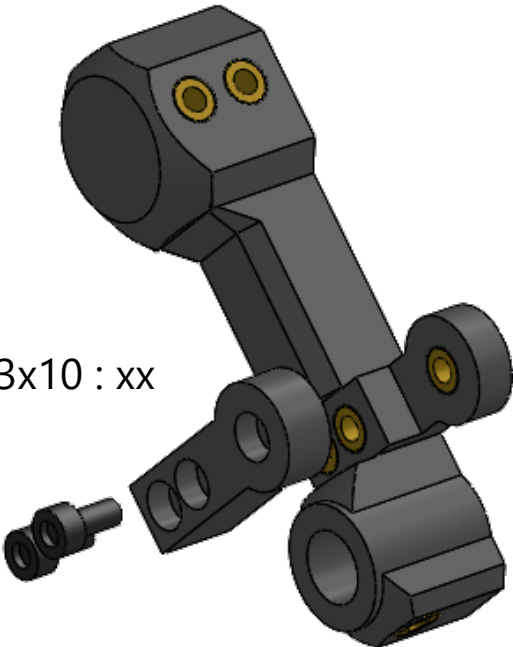






53mm

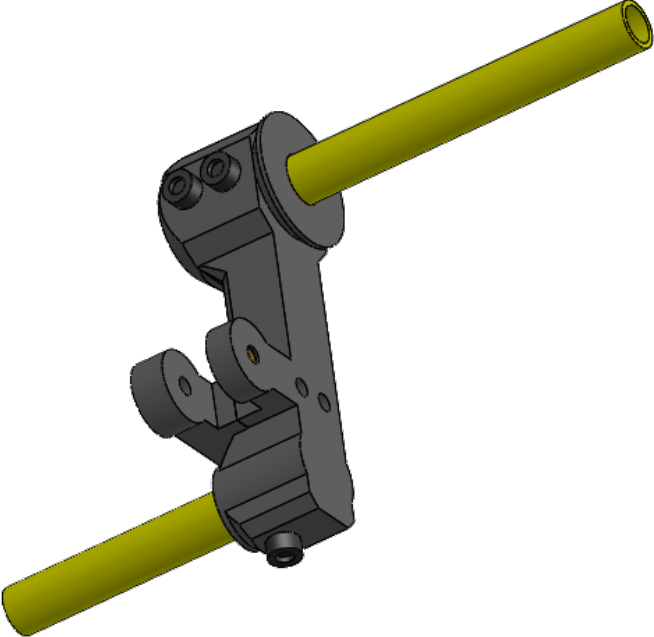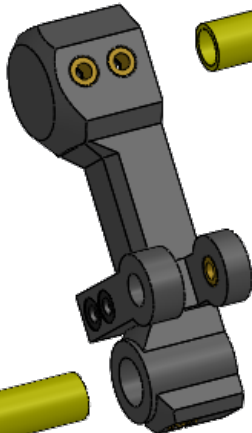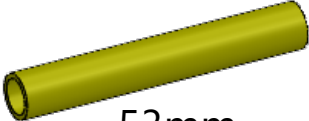



screw M3x6 : xx

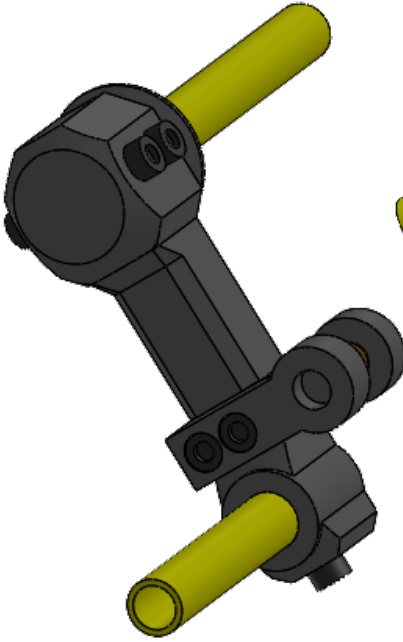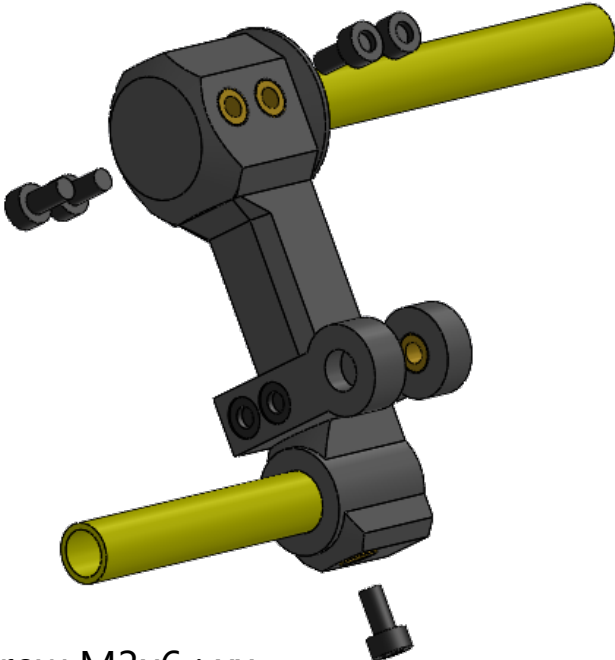


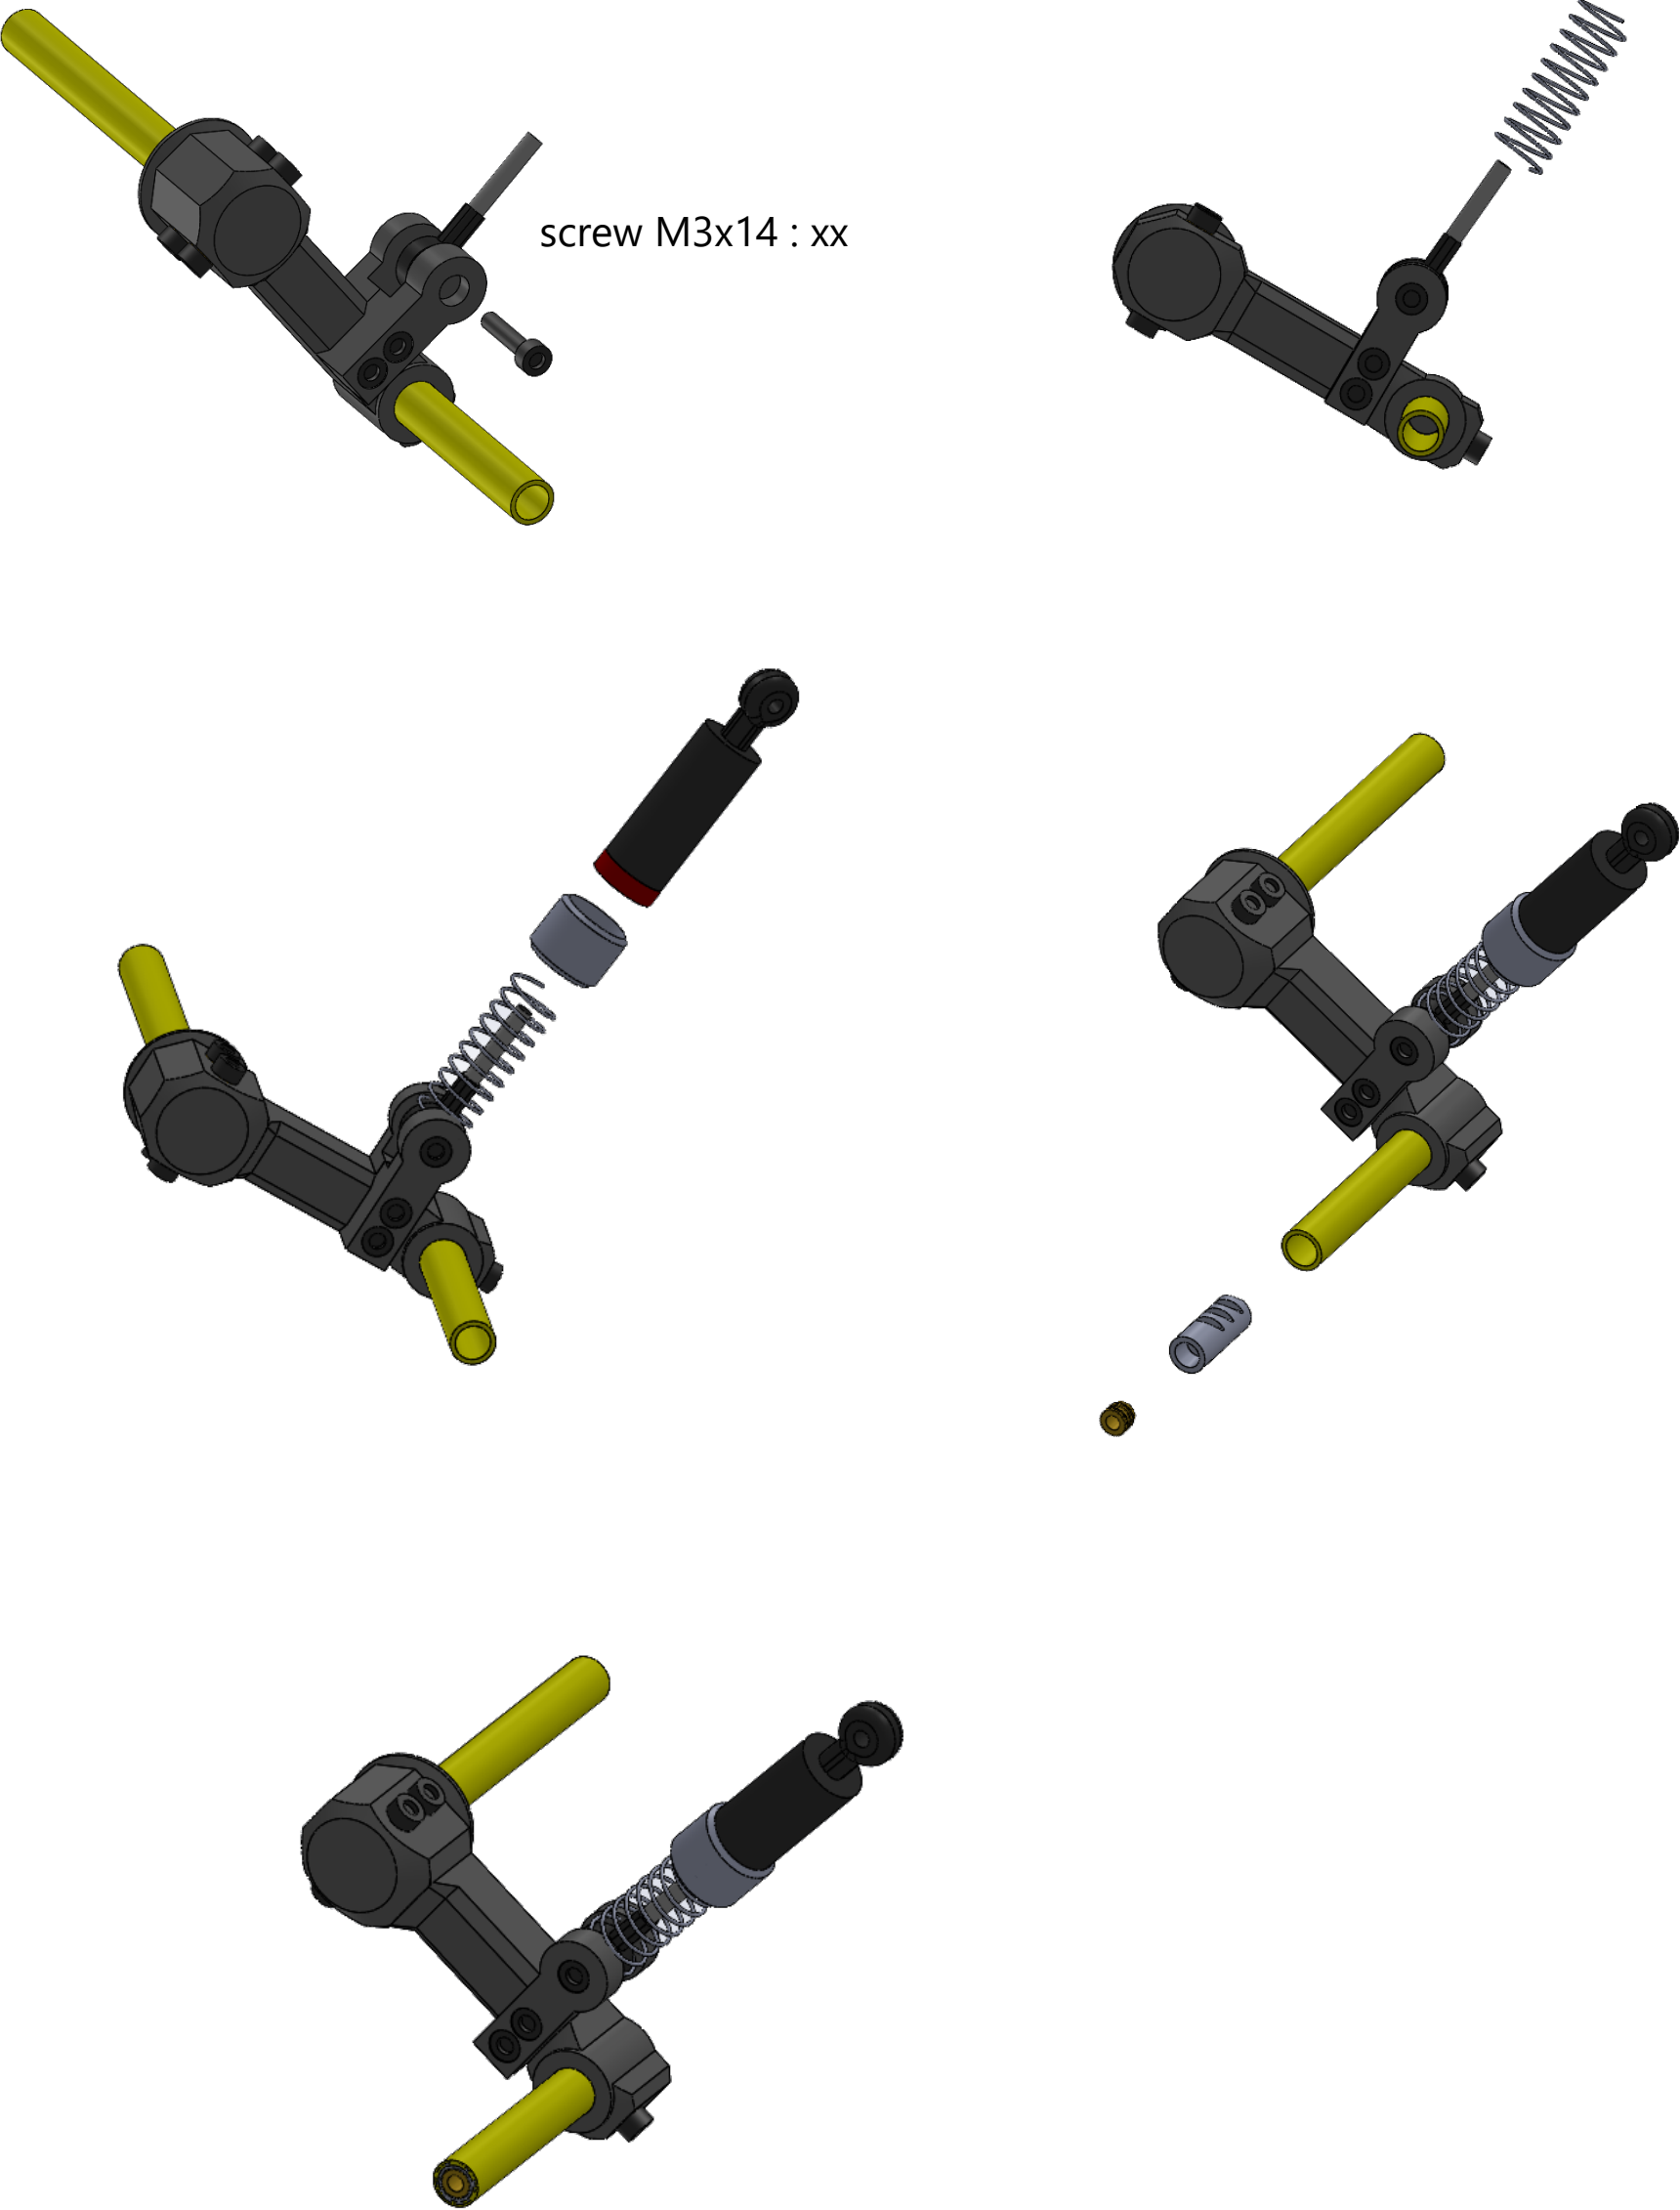



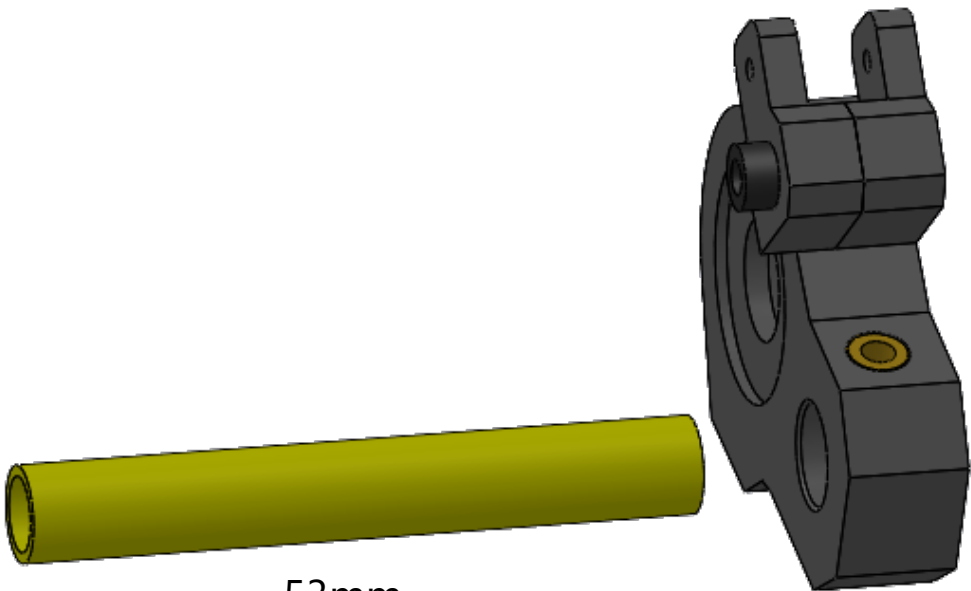
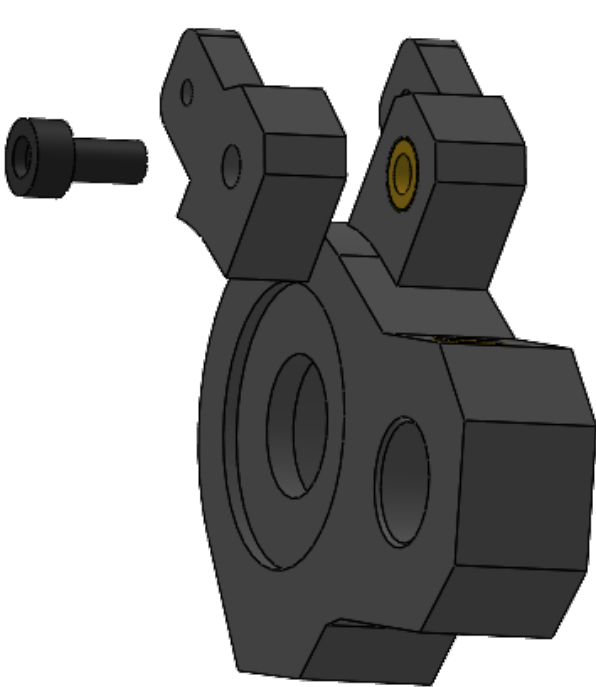
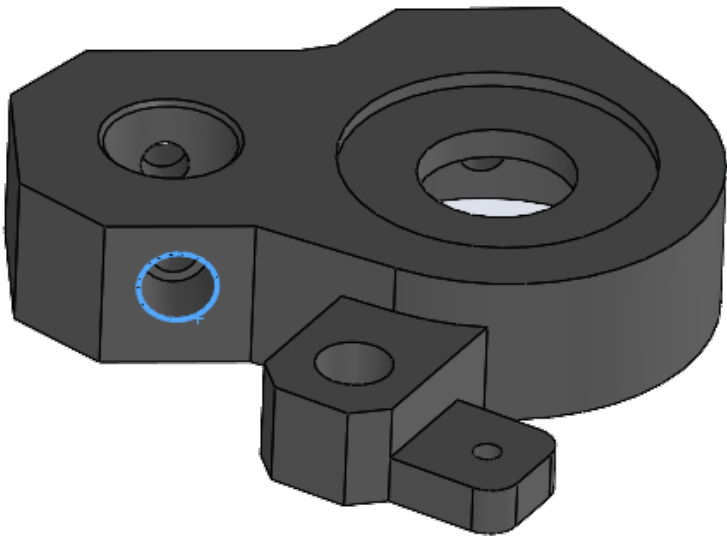
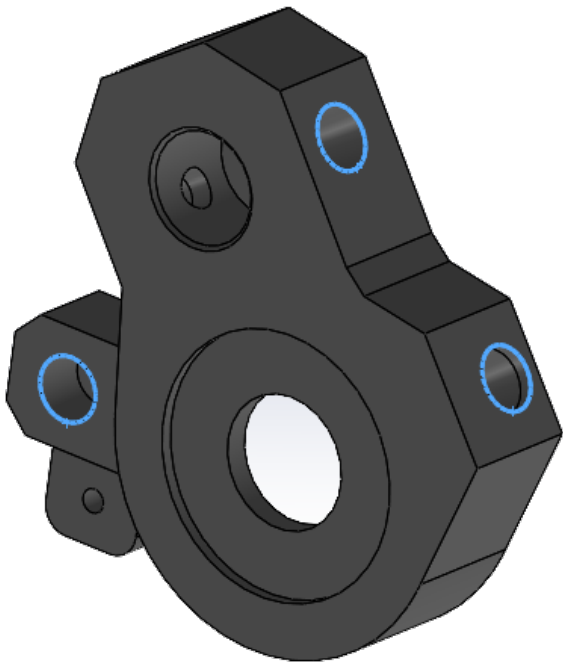



53mm

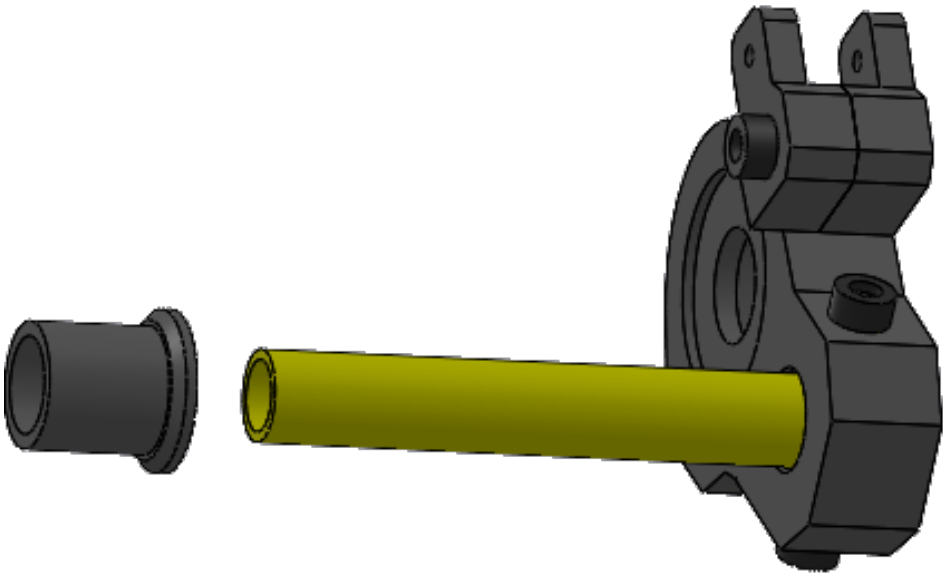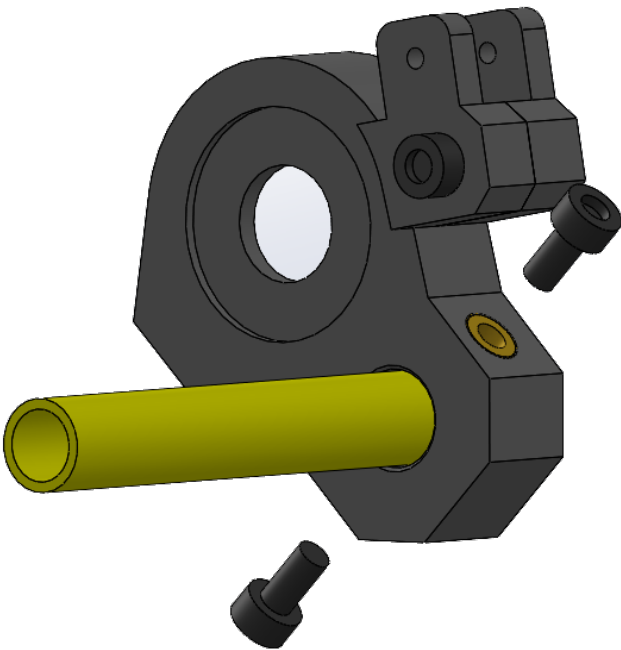





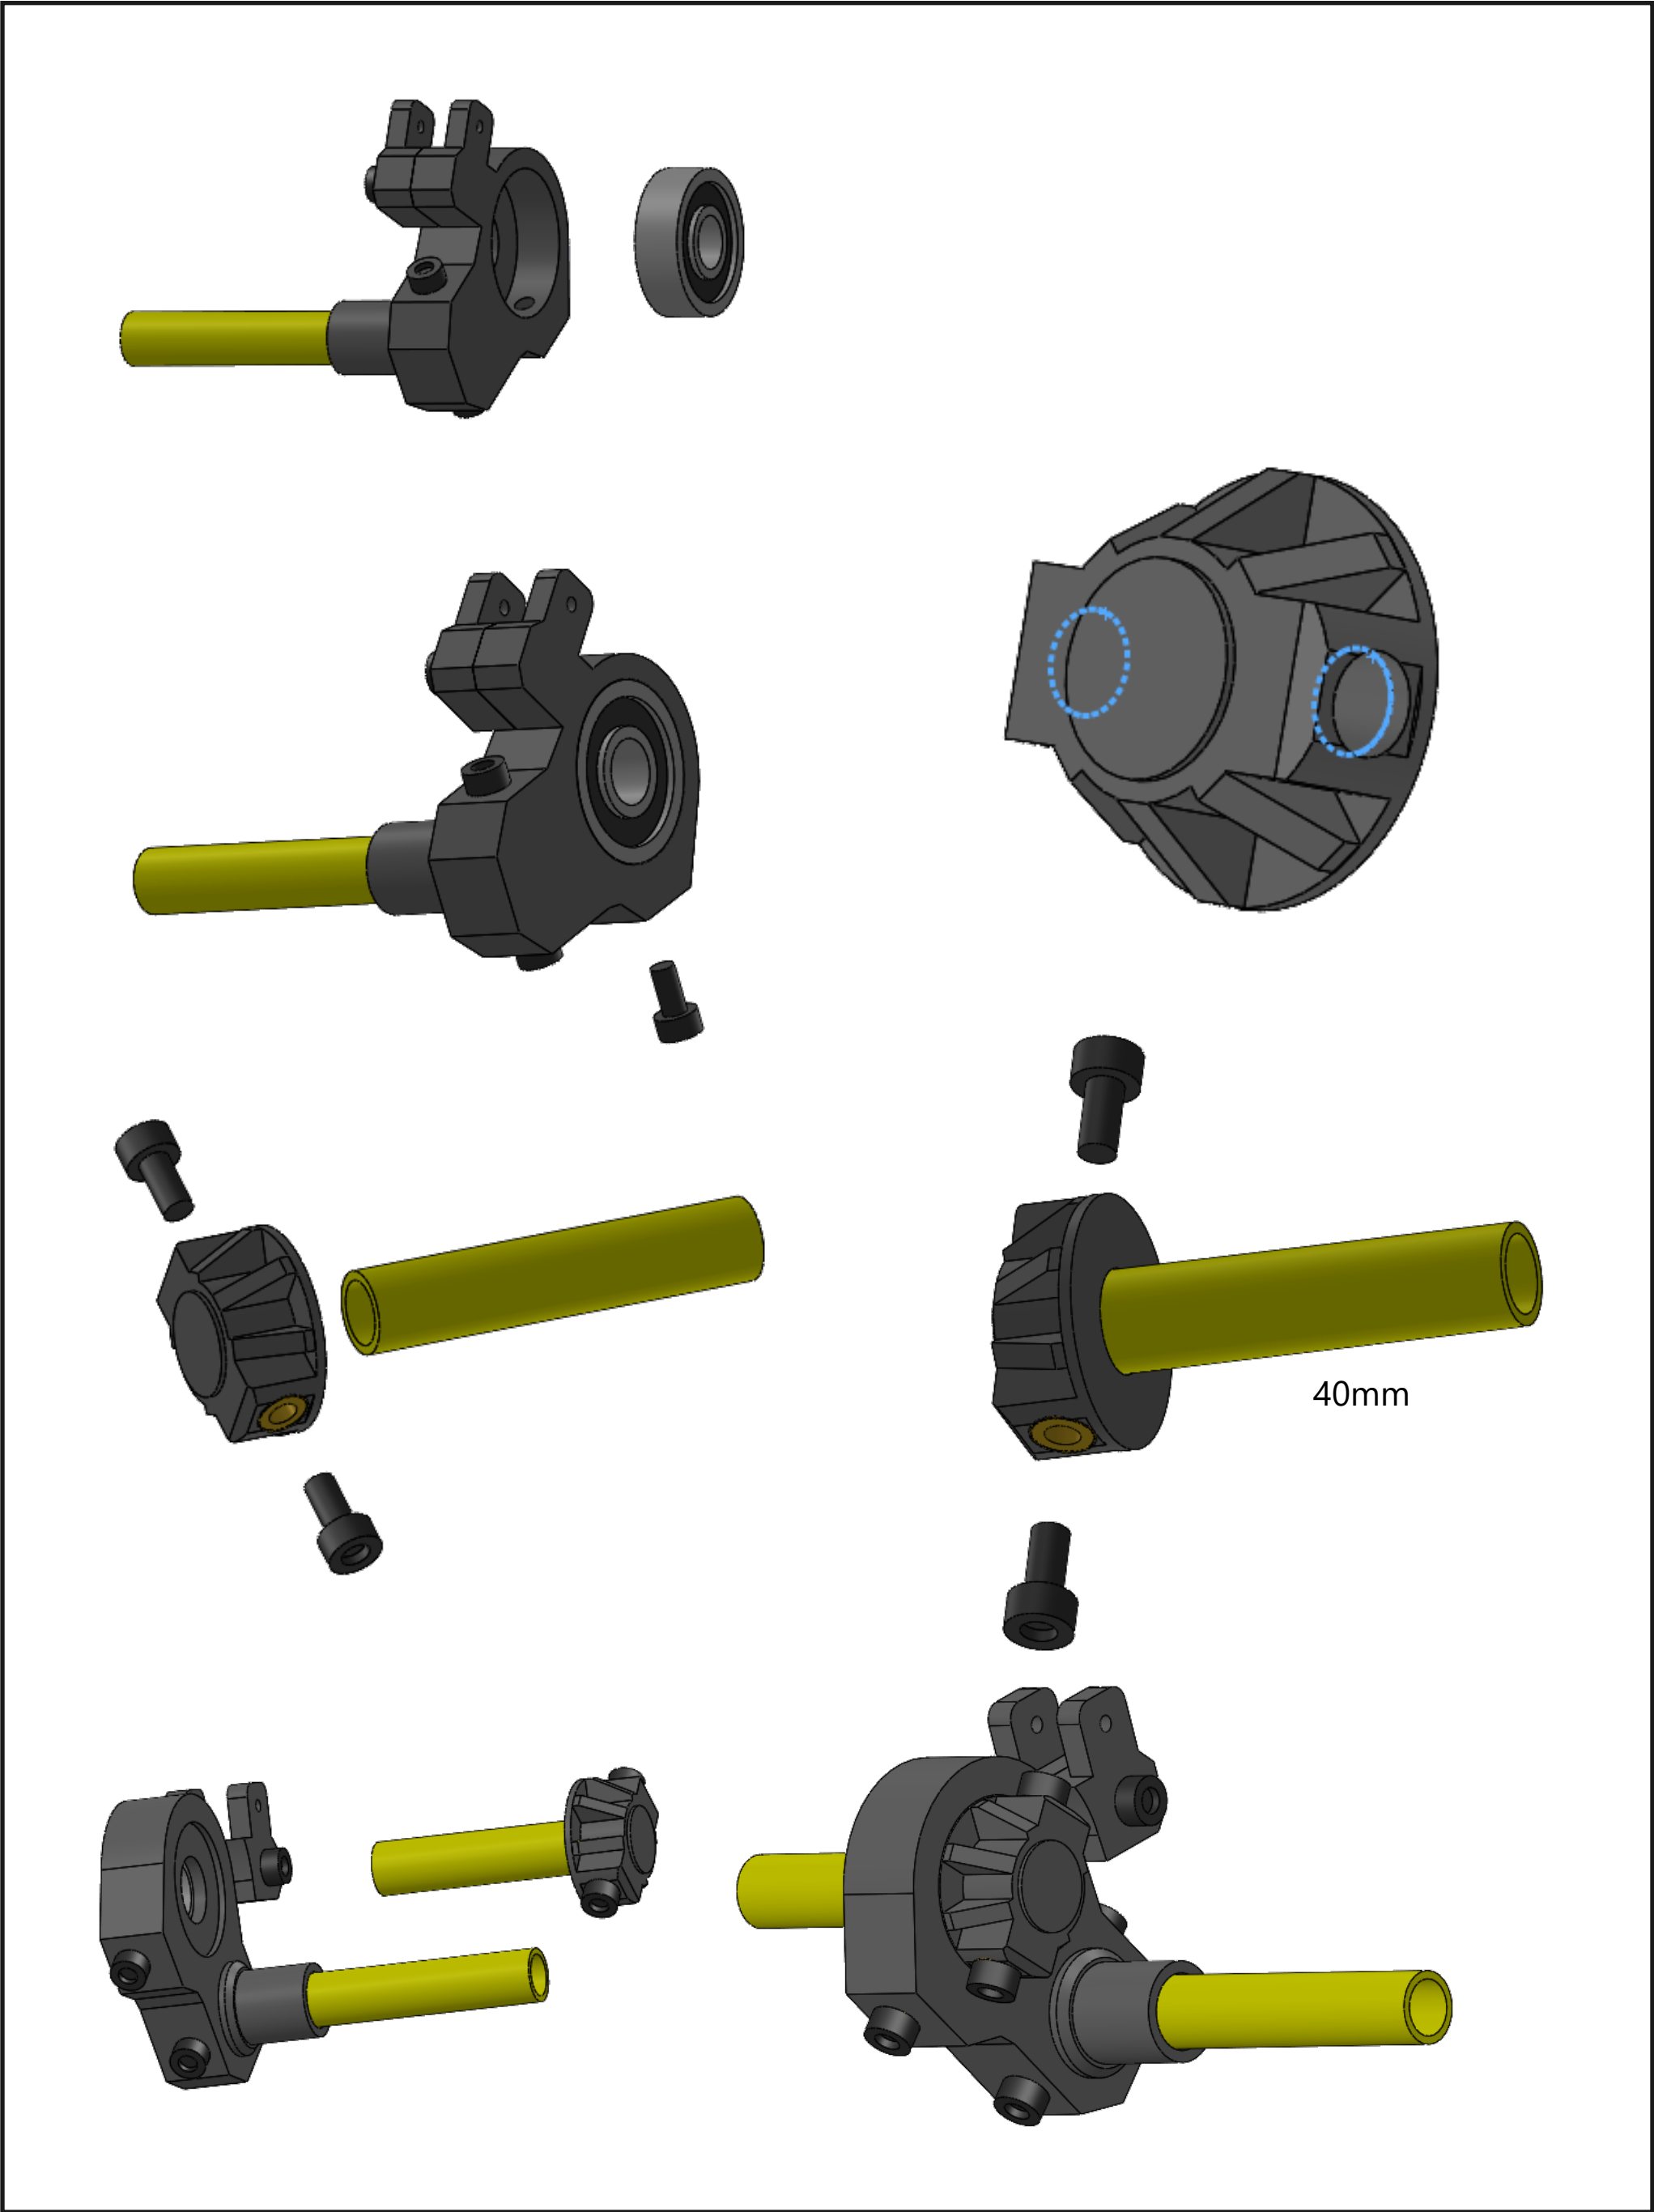





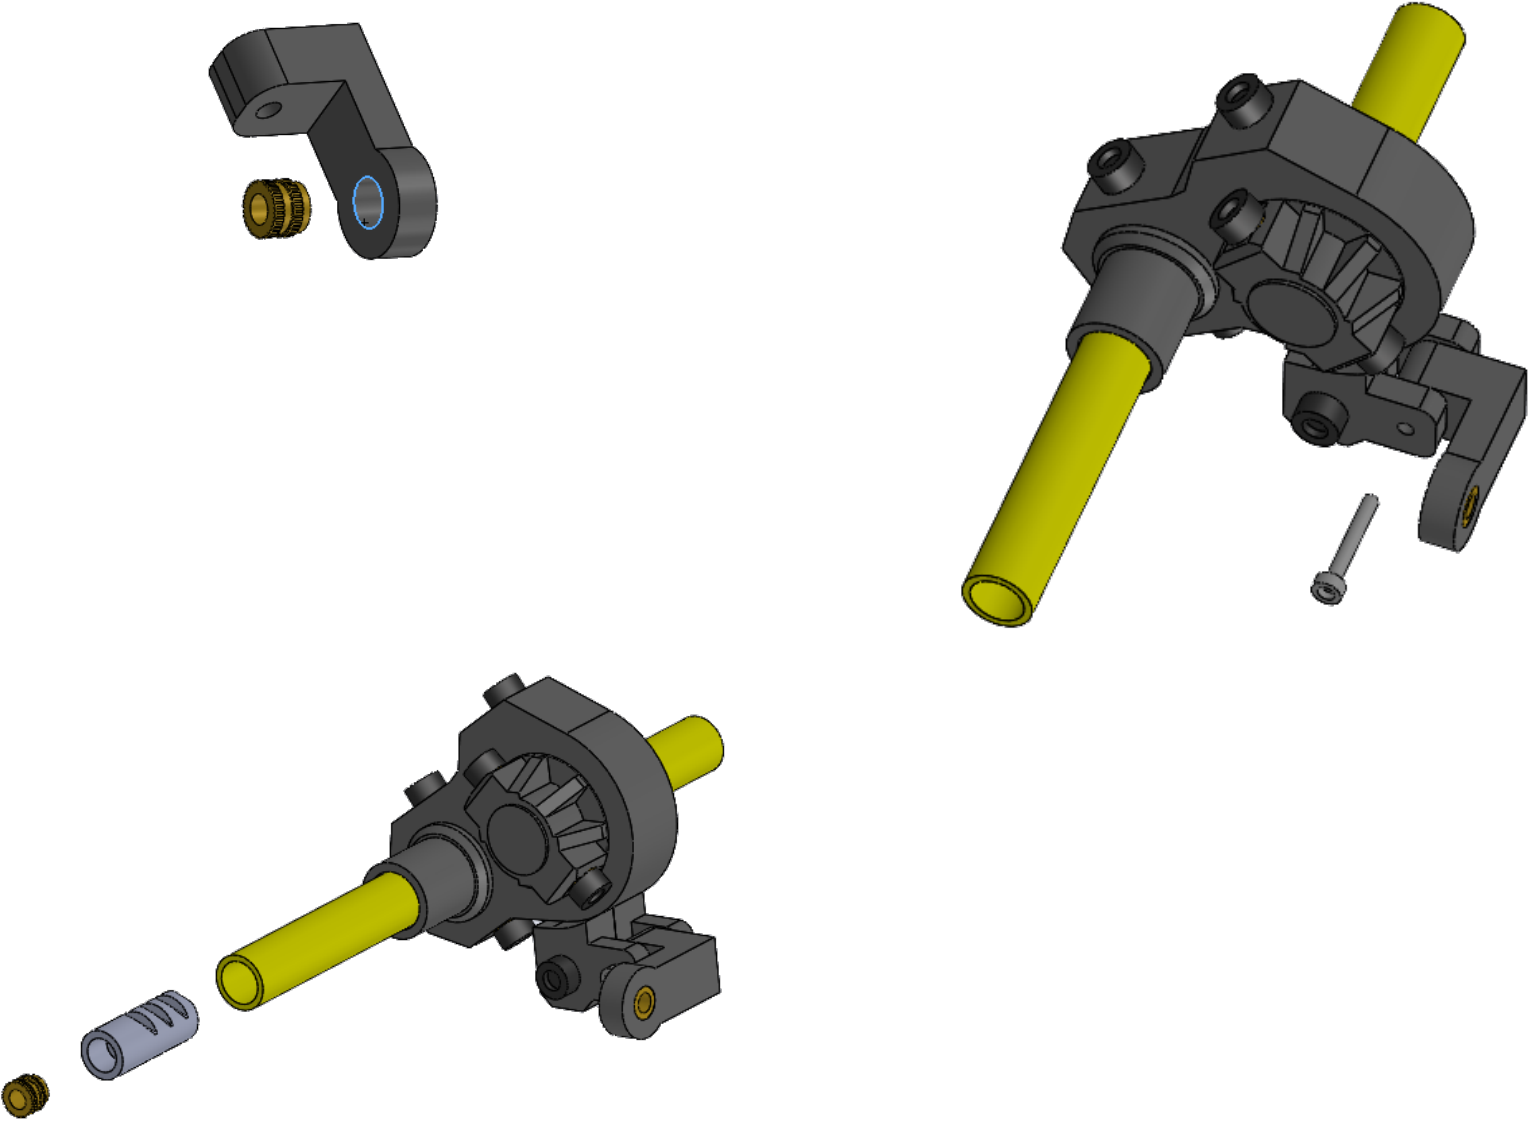


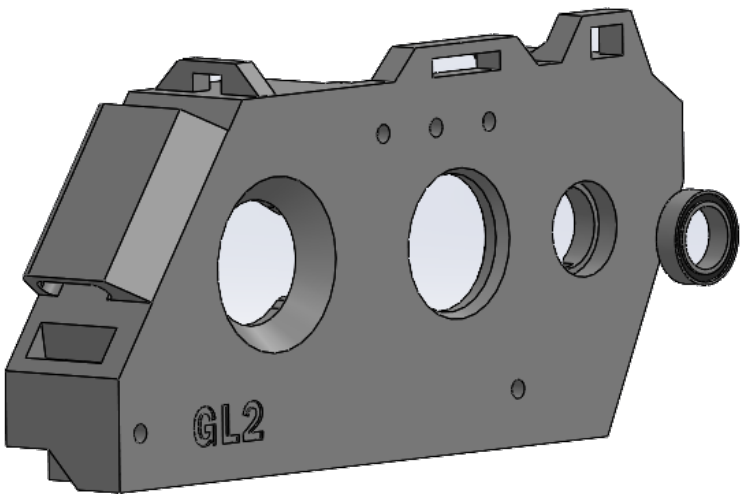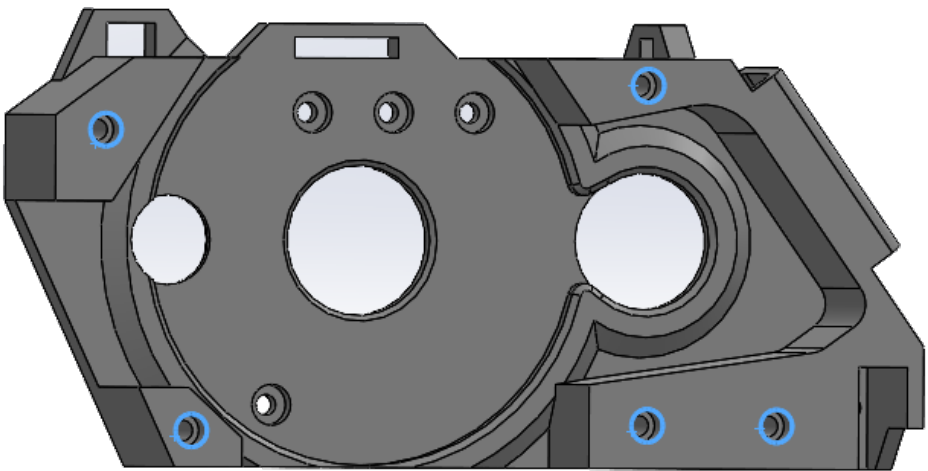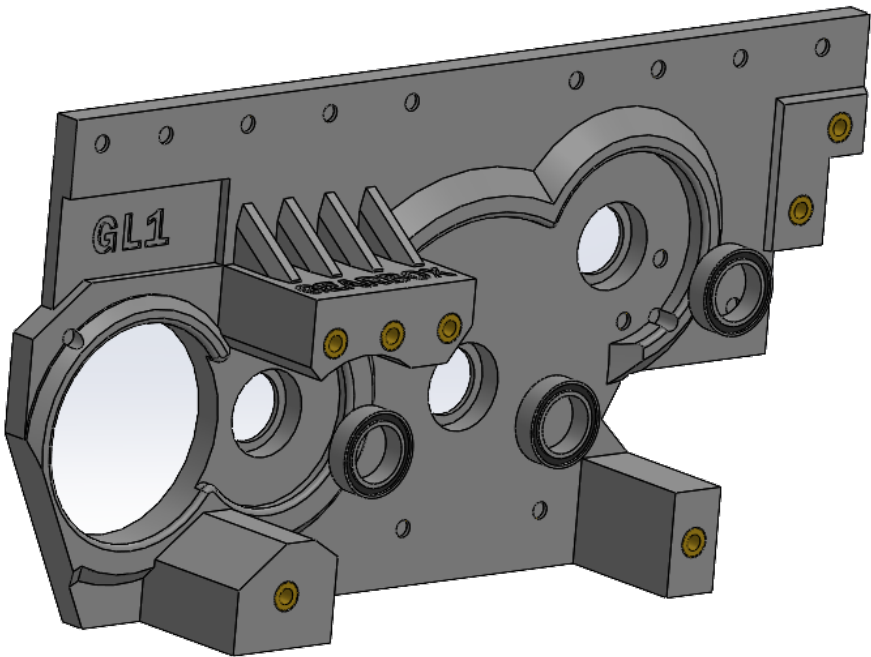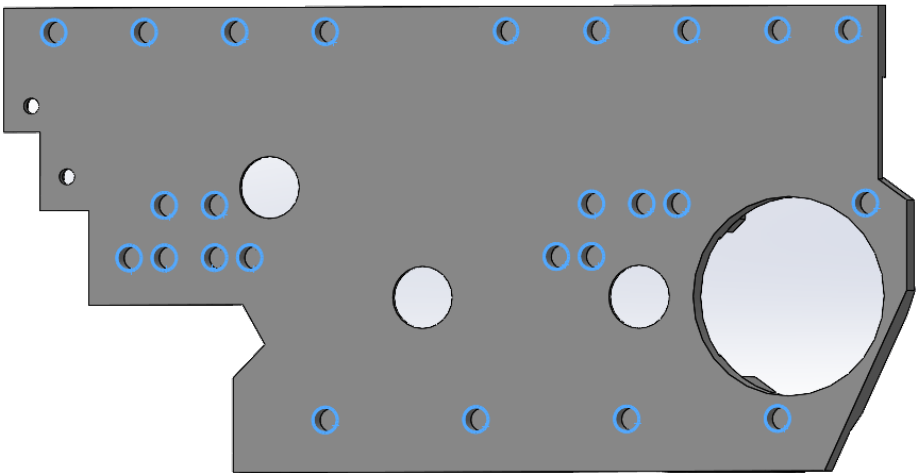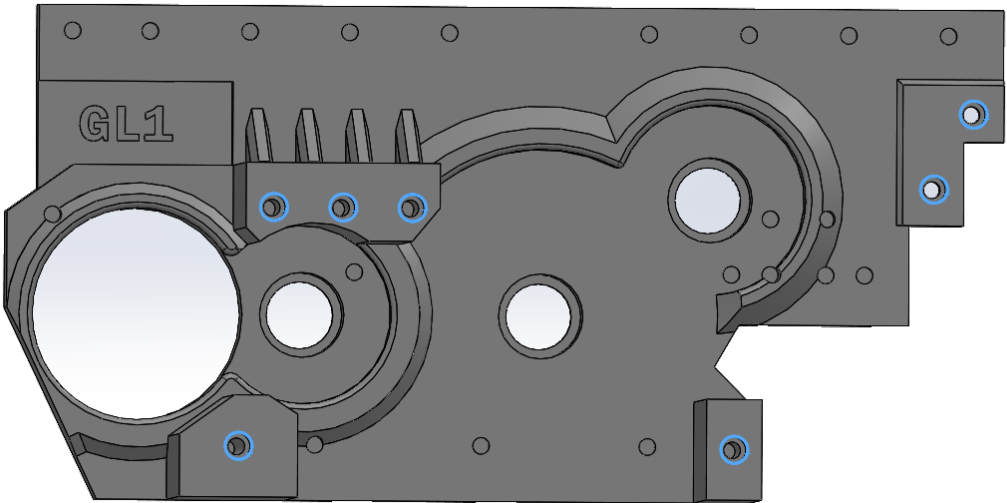





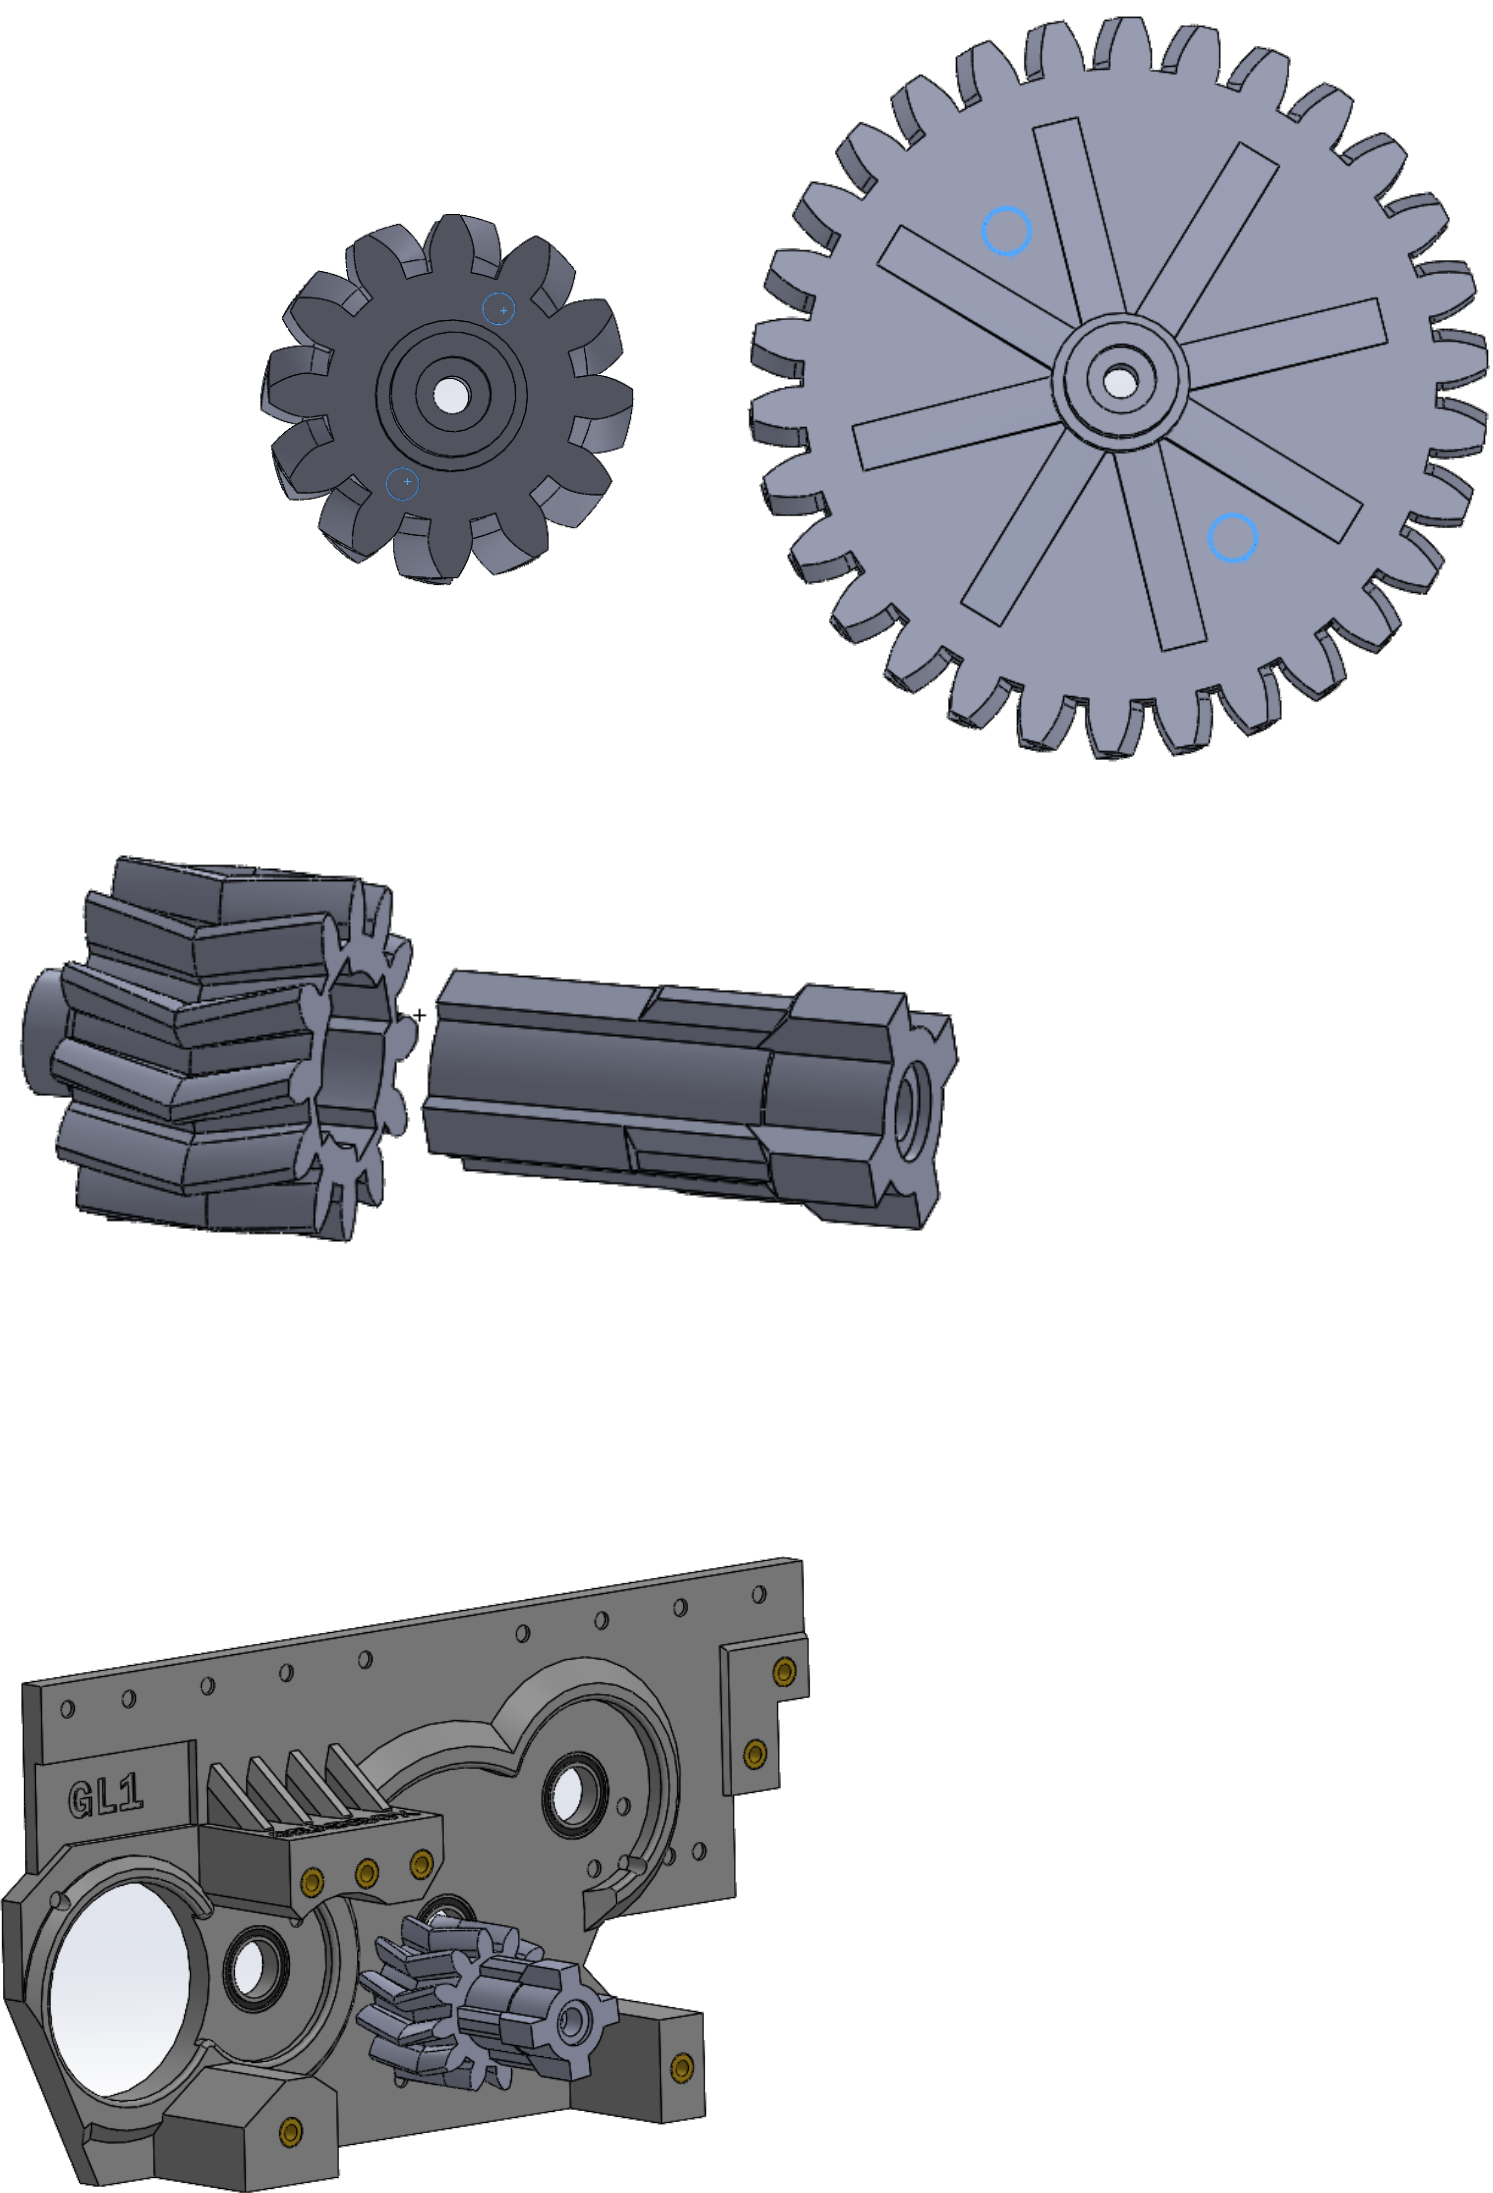




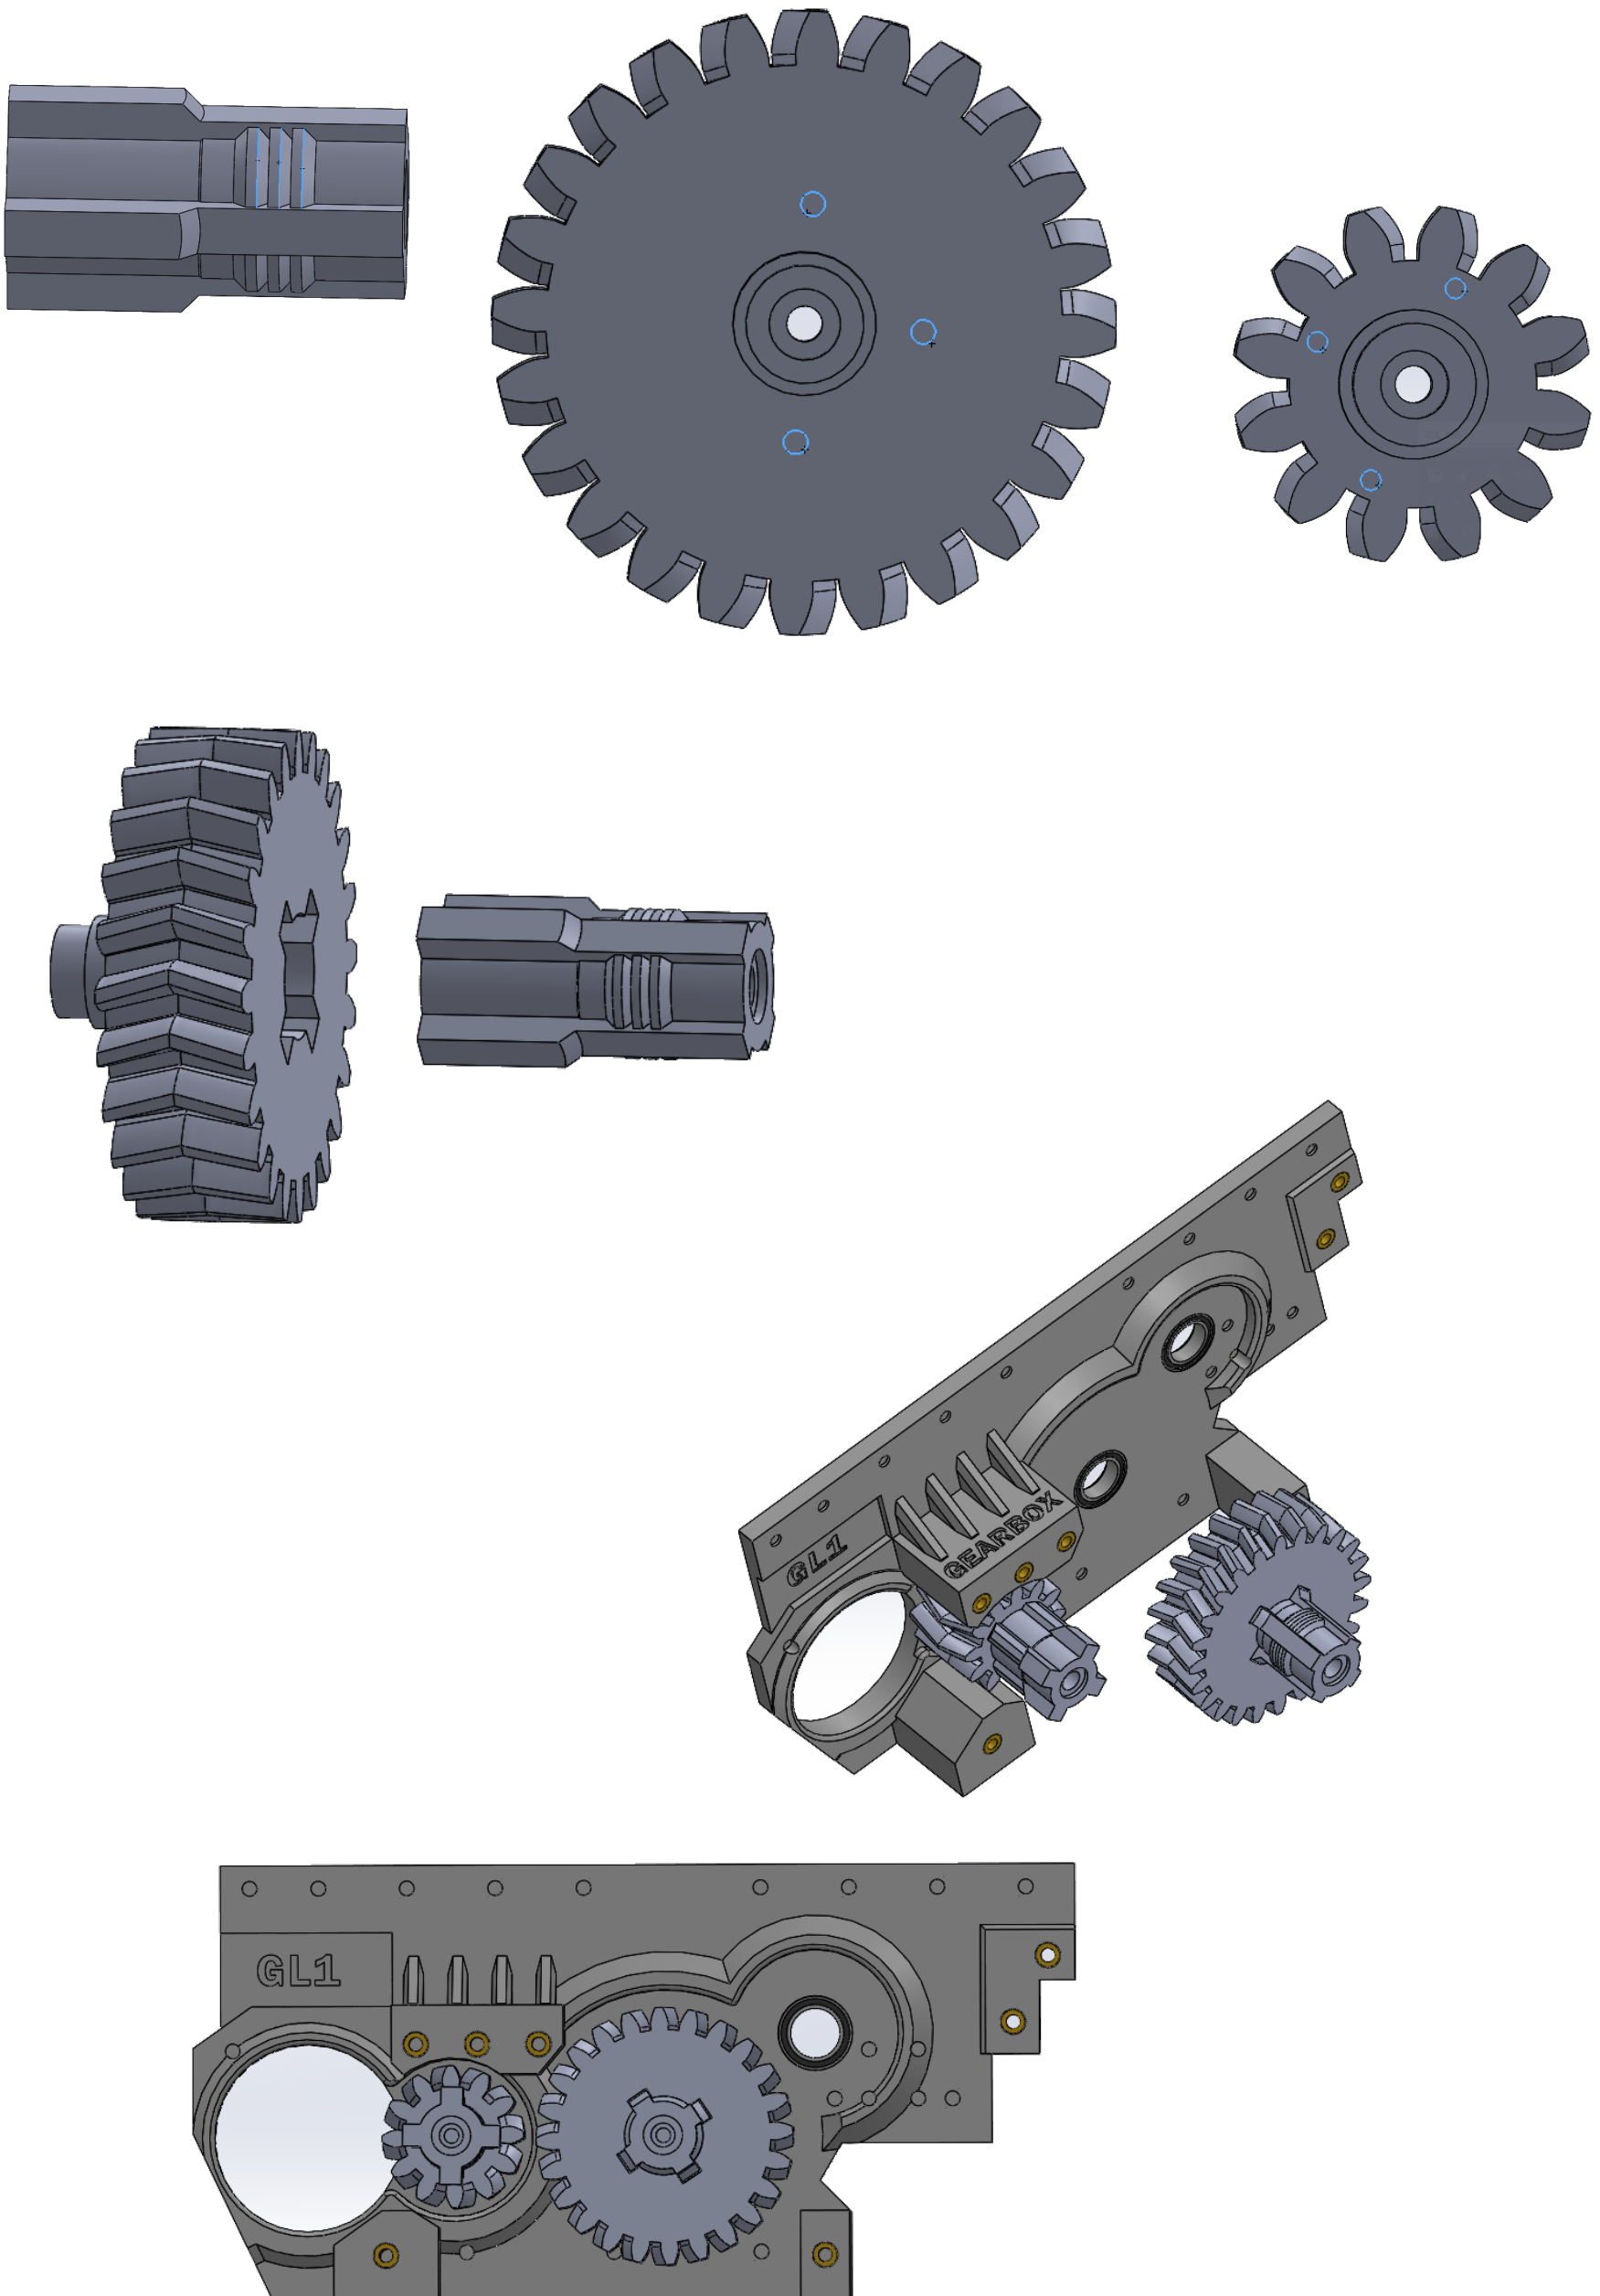


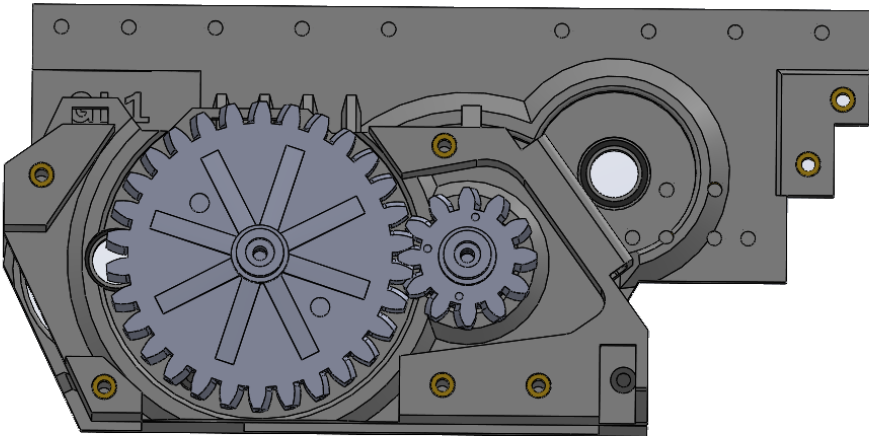
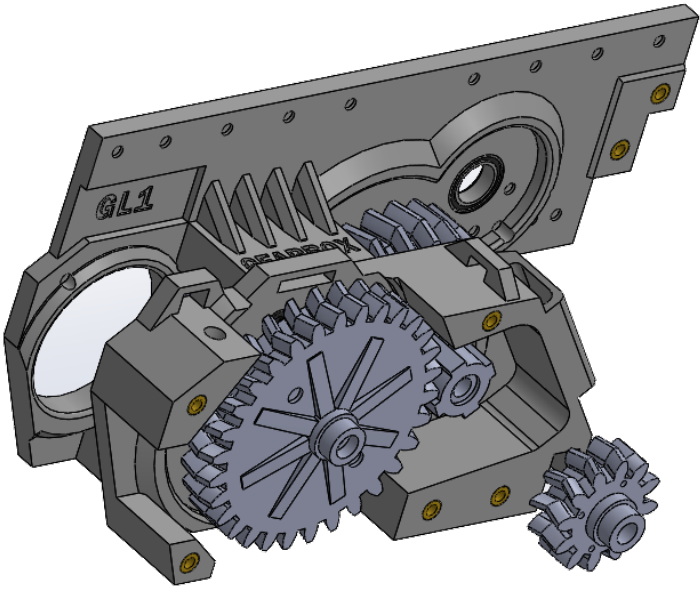
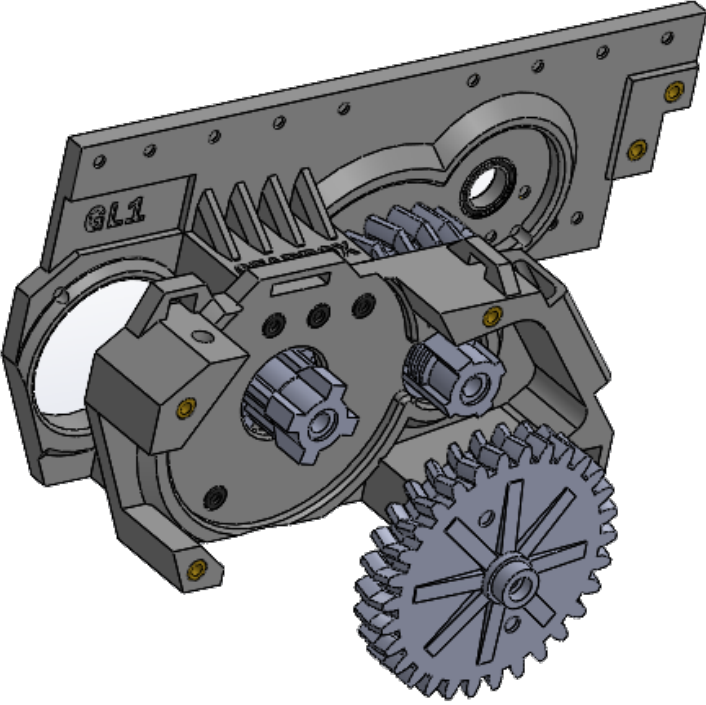
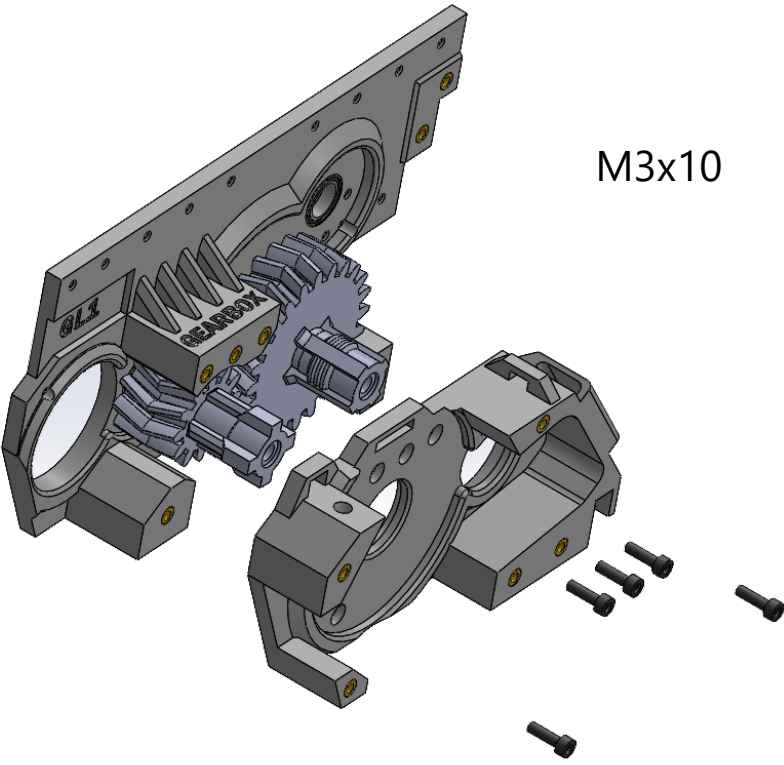





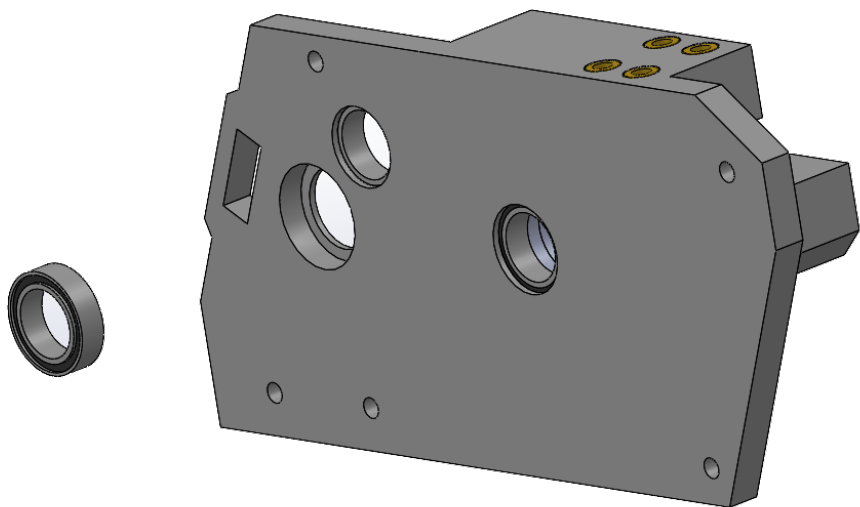
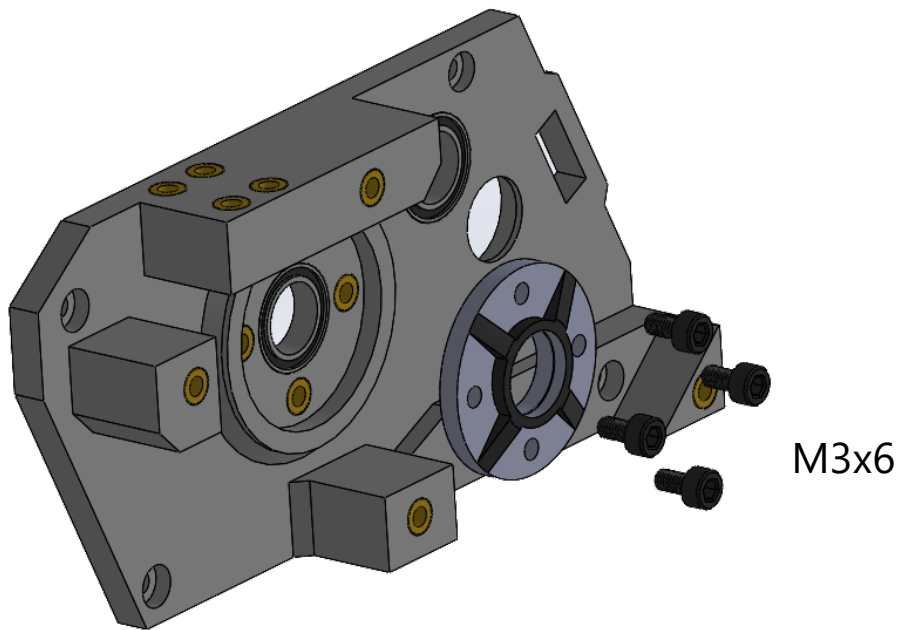
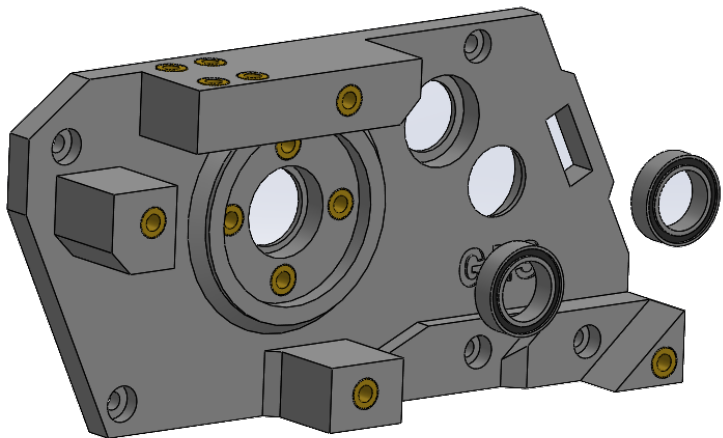
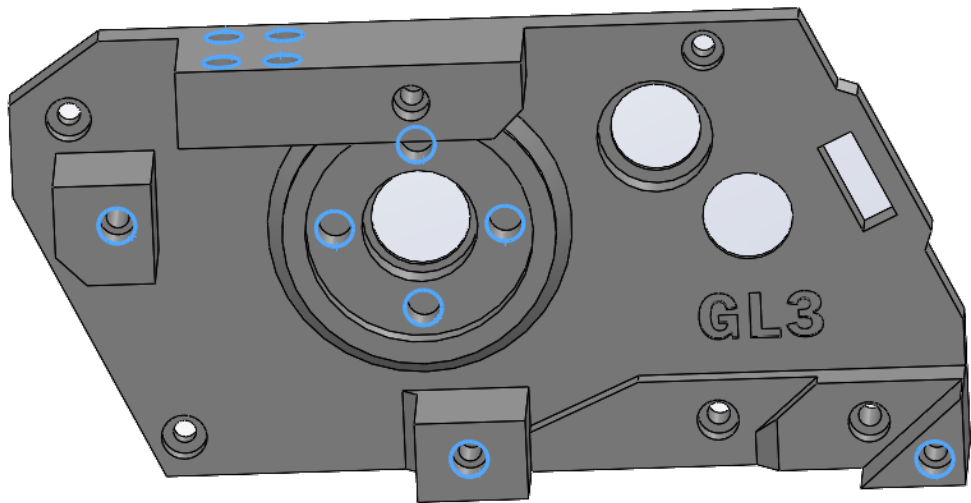





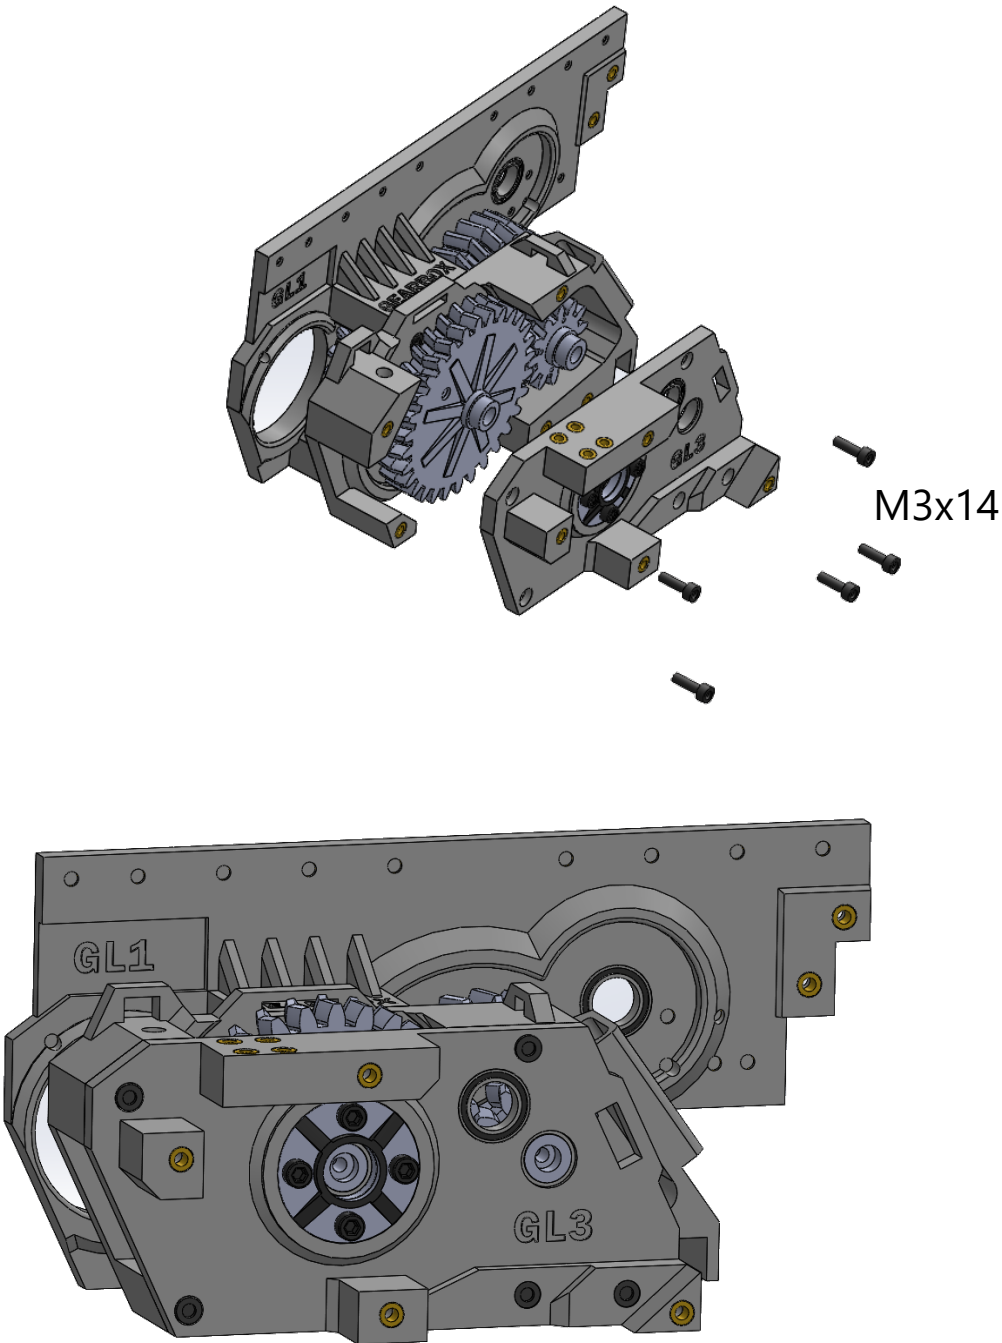



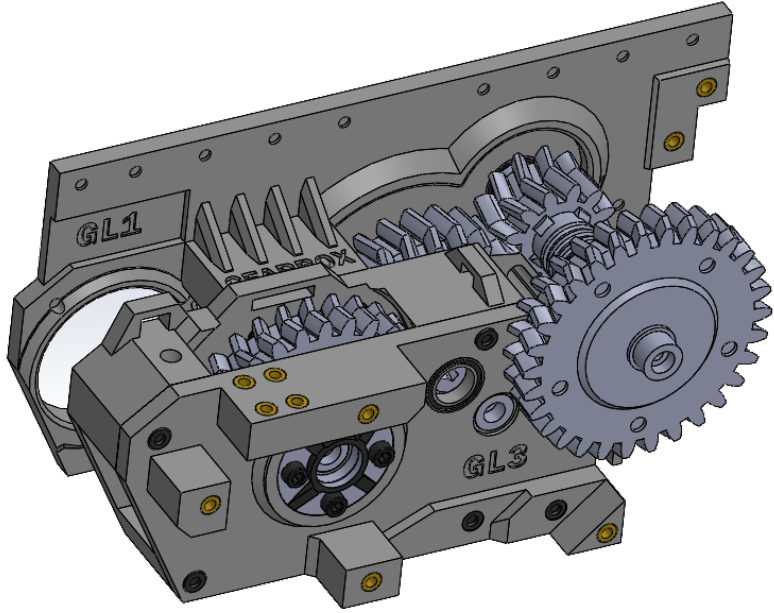
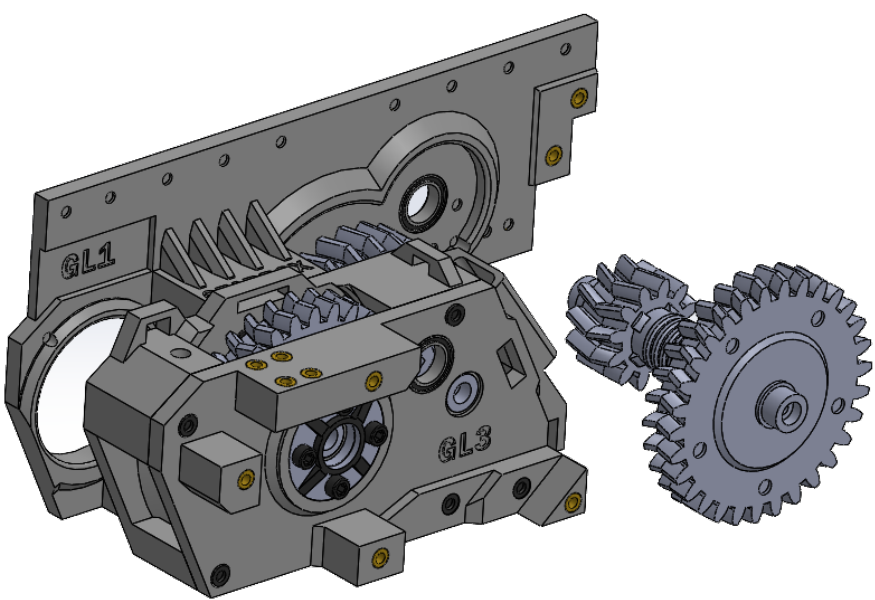
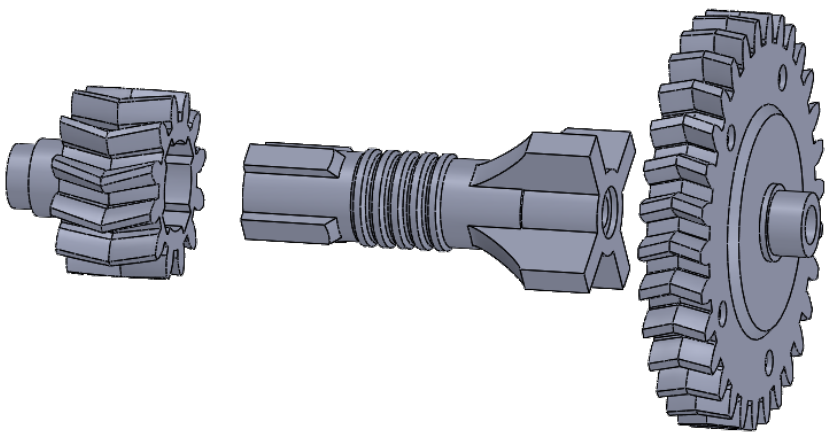
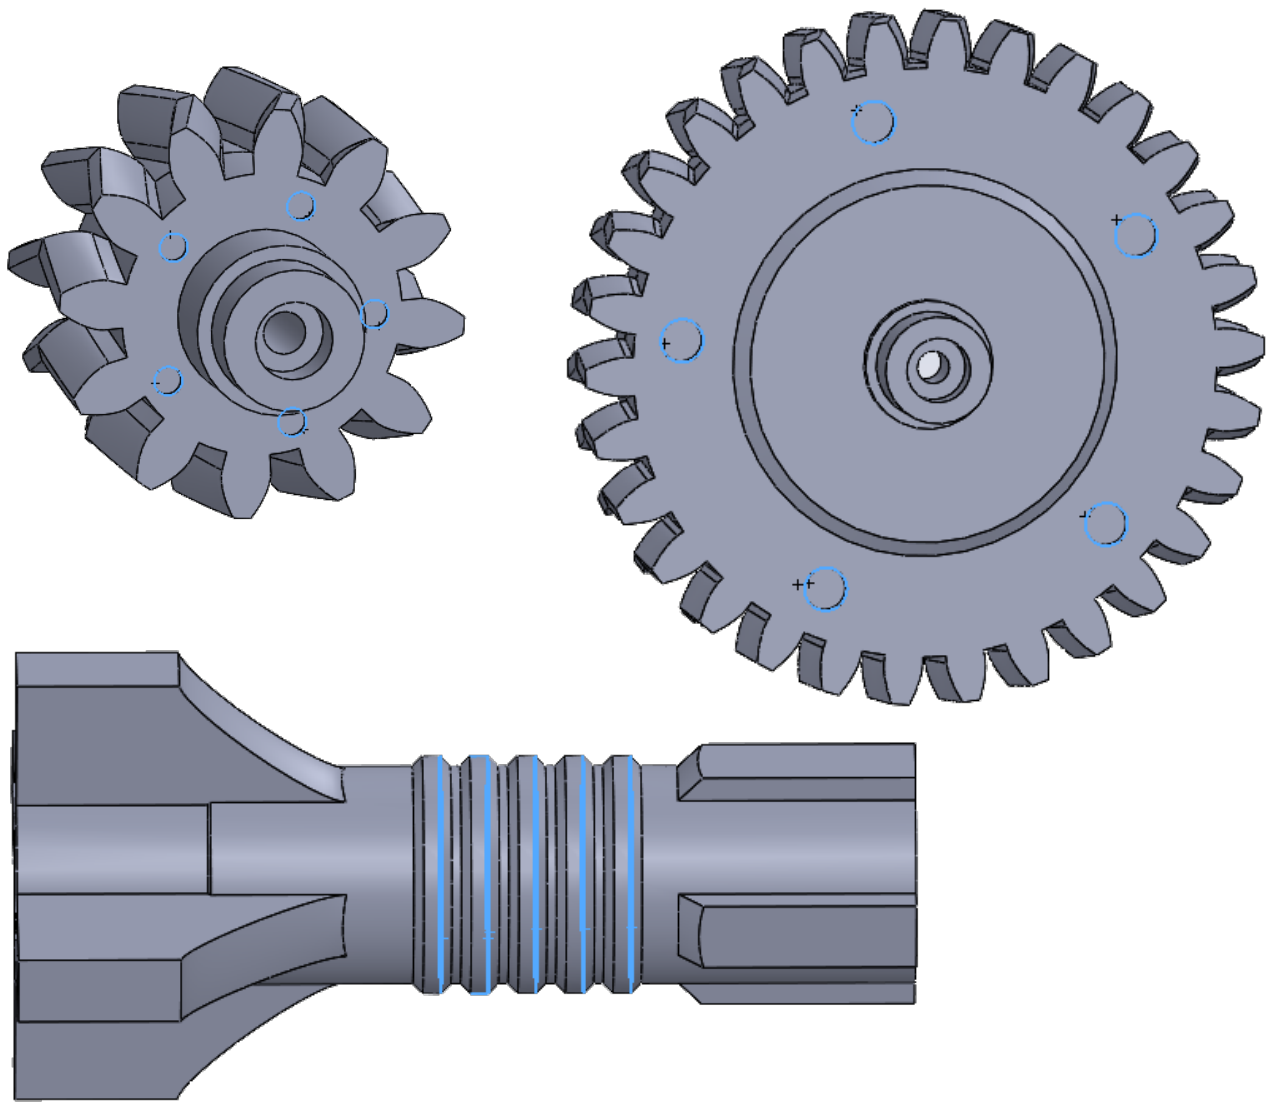


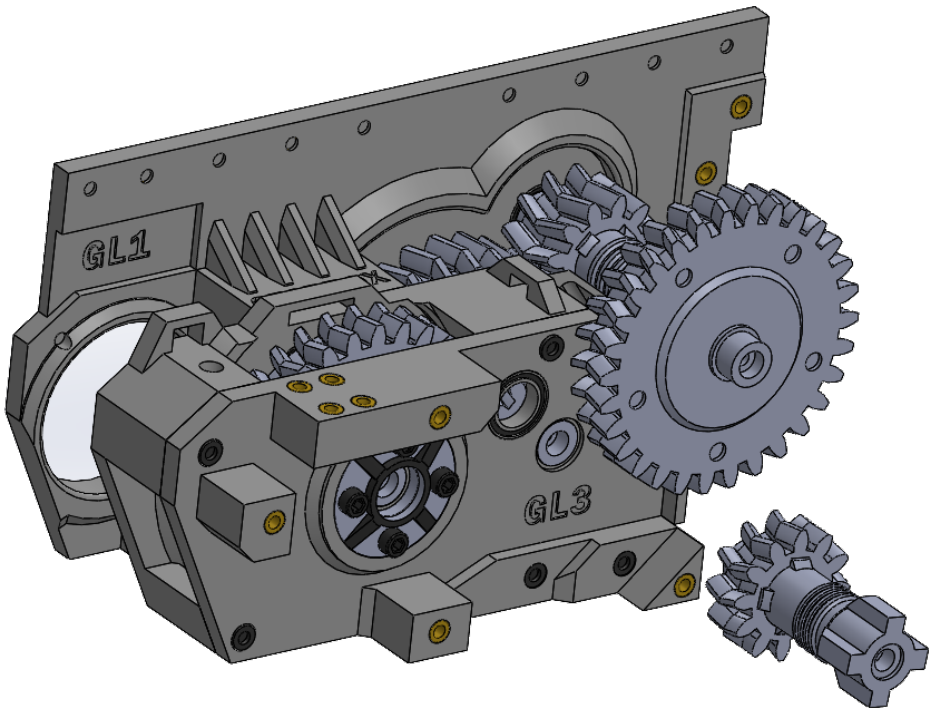
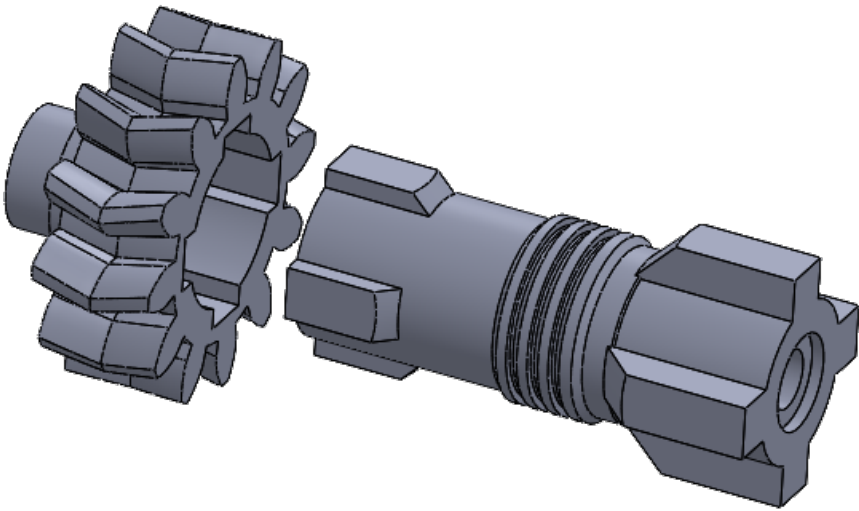
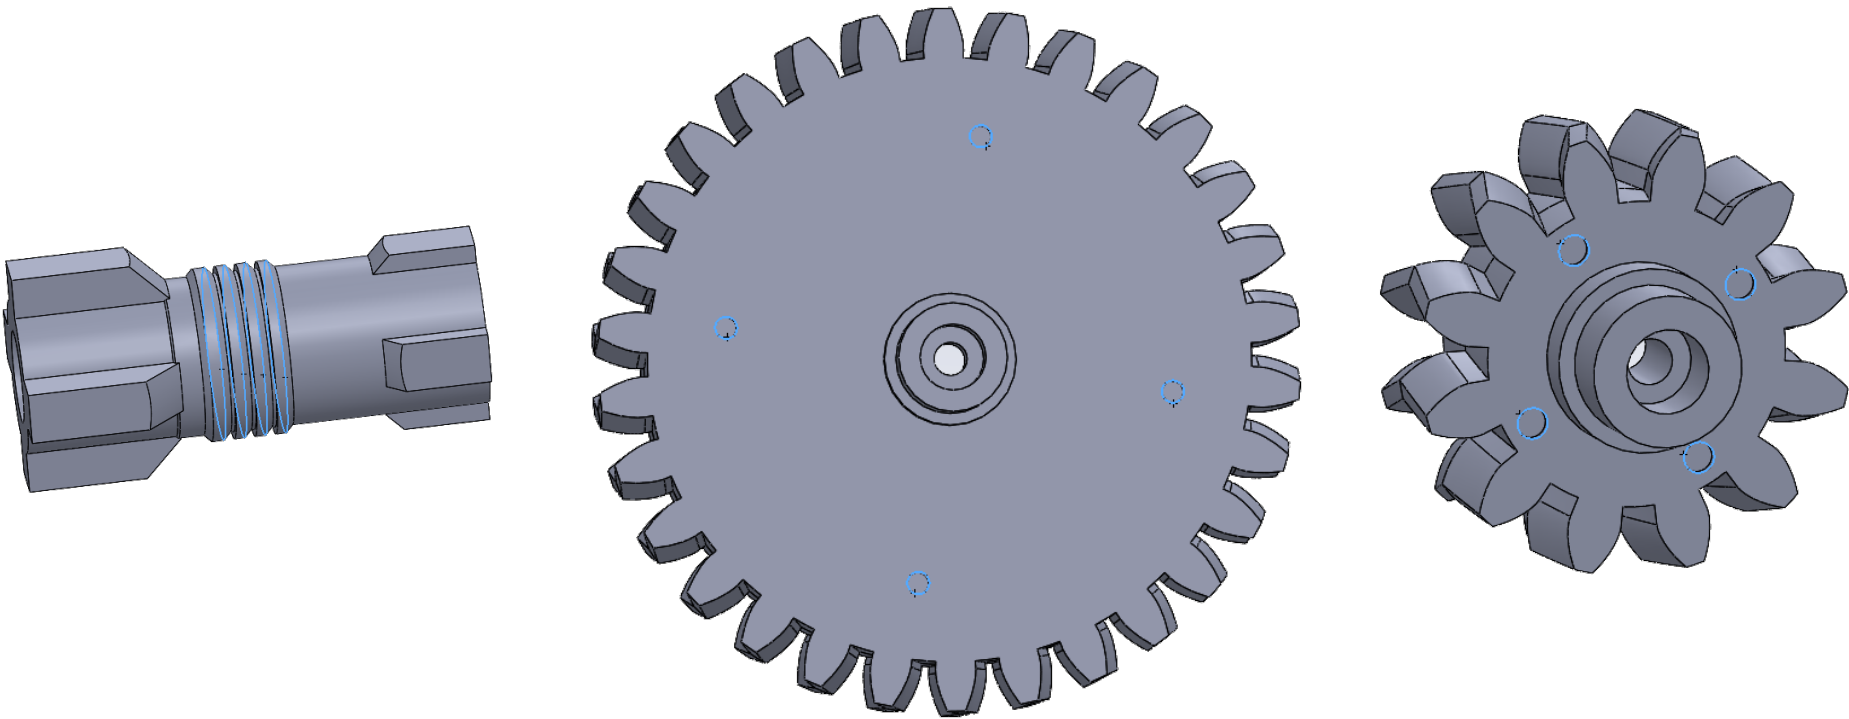


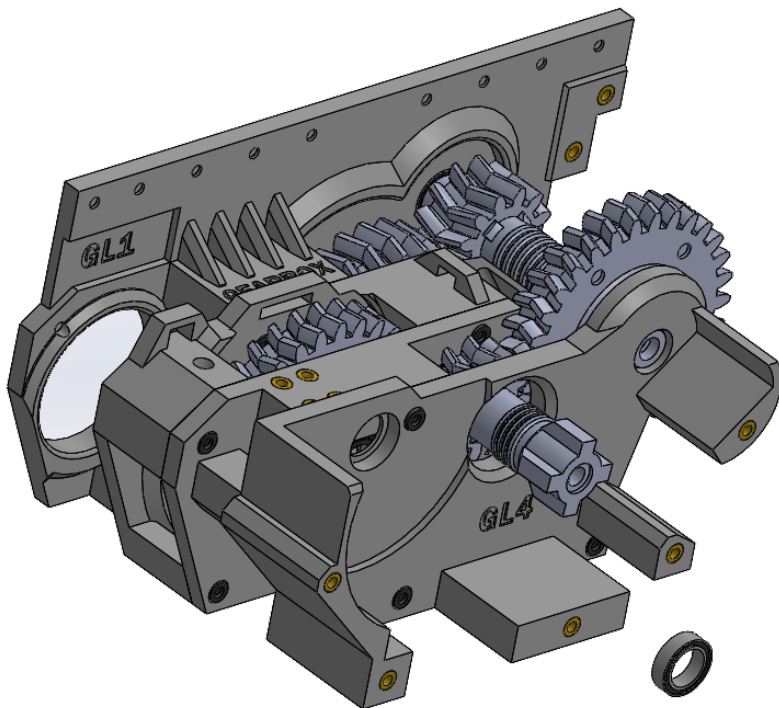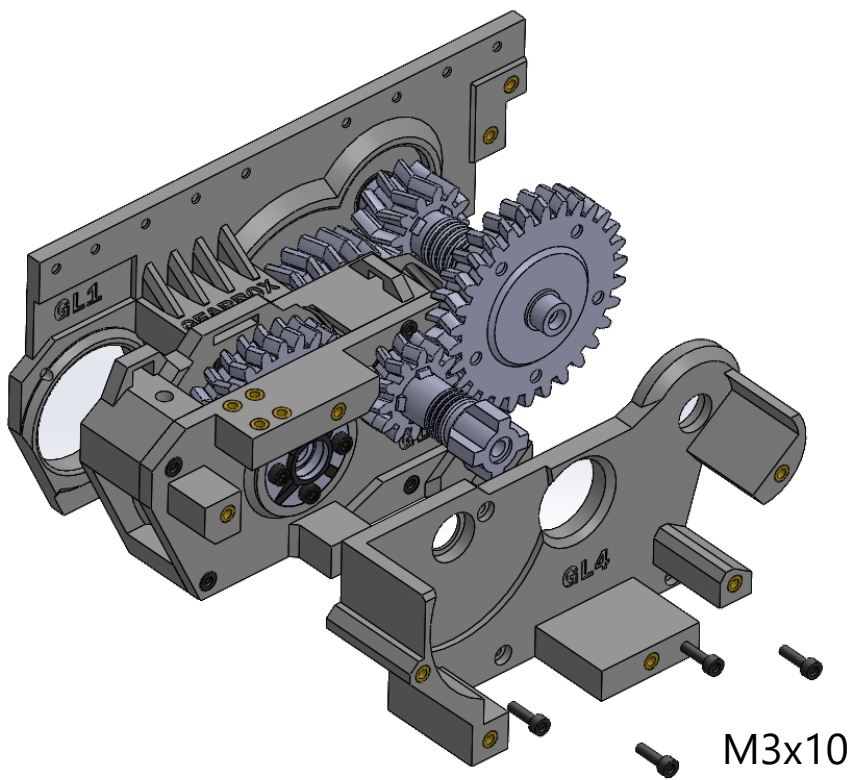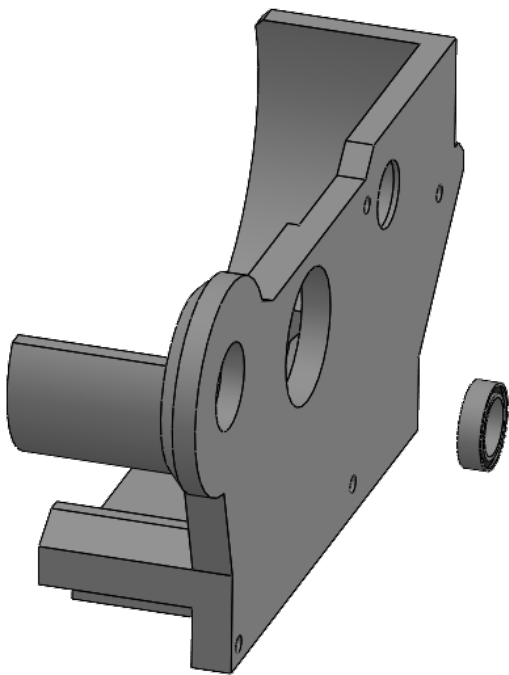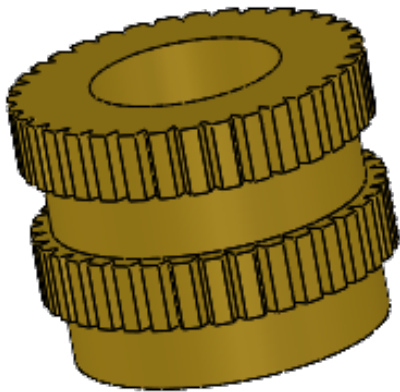


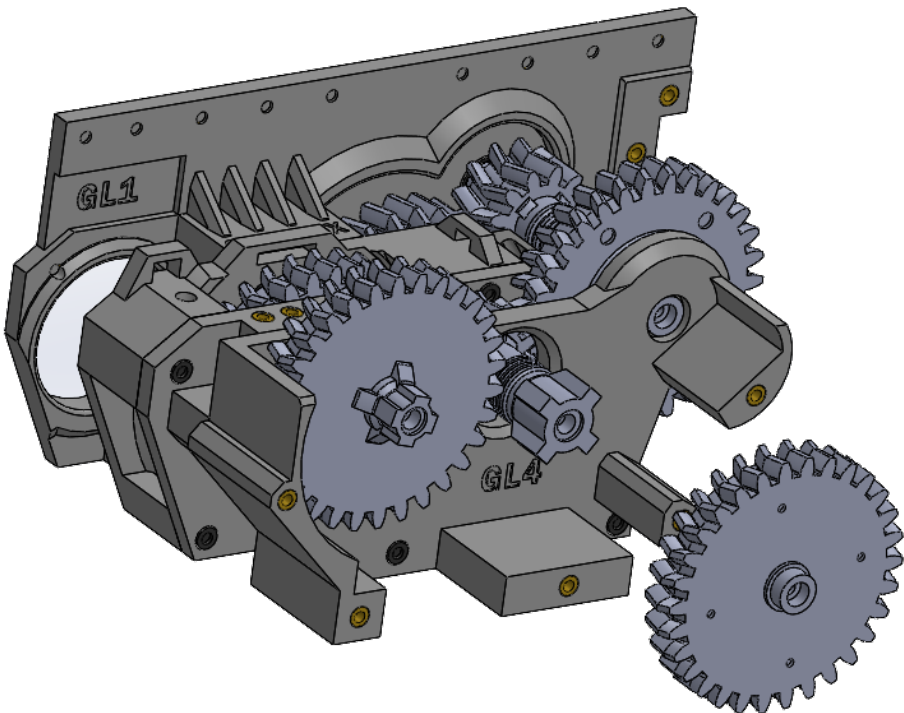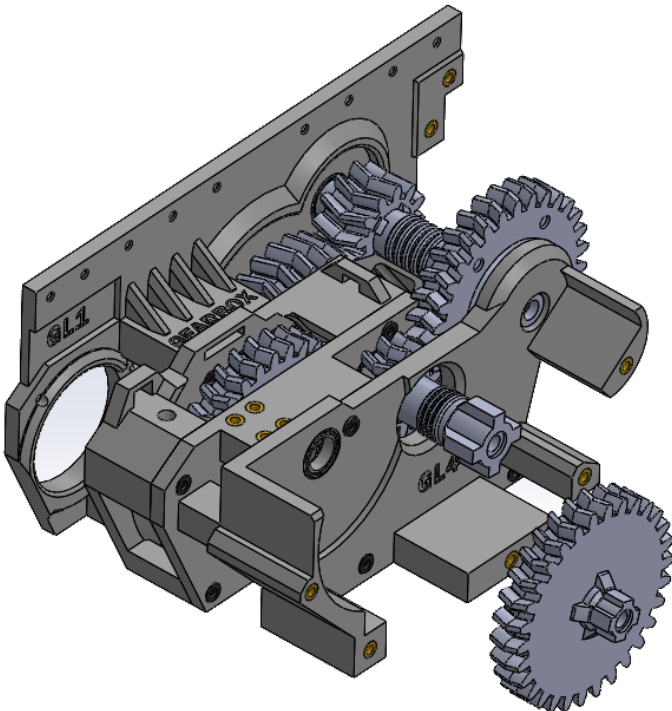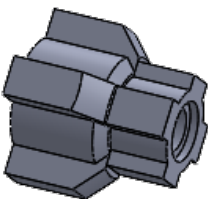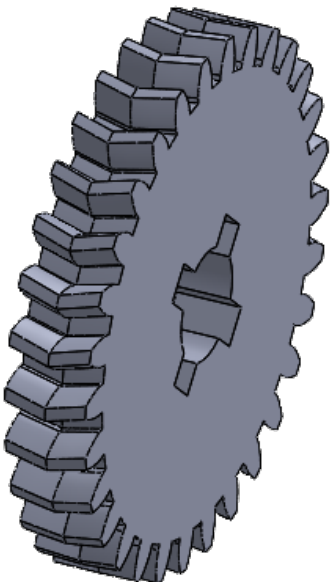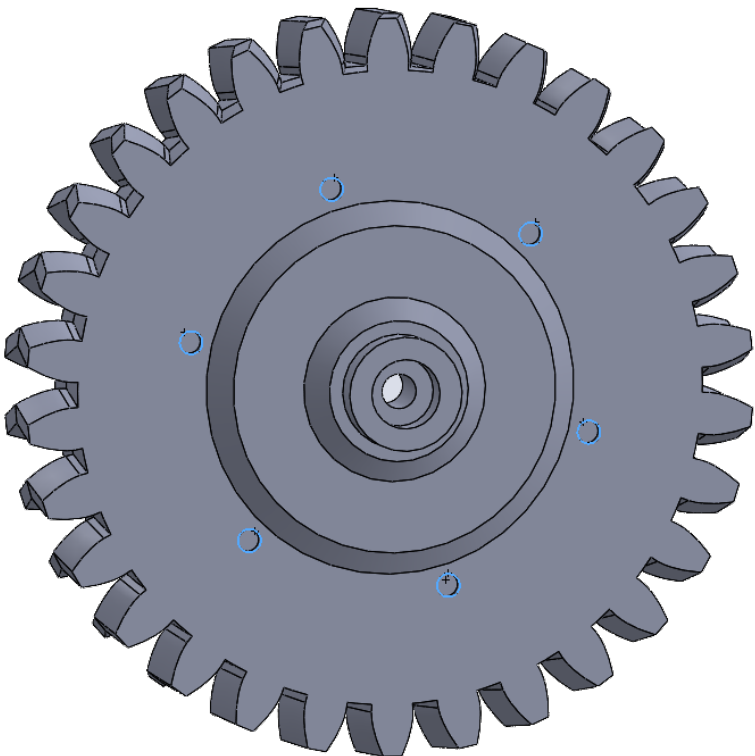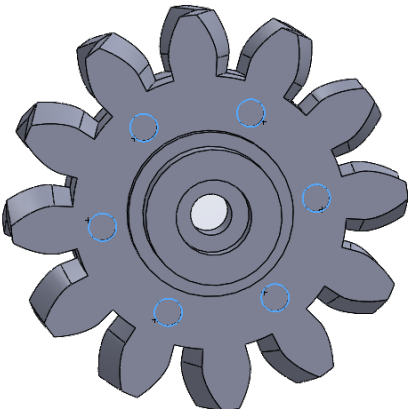
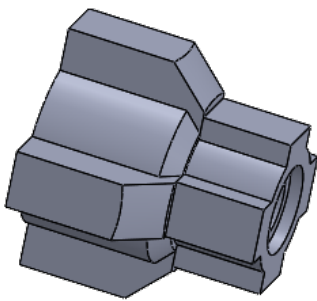




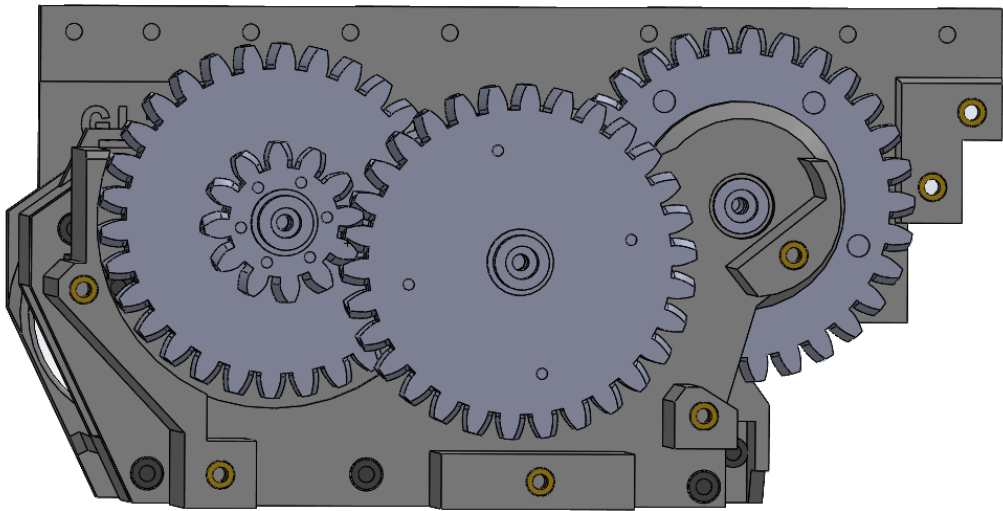
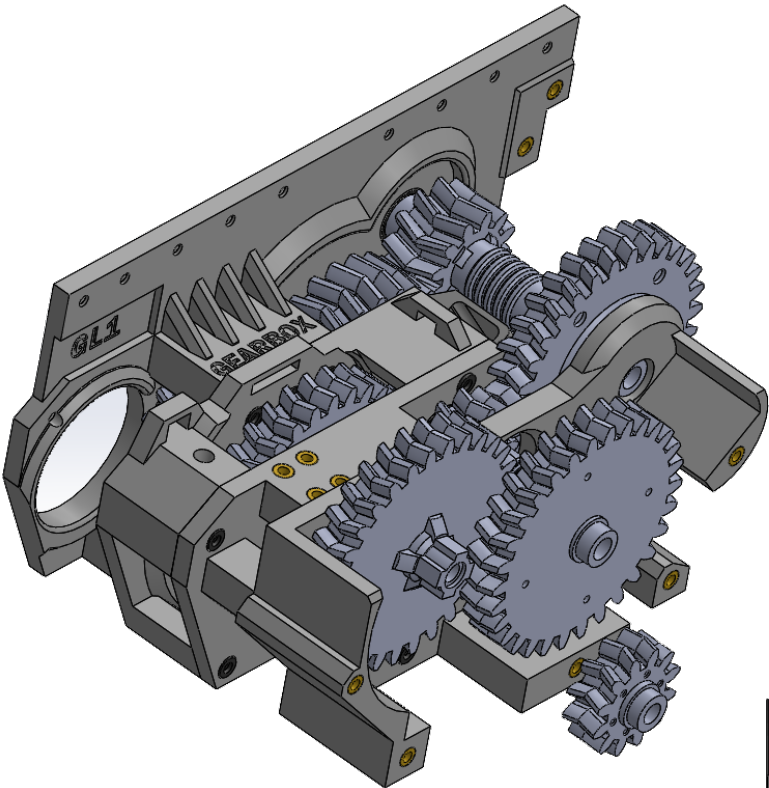
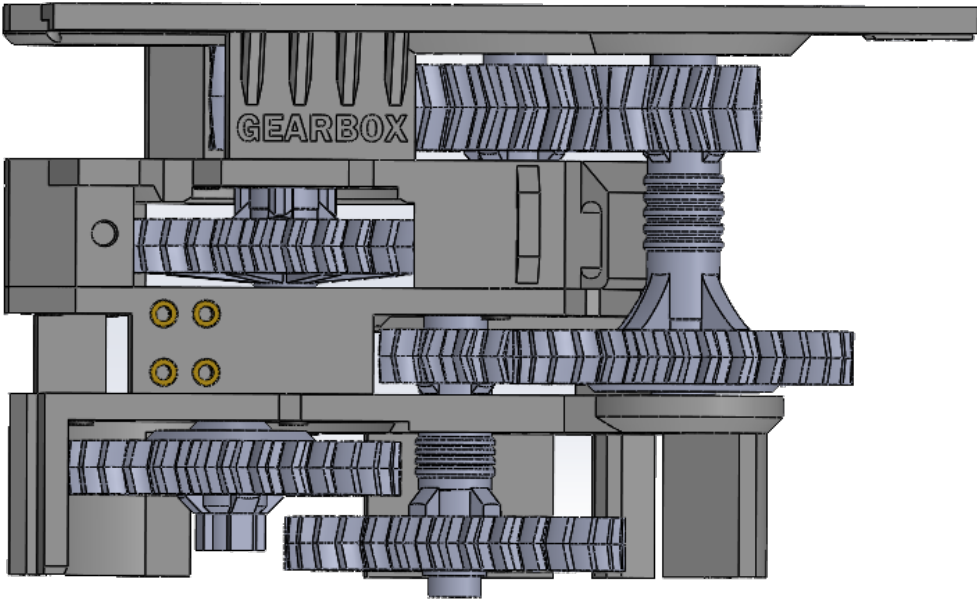
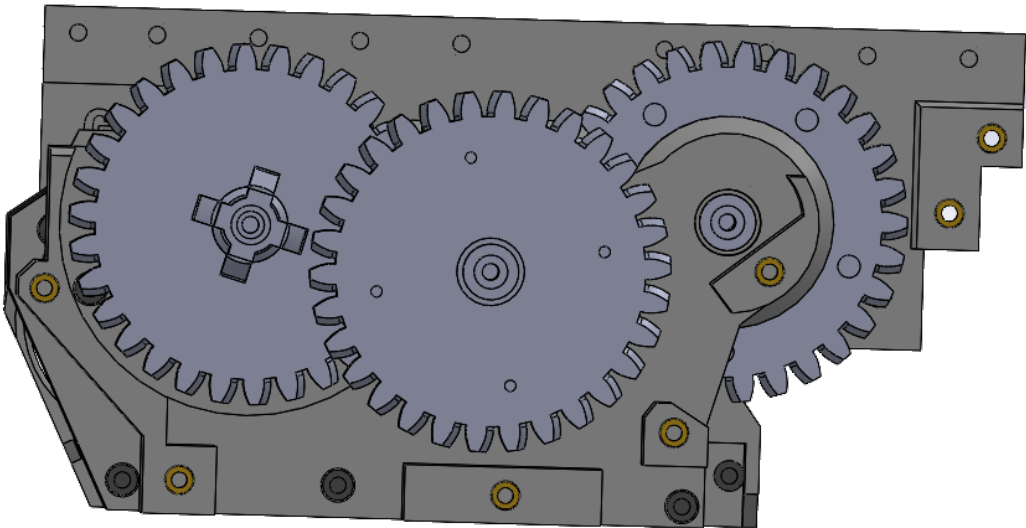


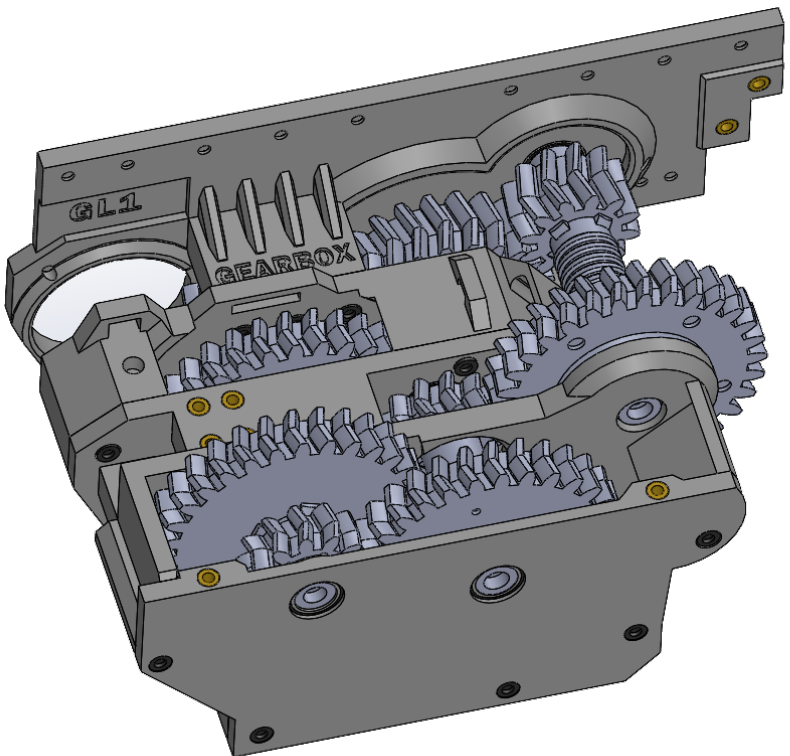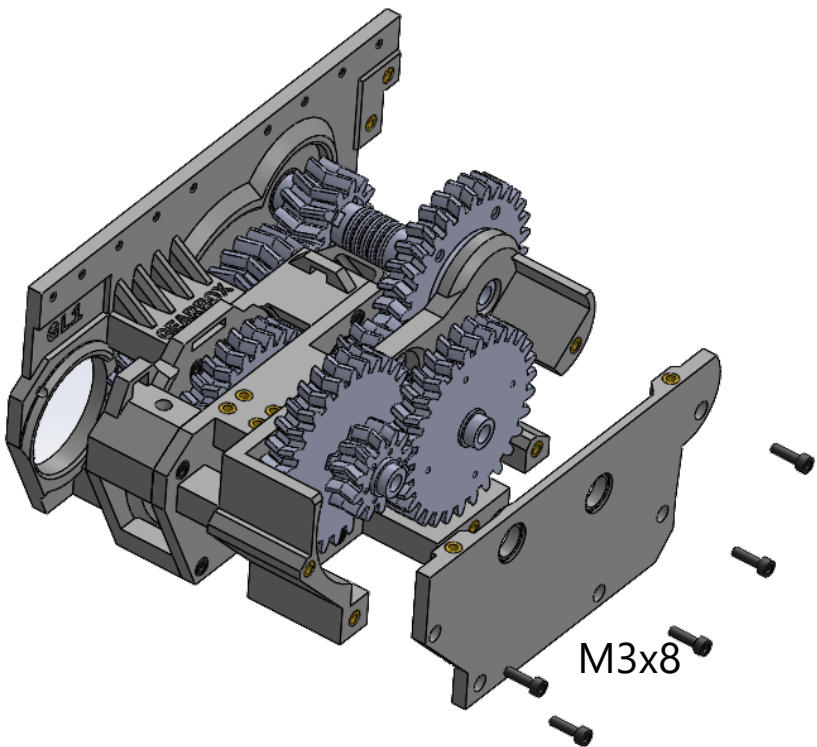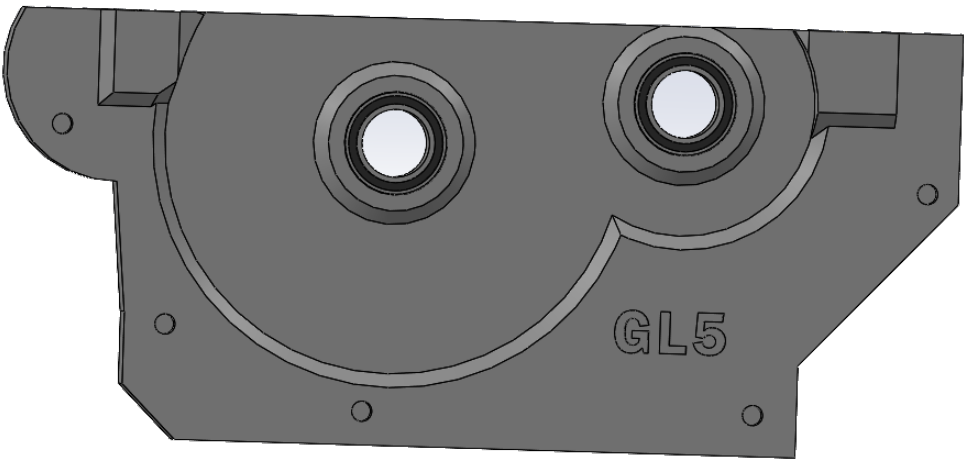
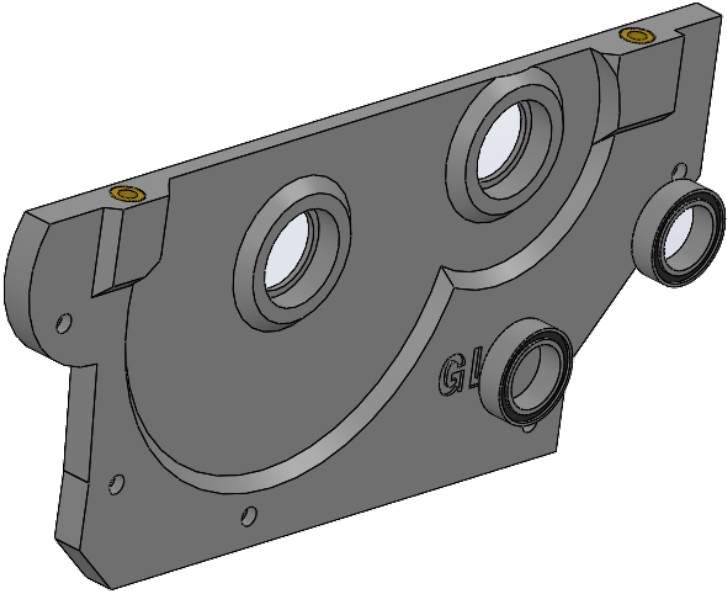
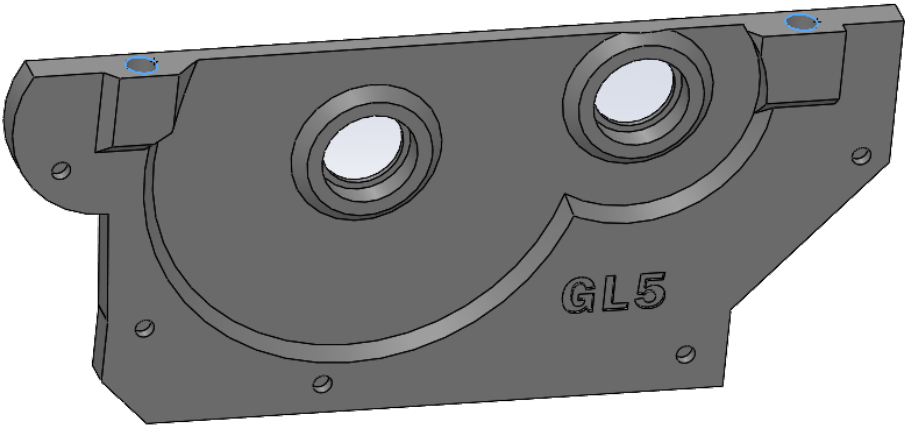


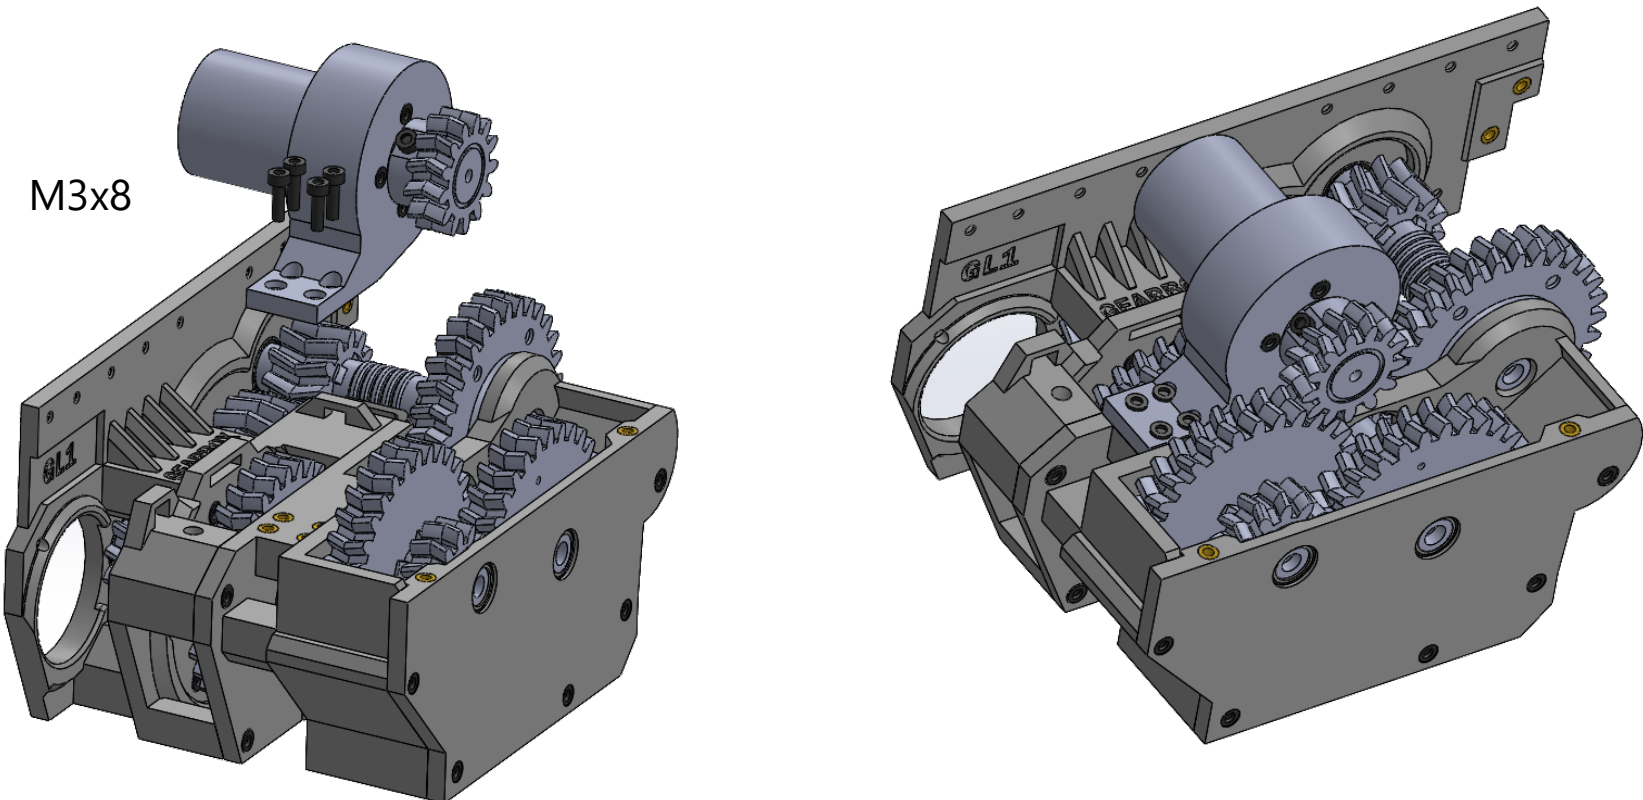
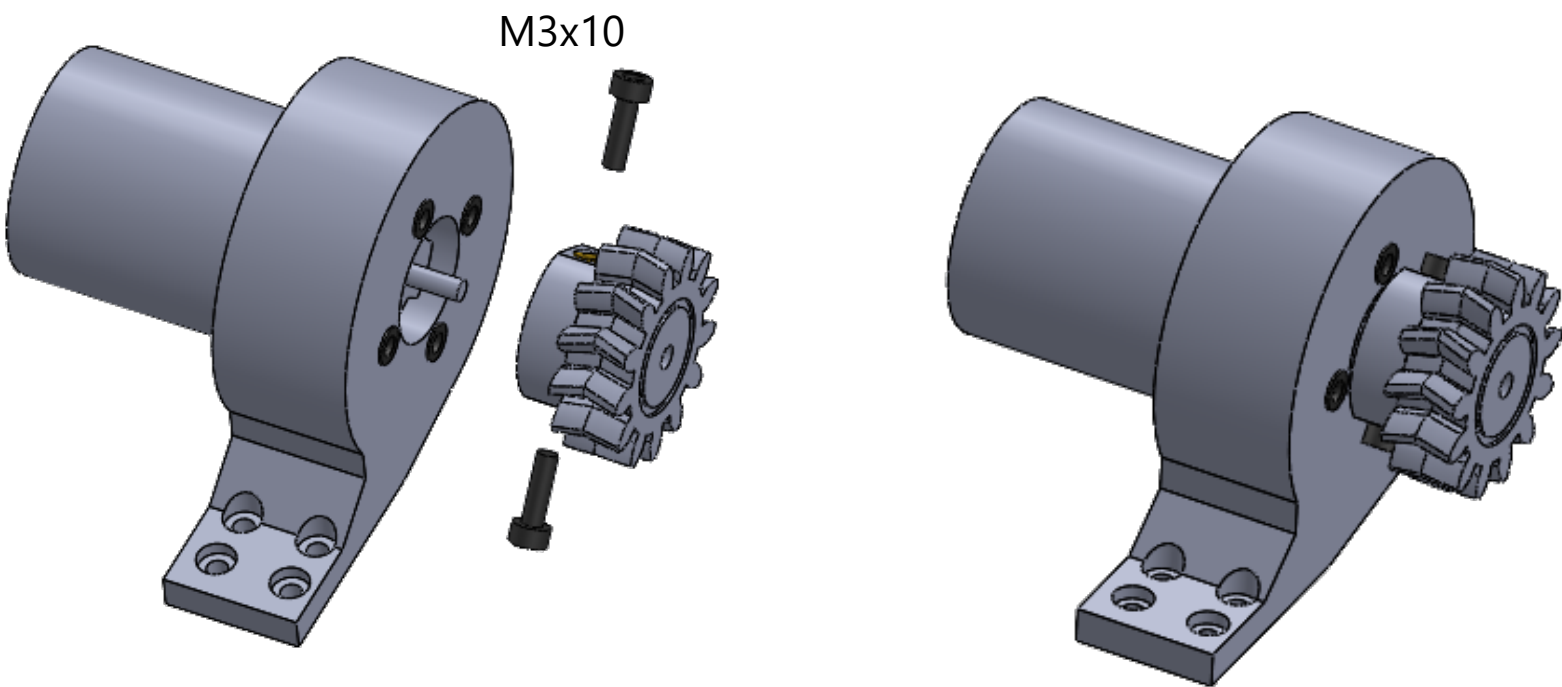
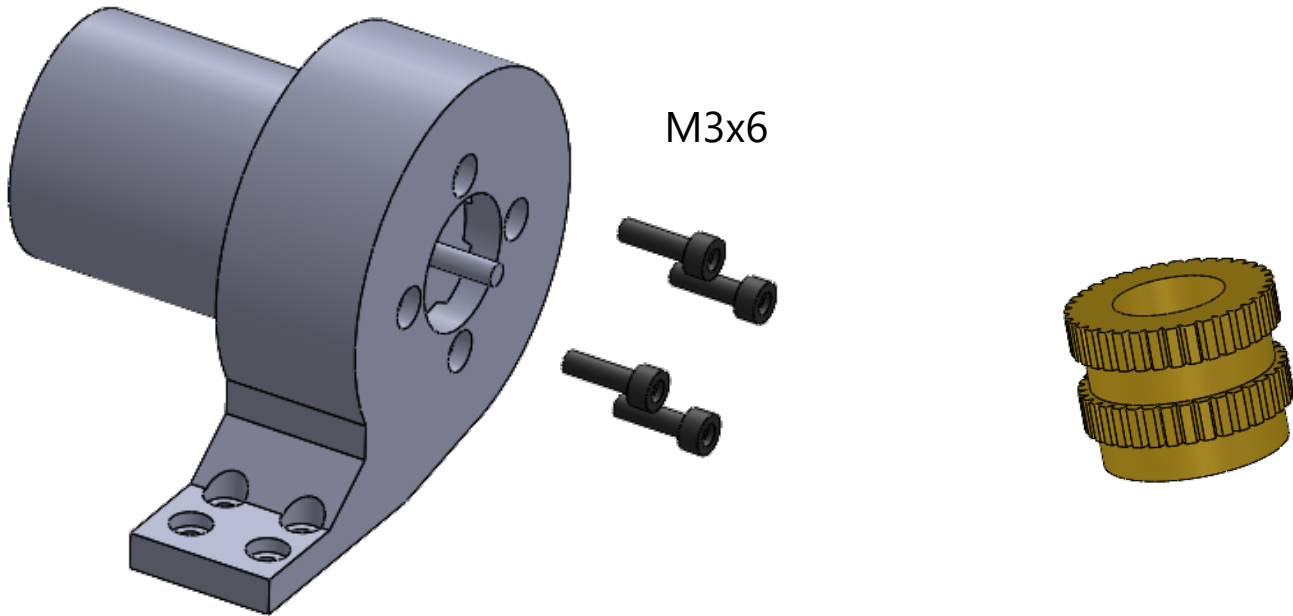









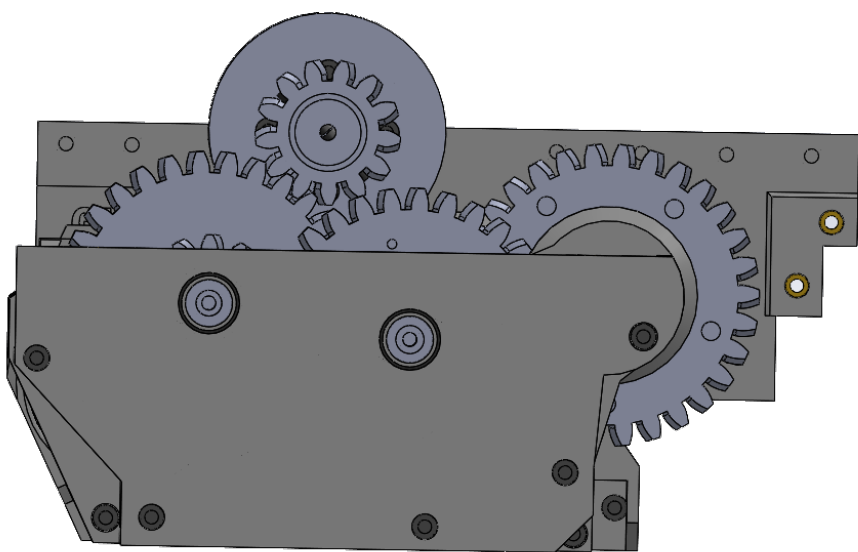


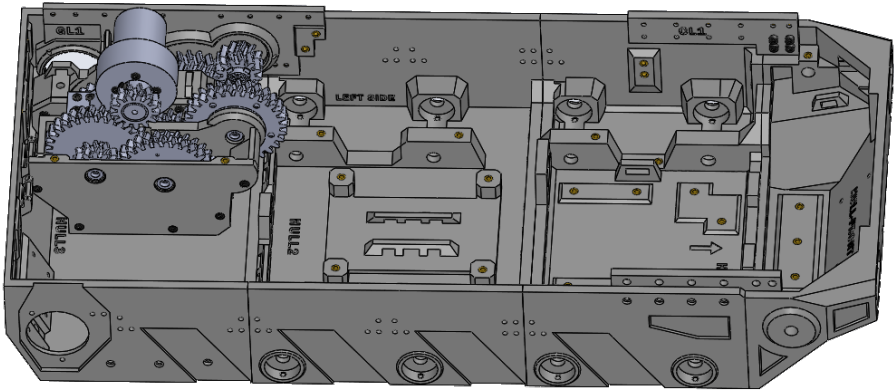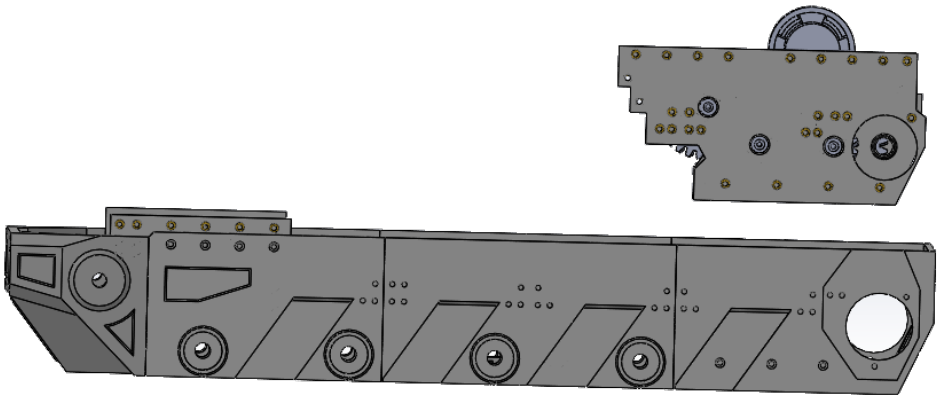


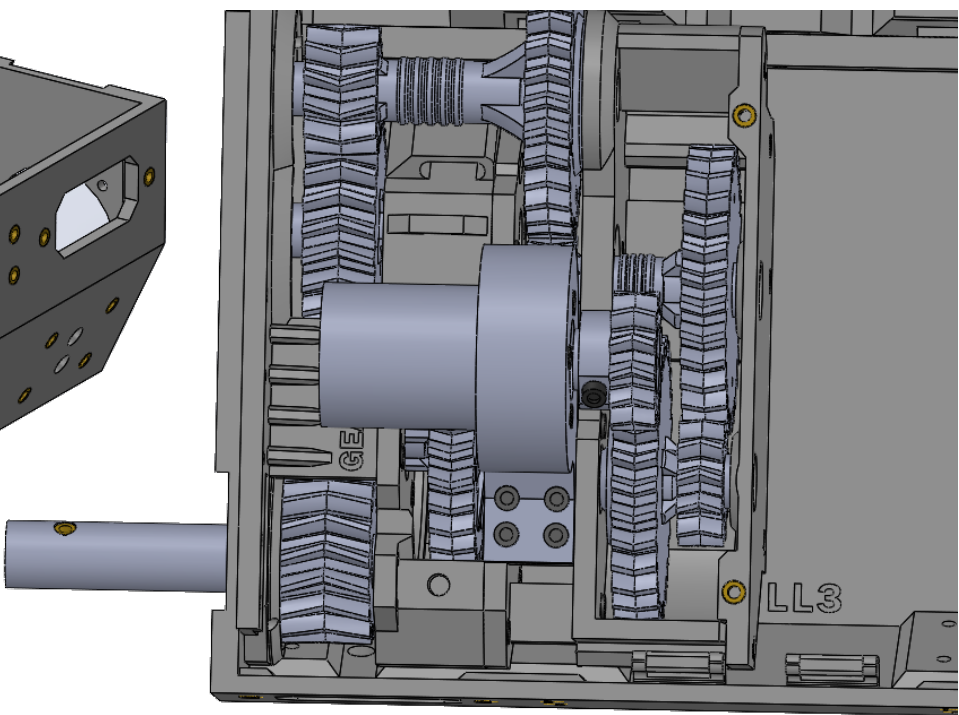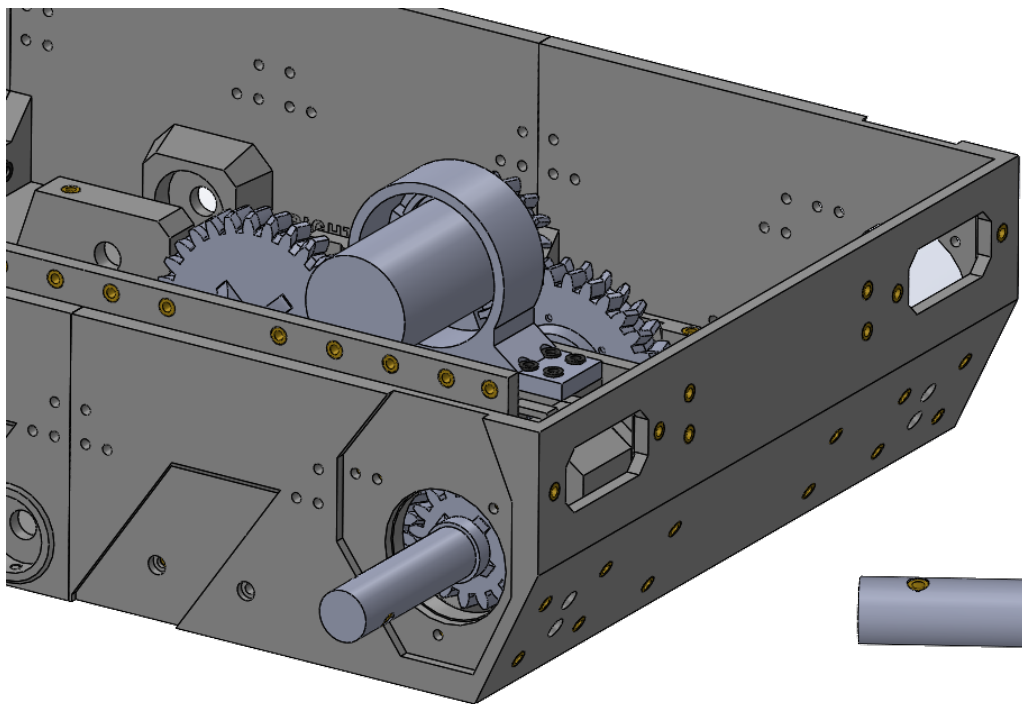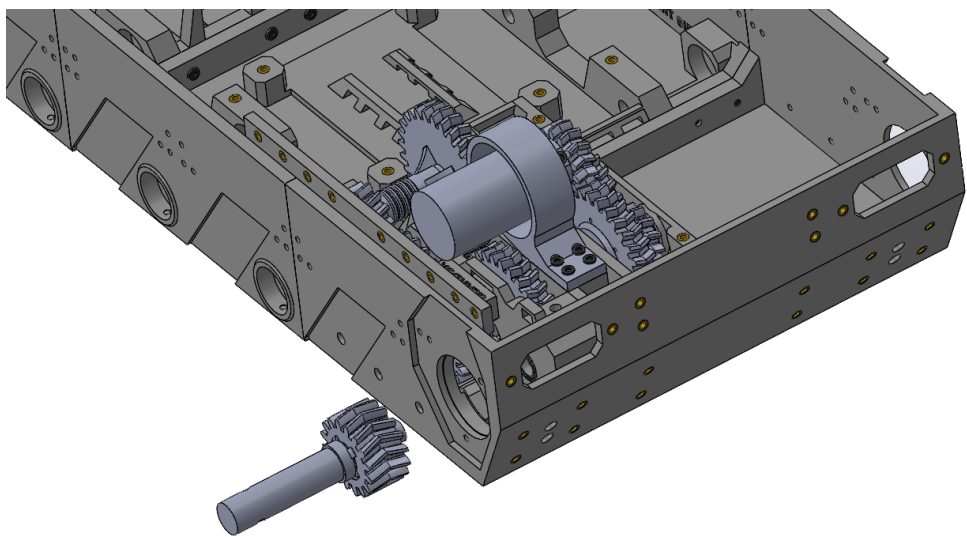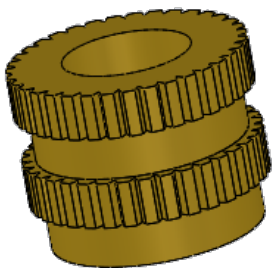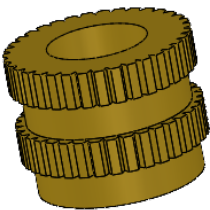
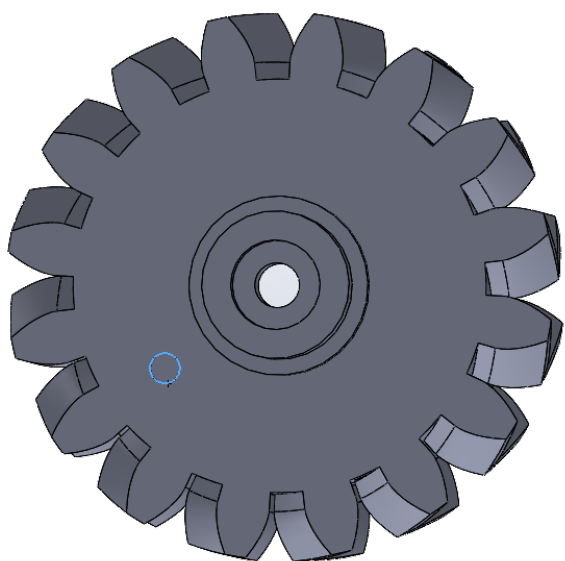


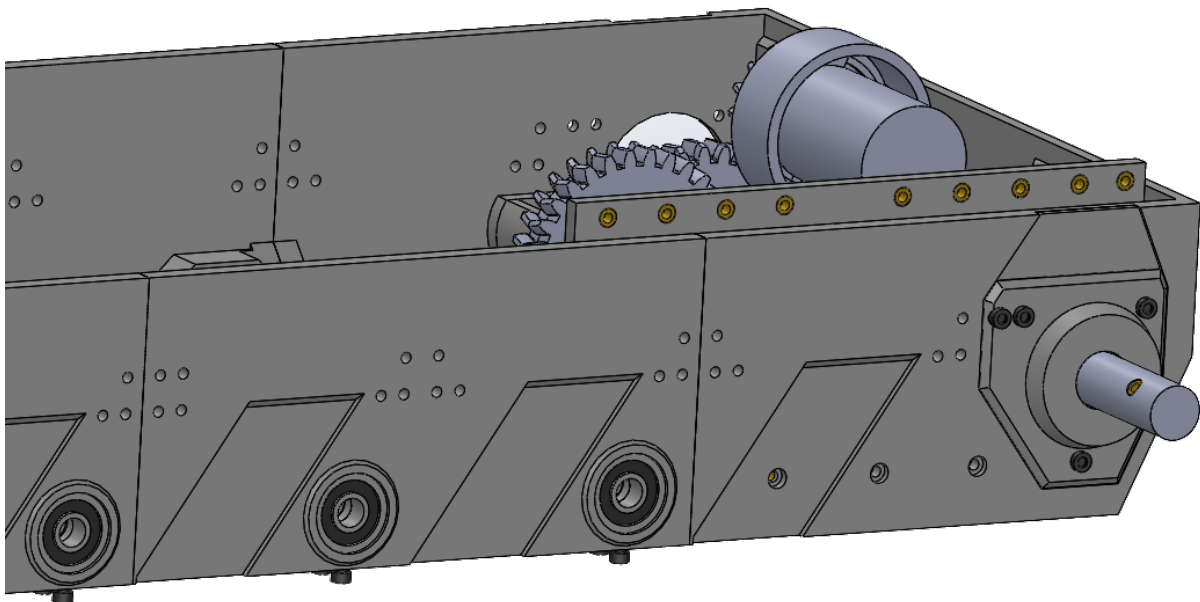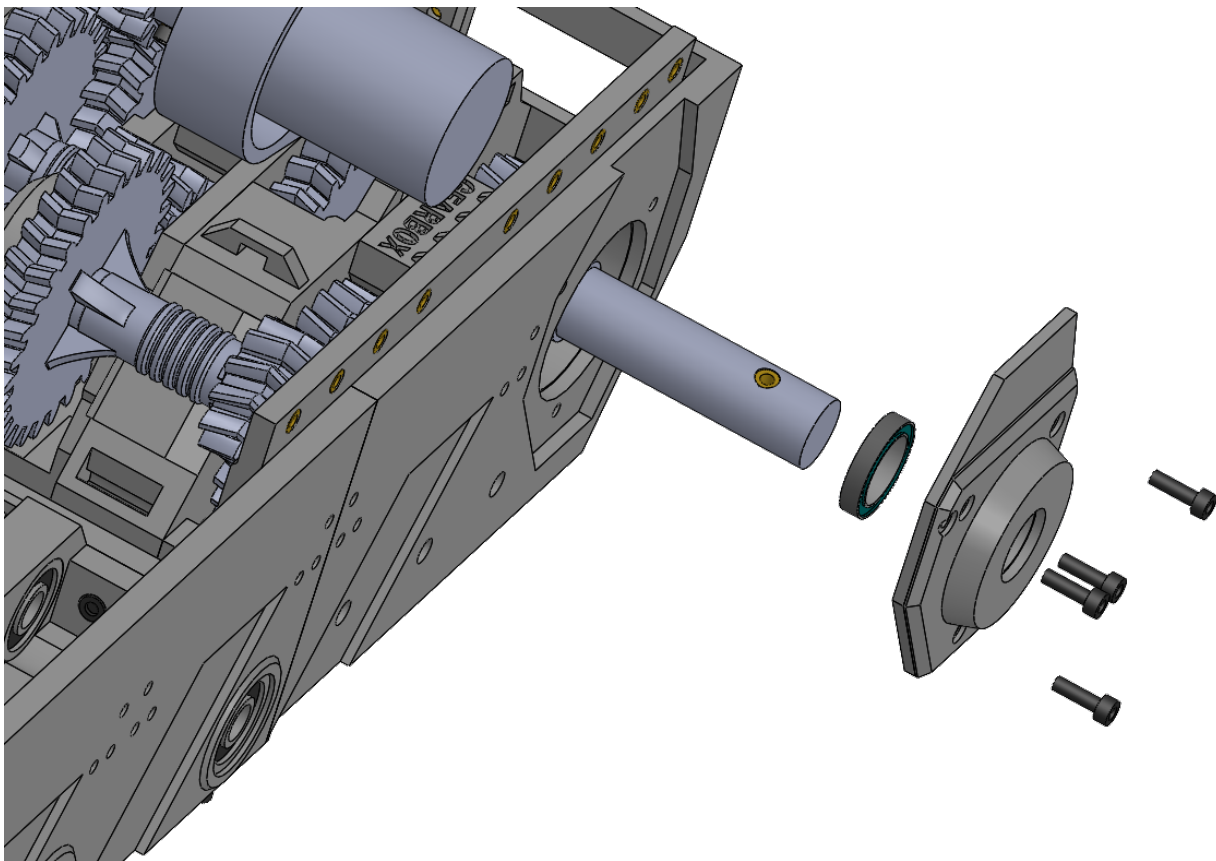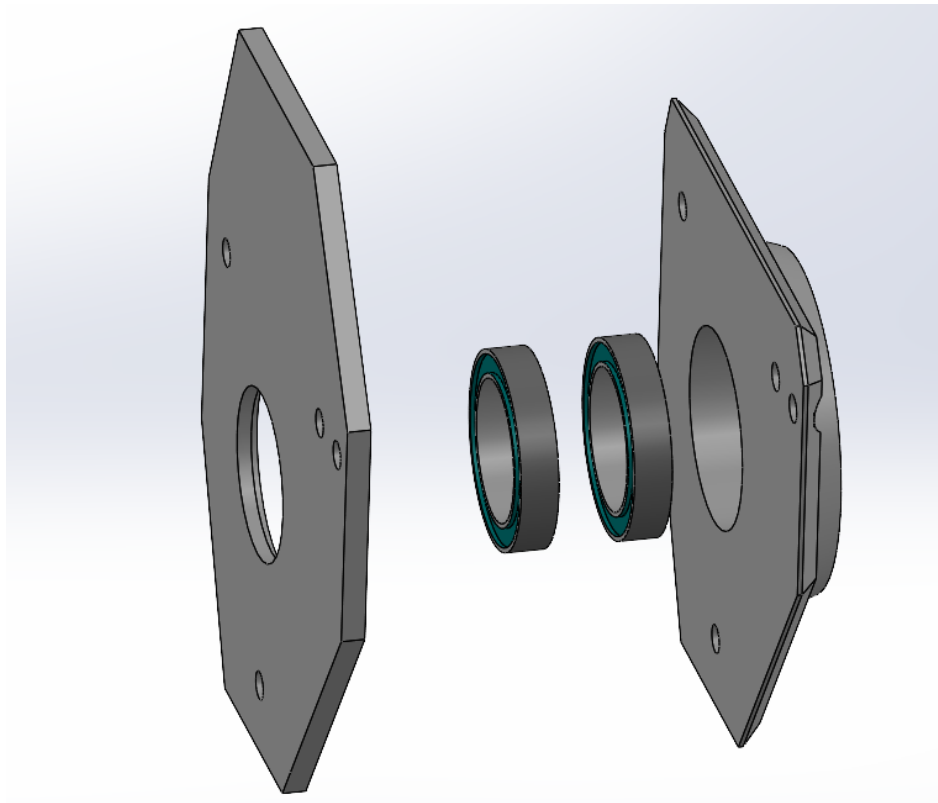

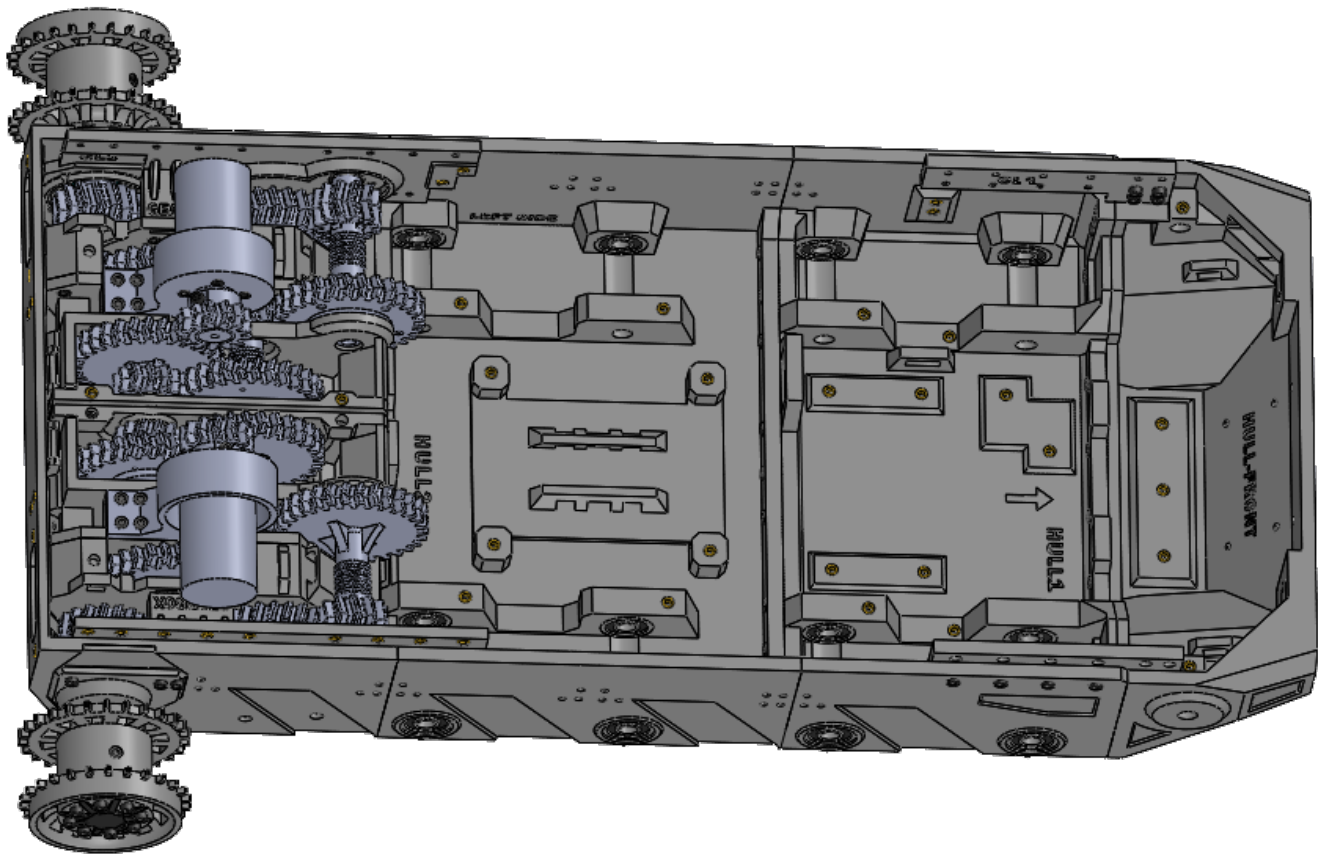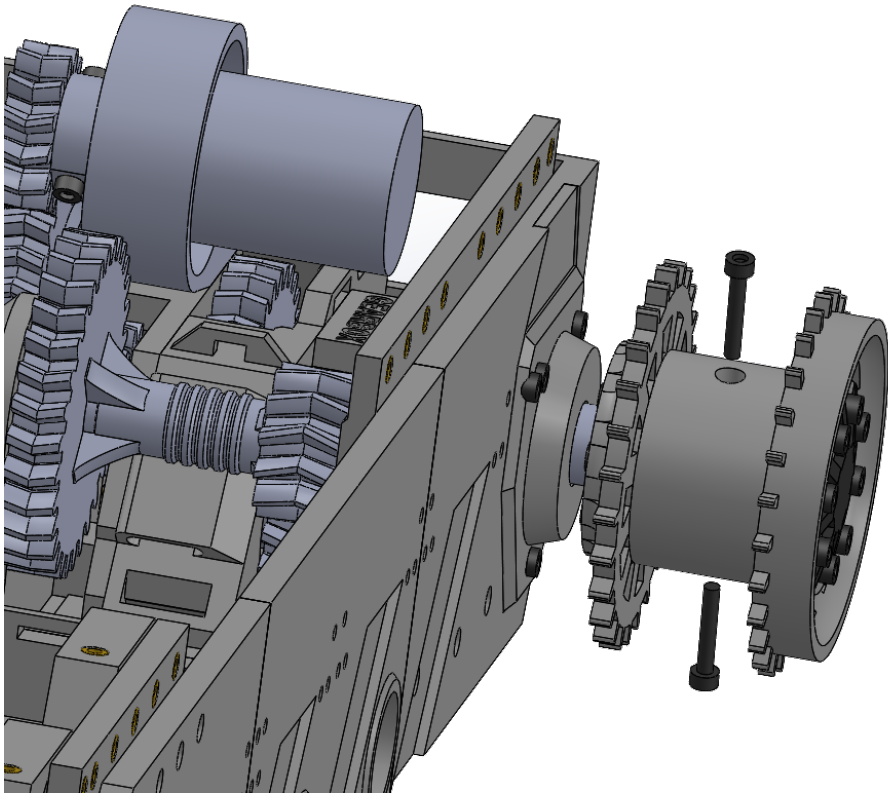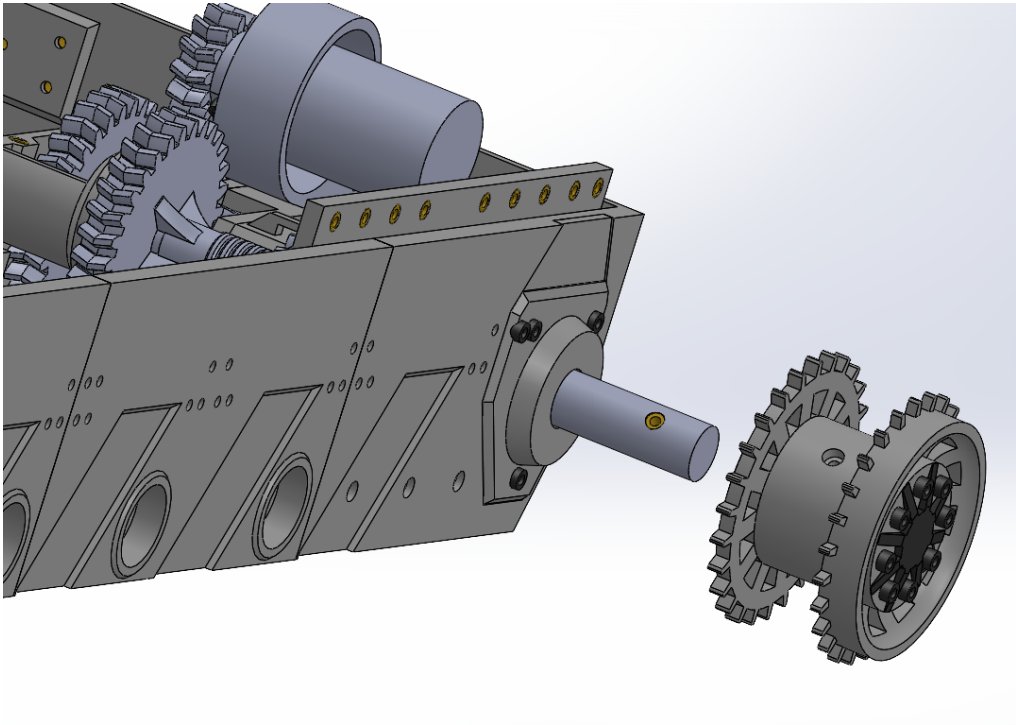


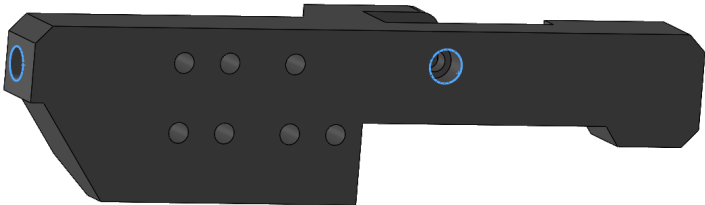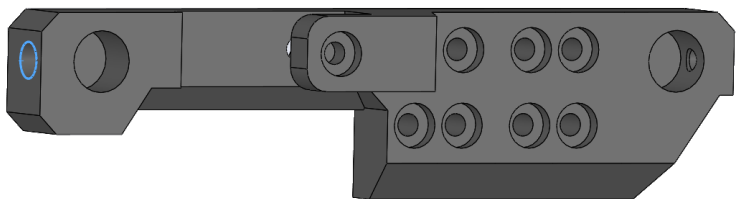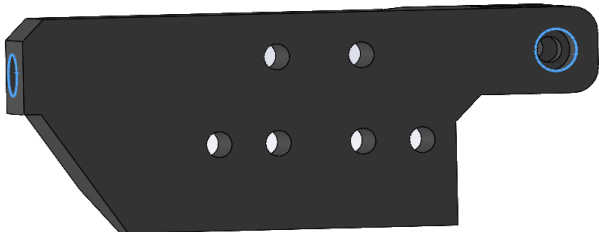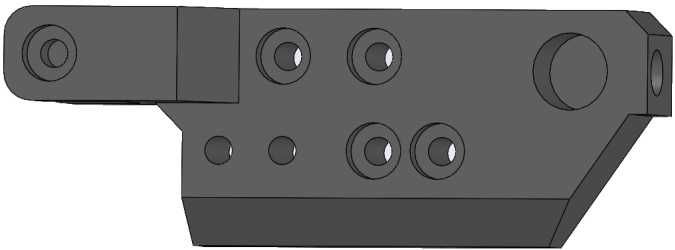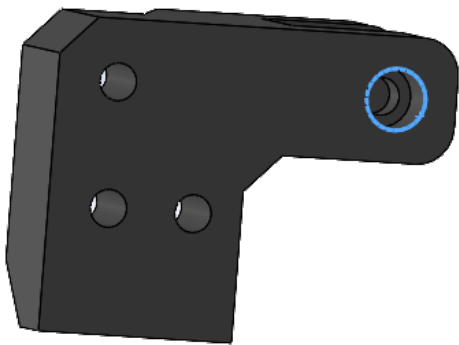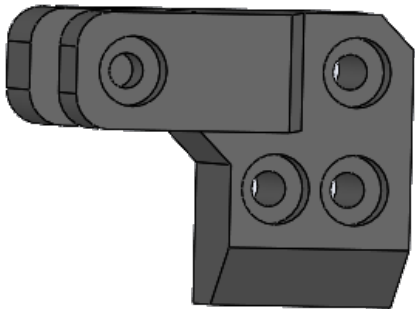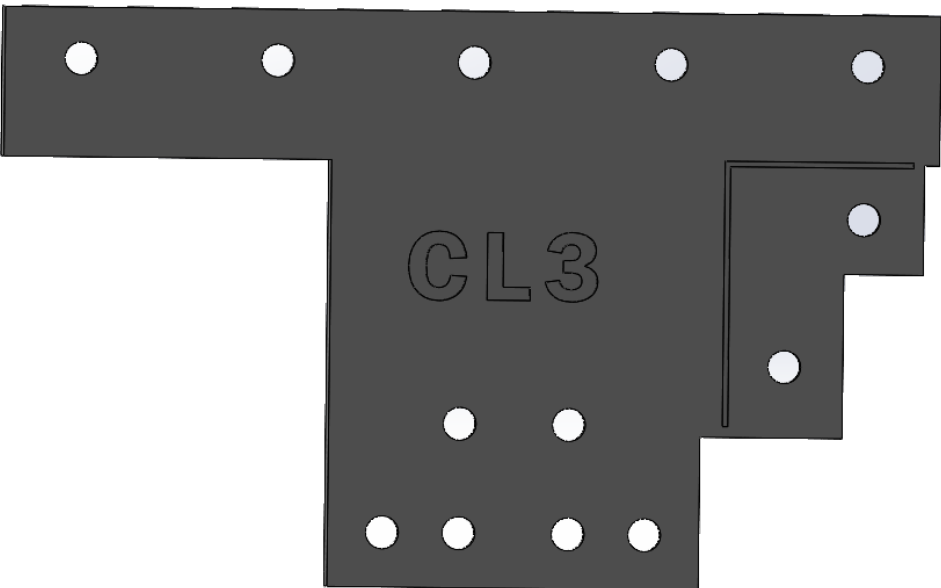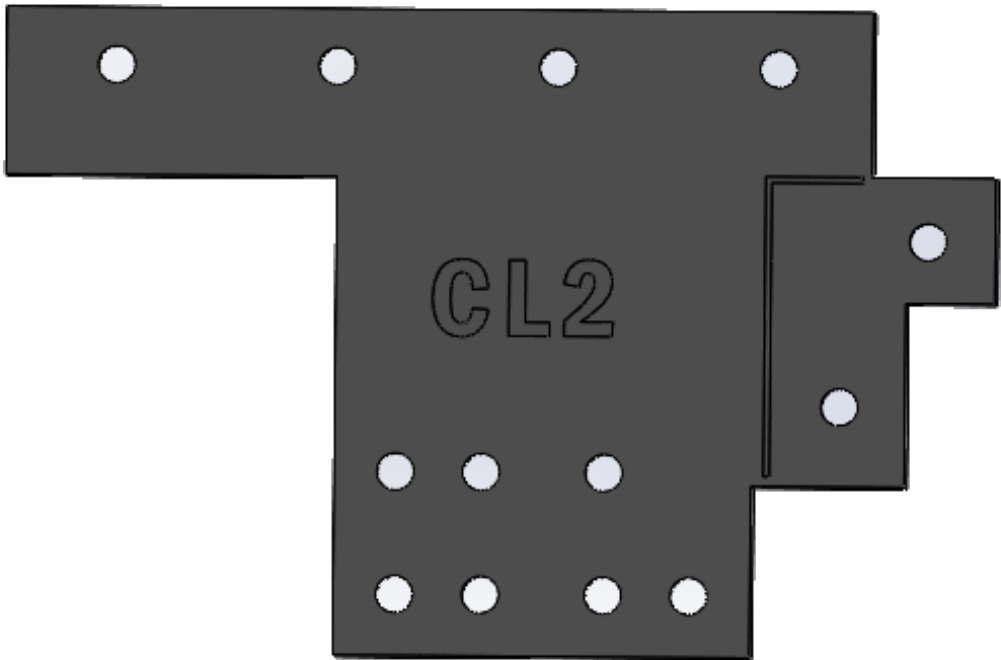

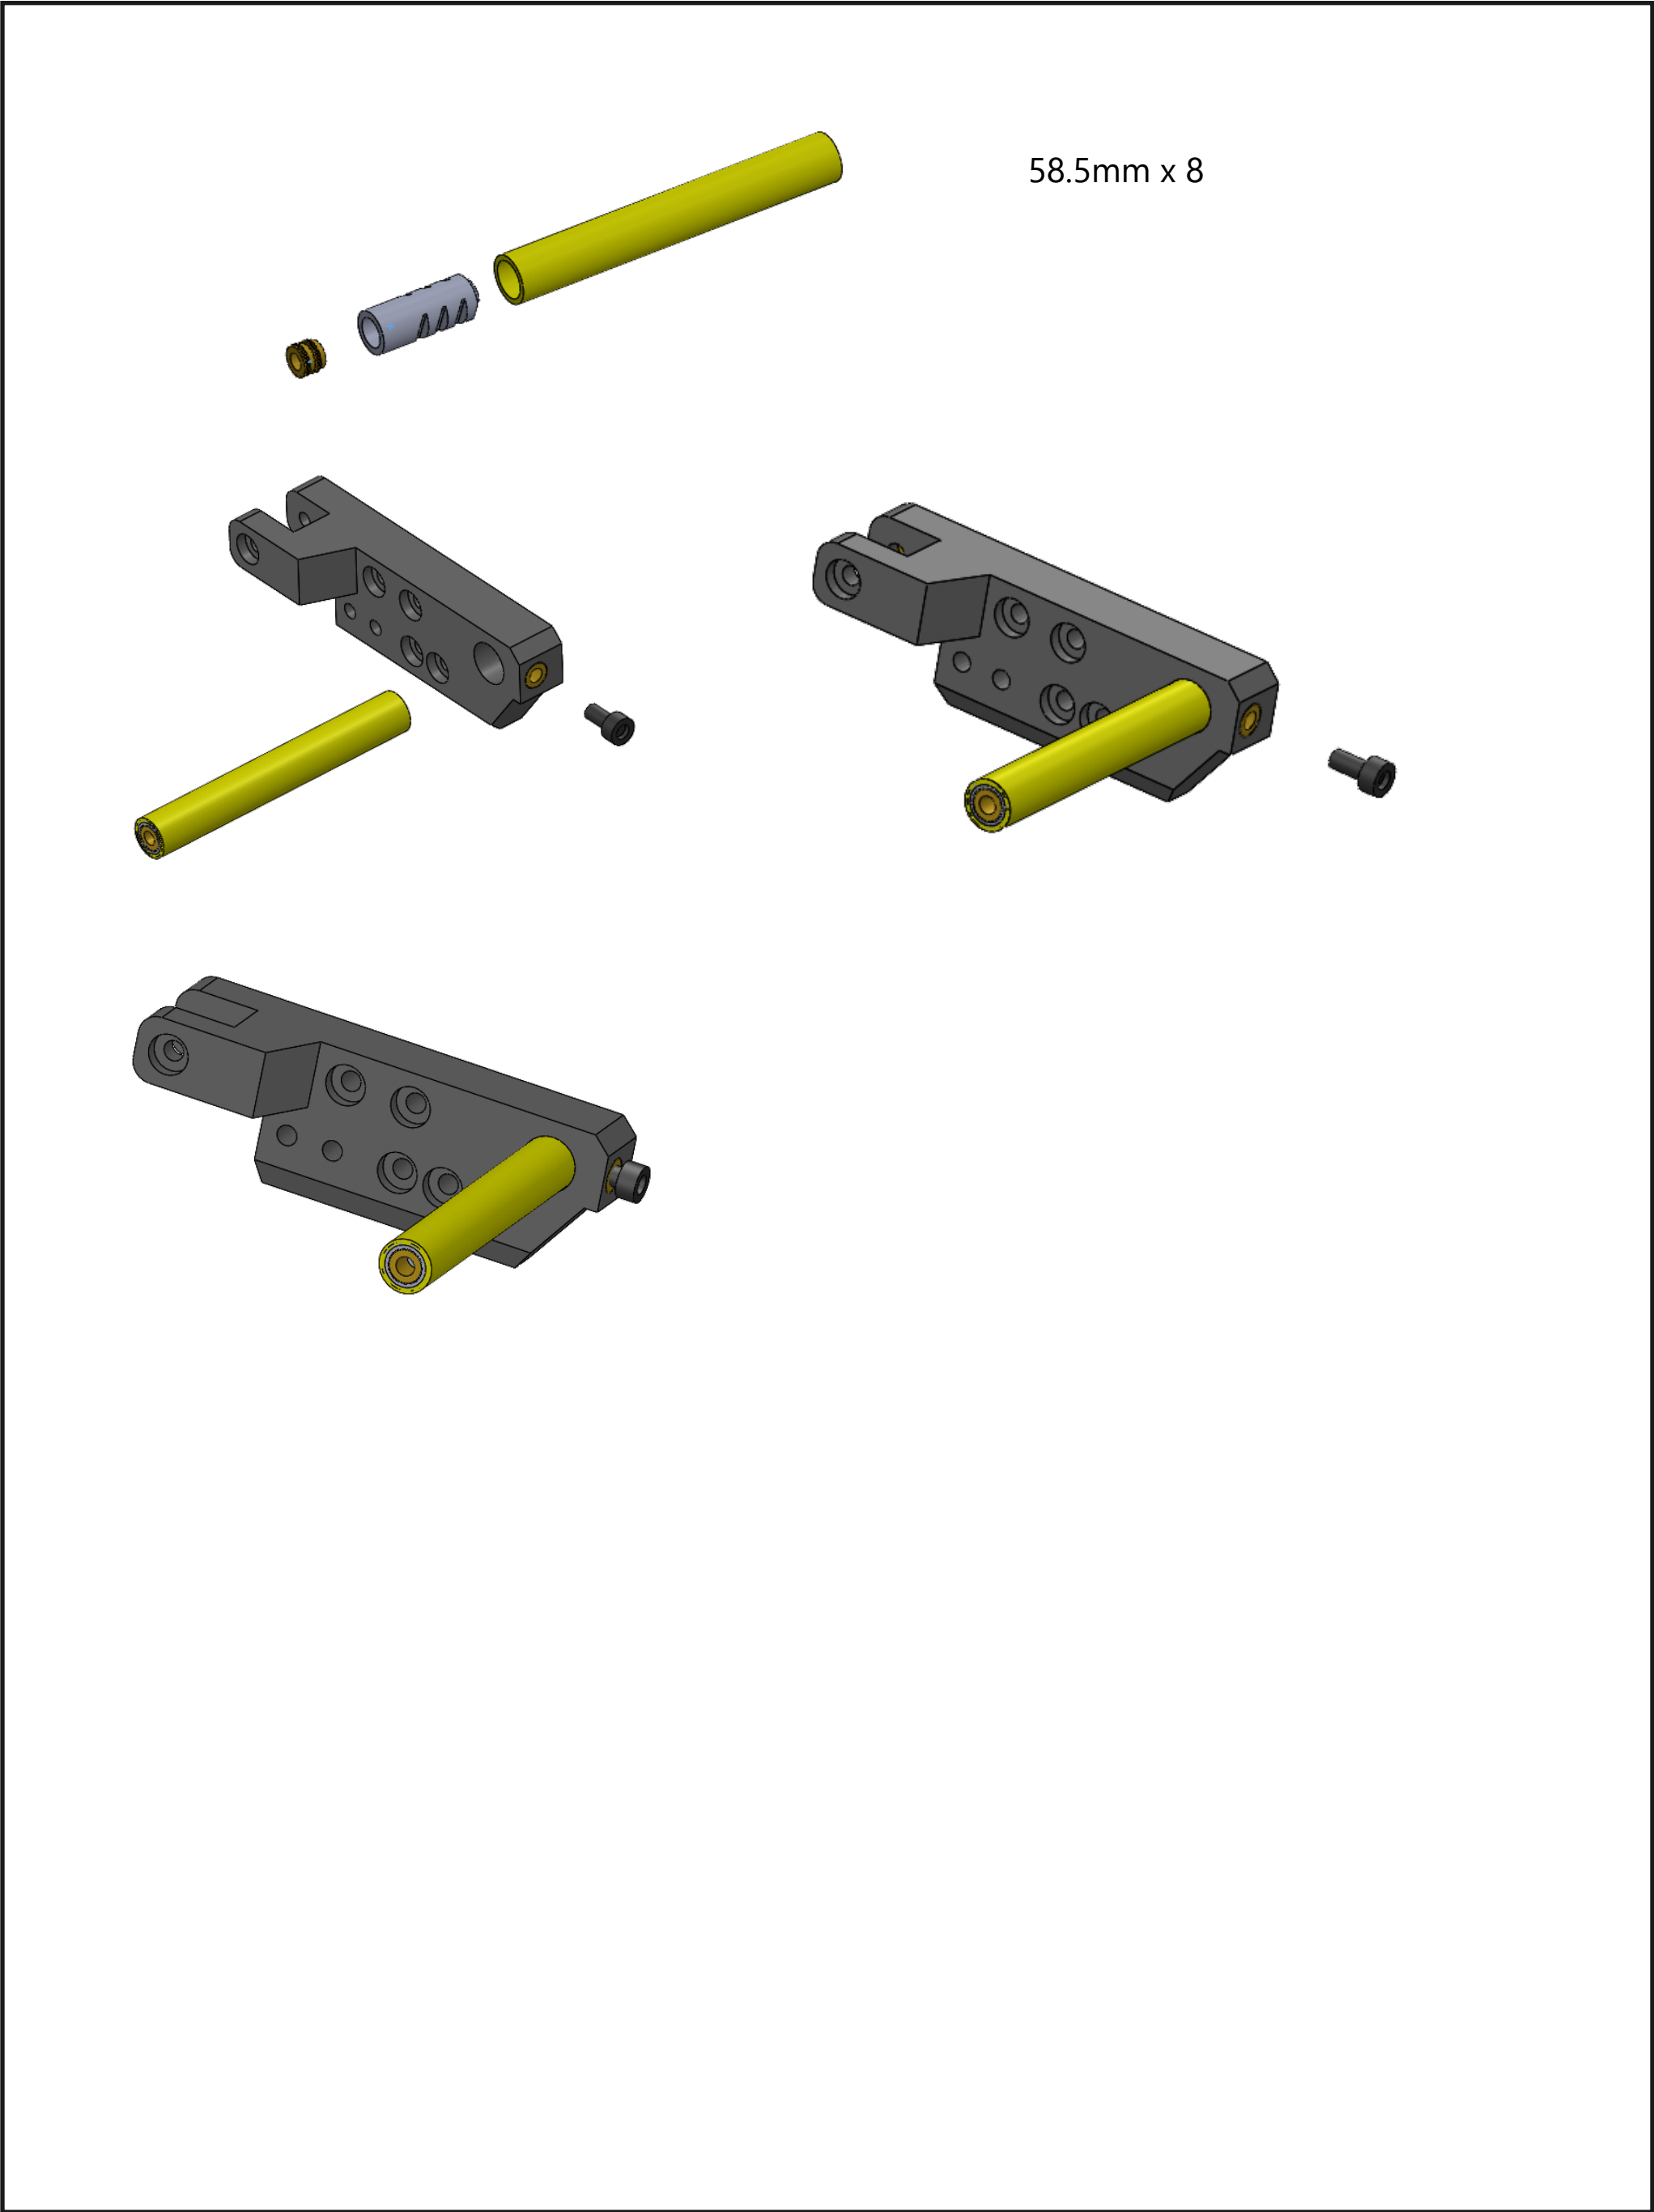


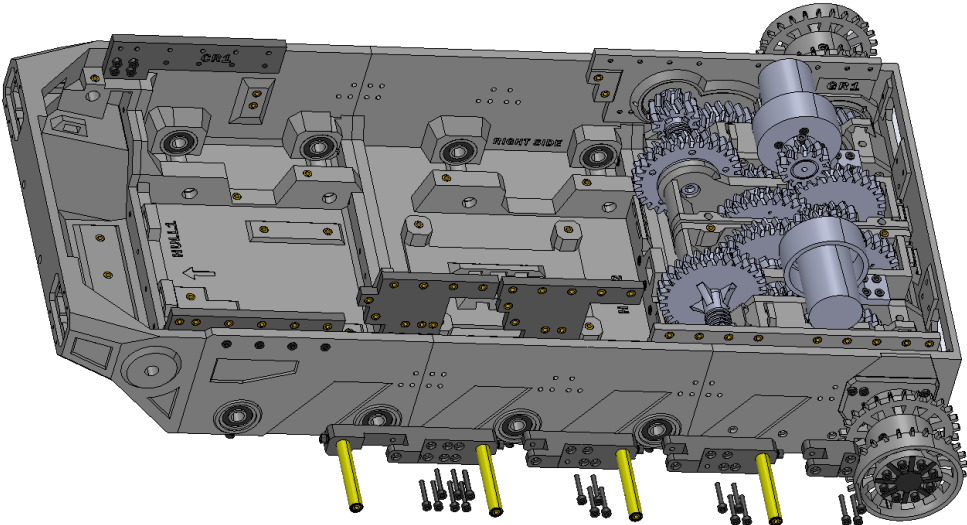
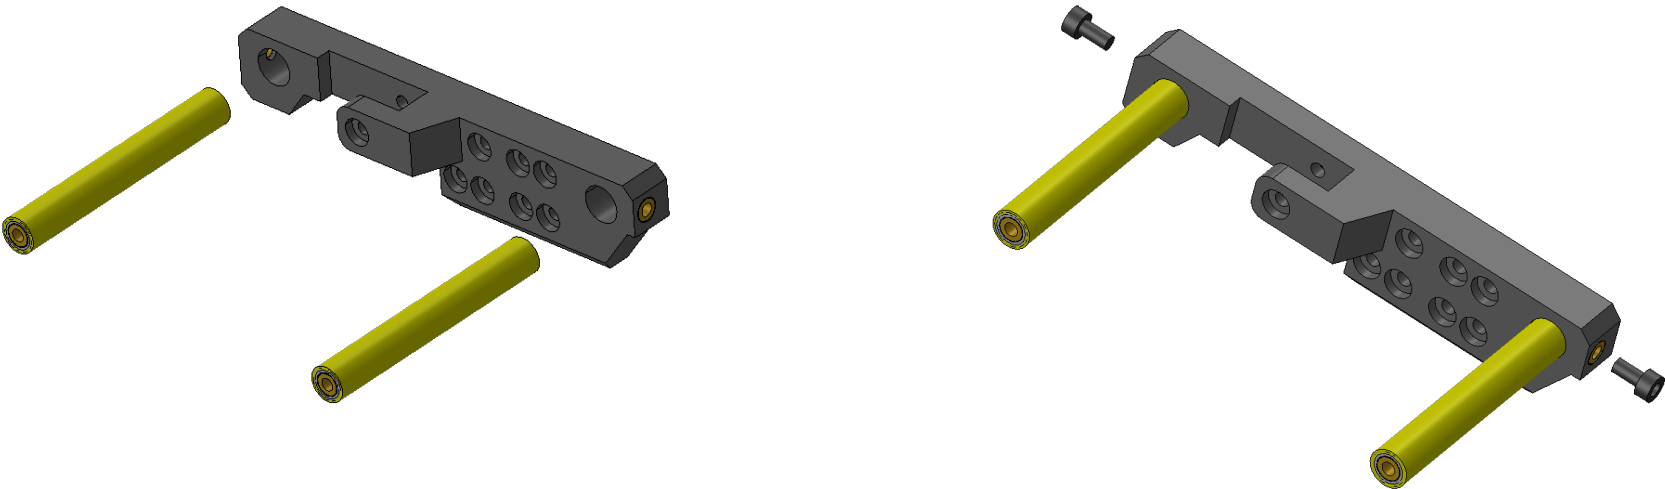


M3x18


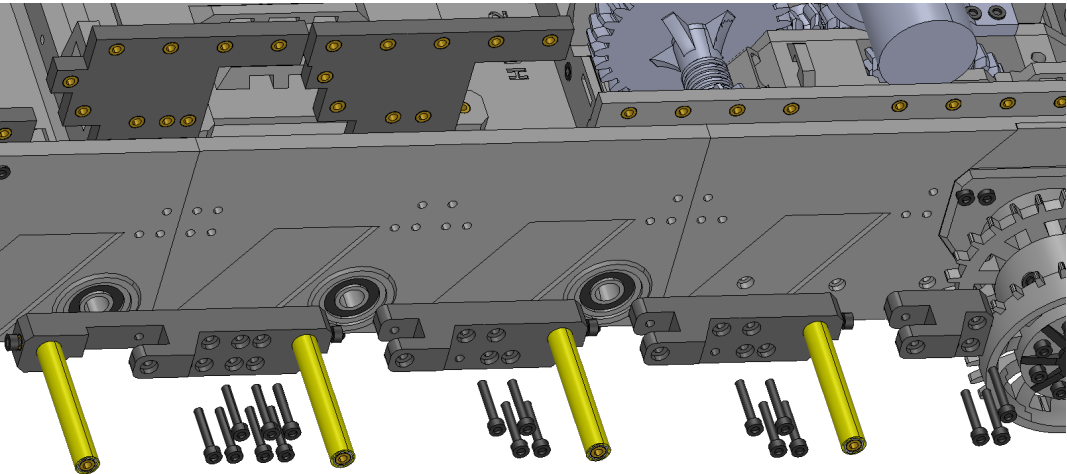







42






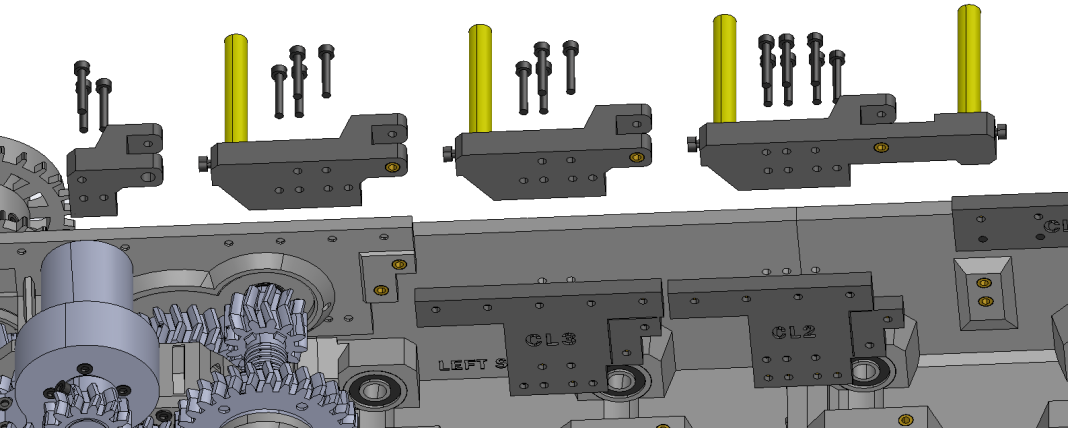



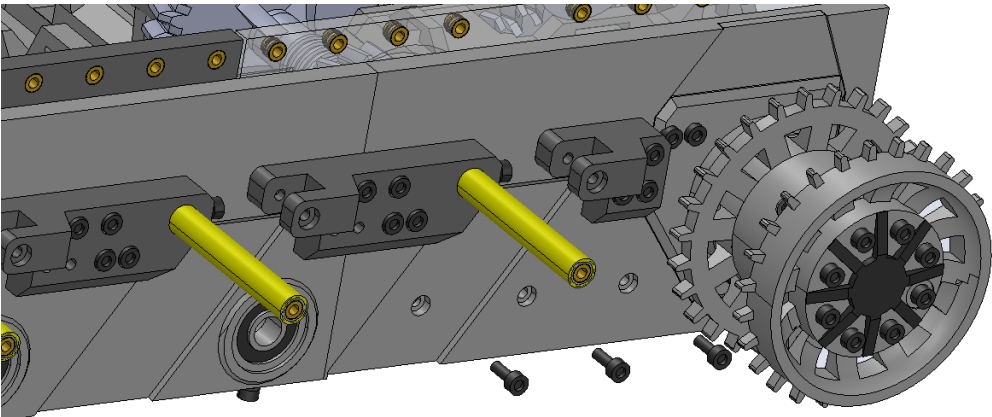
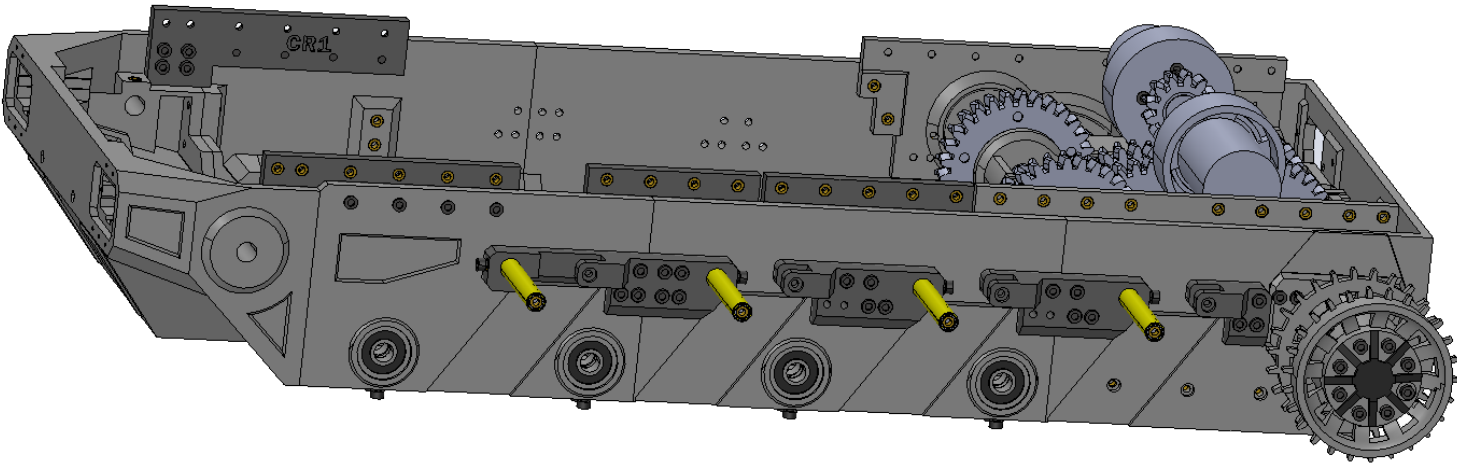





M3x8


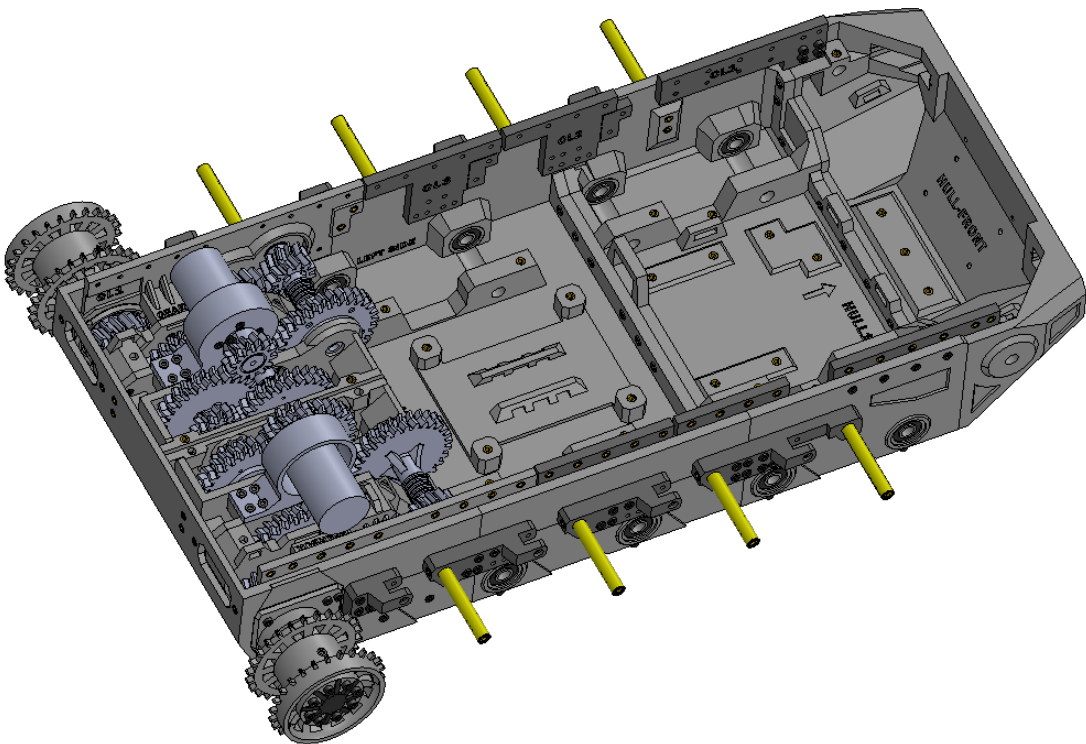
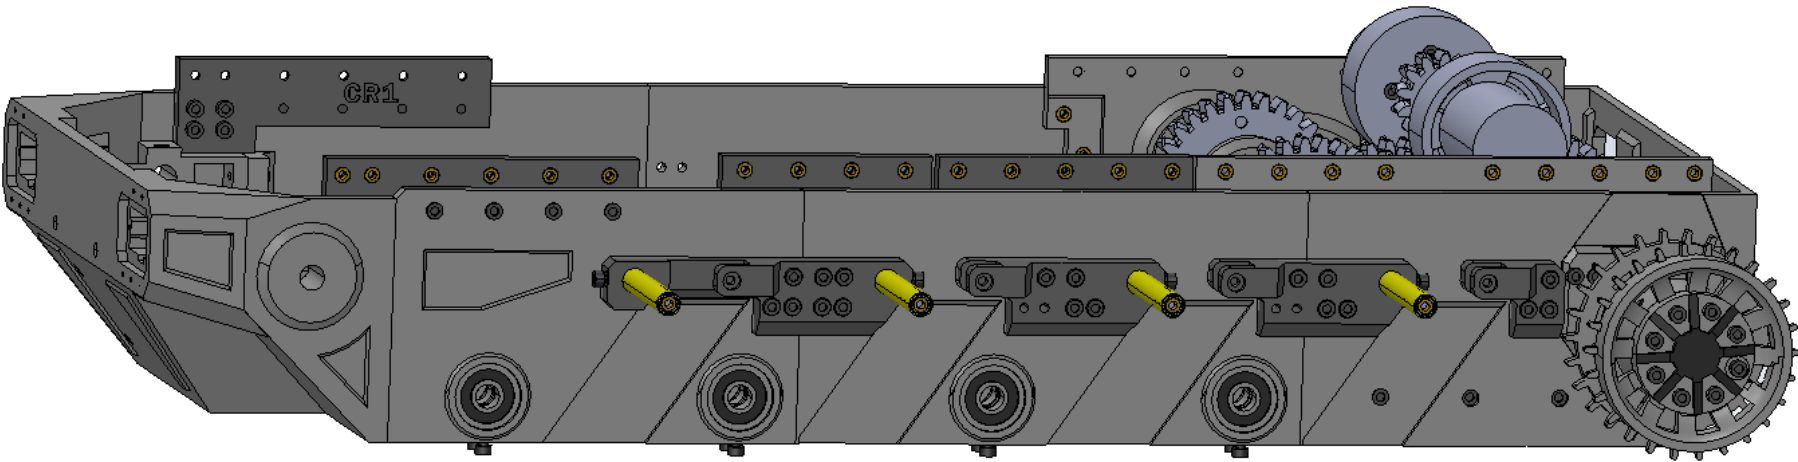


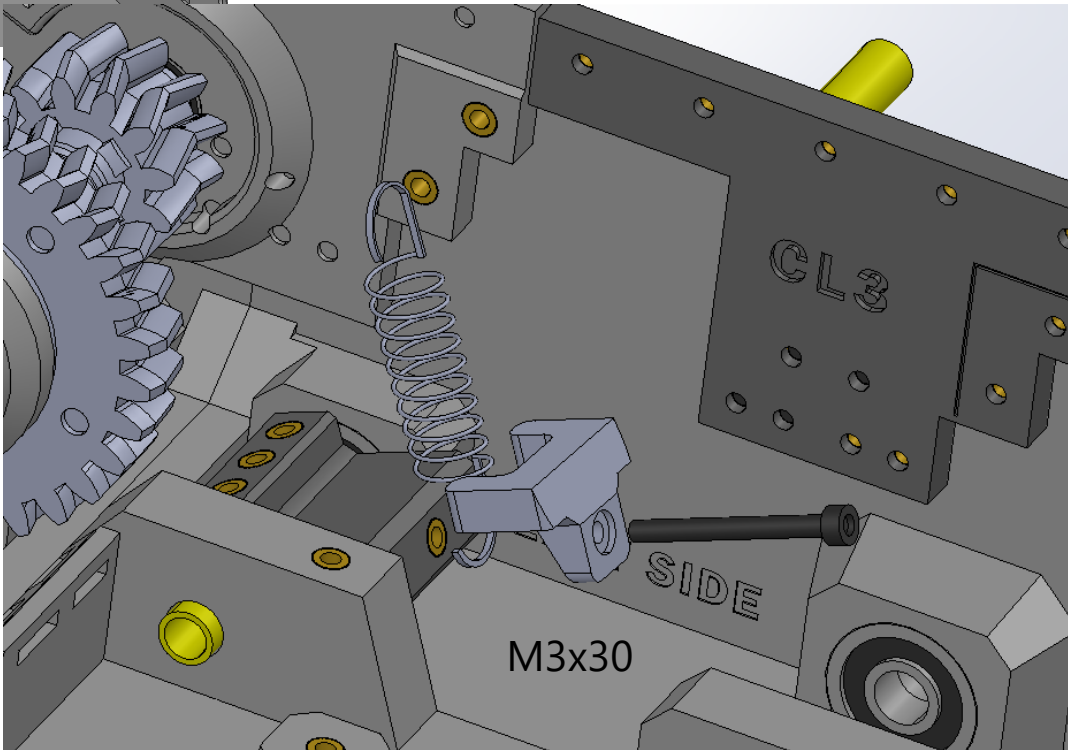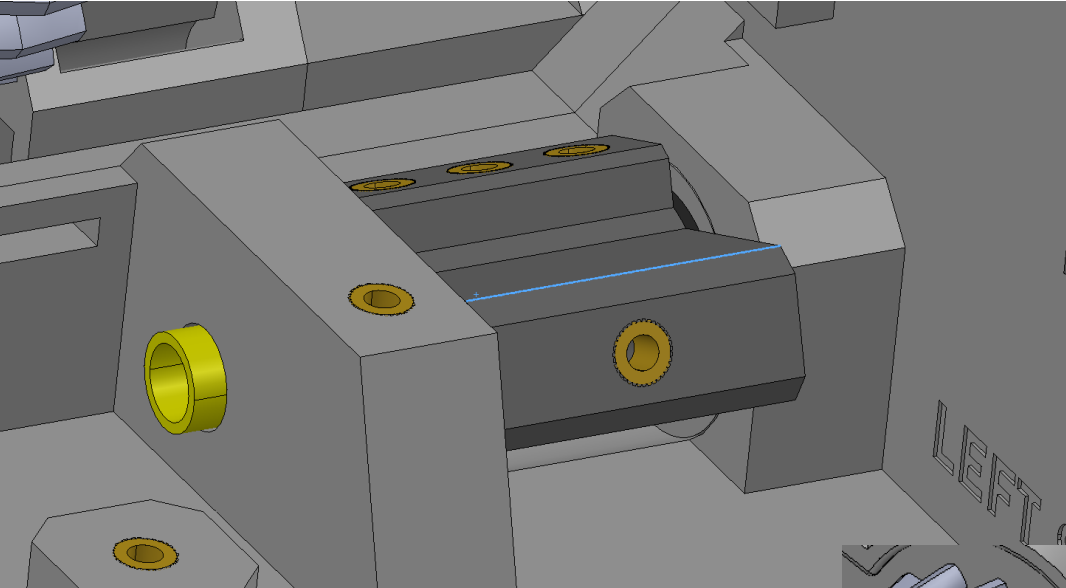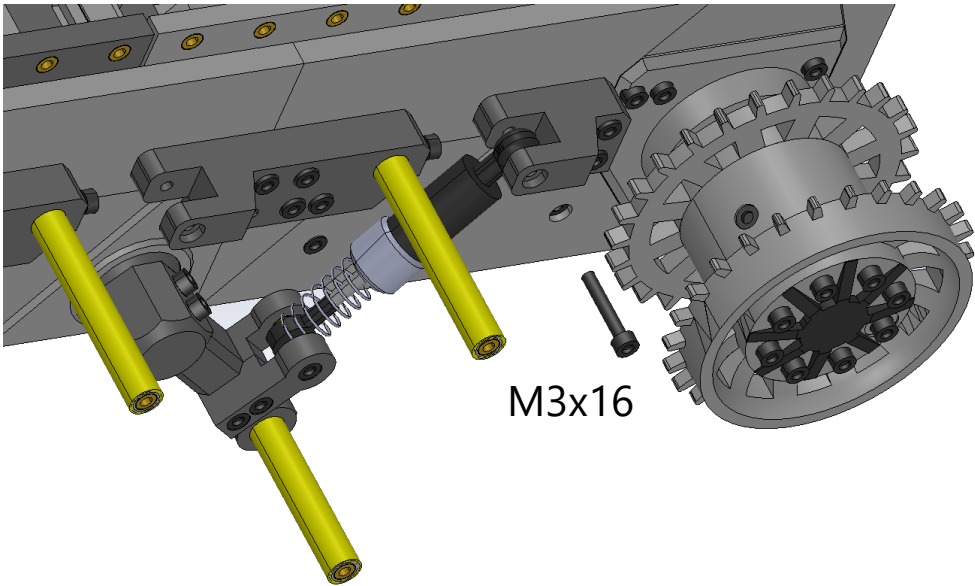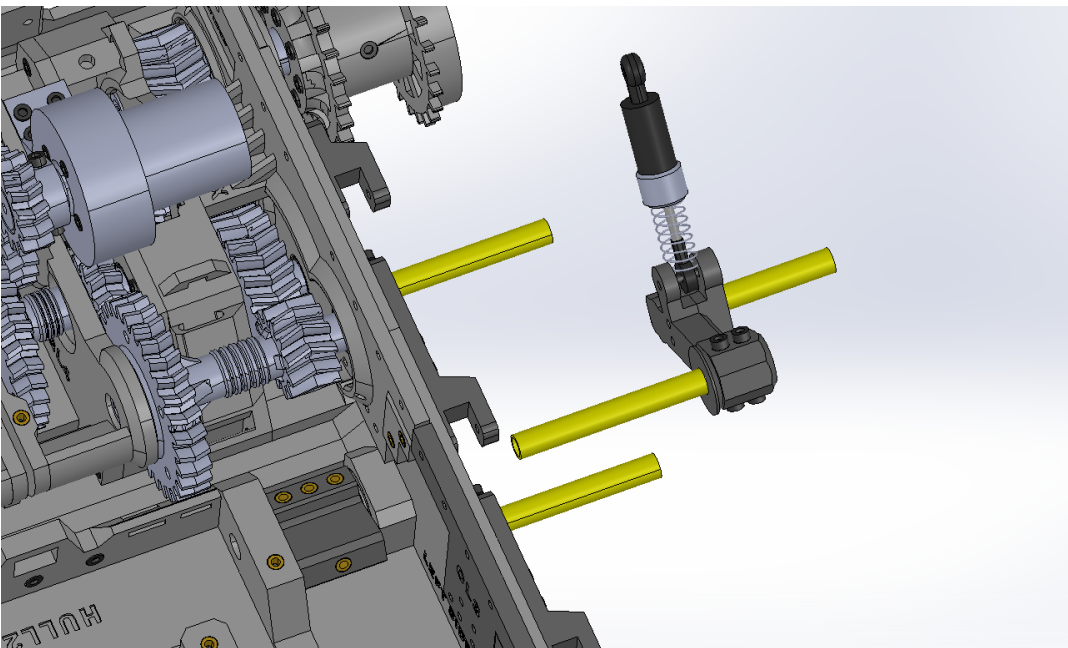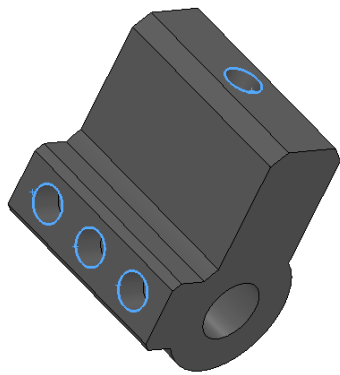

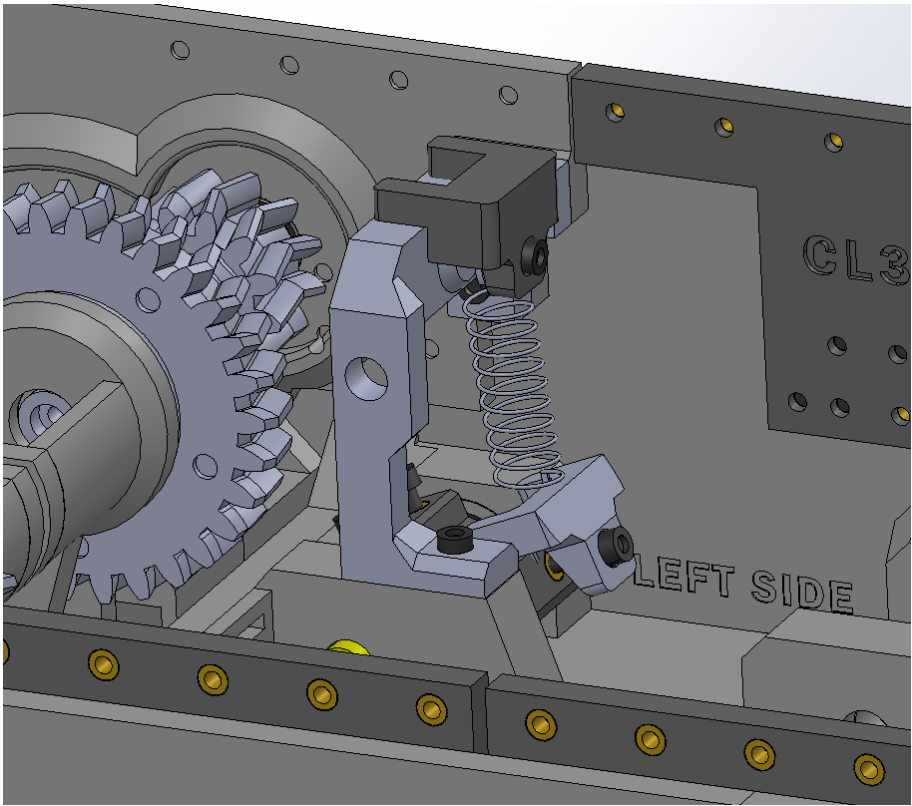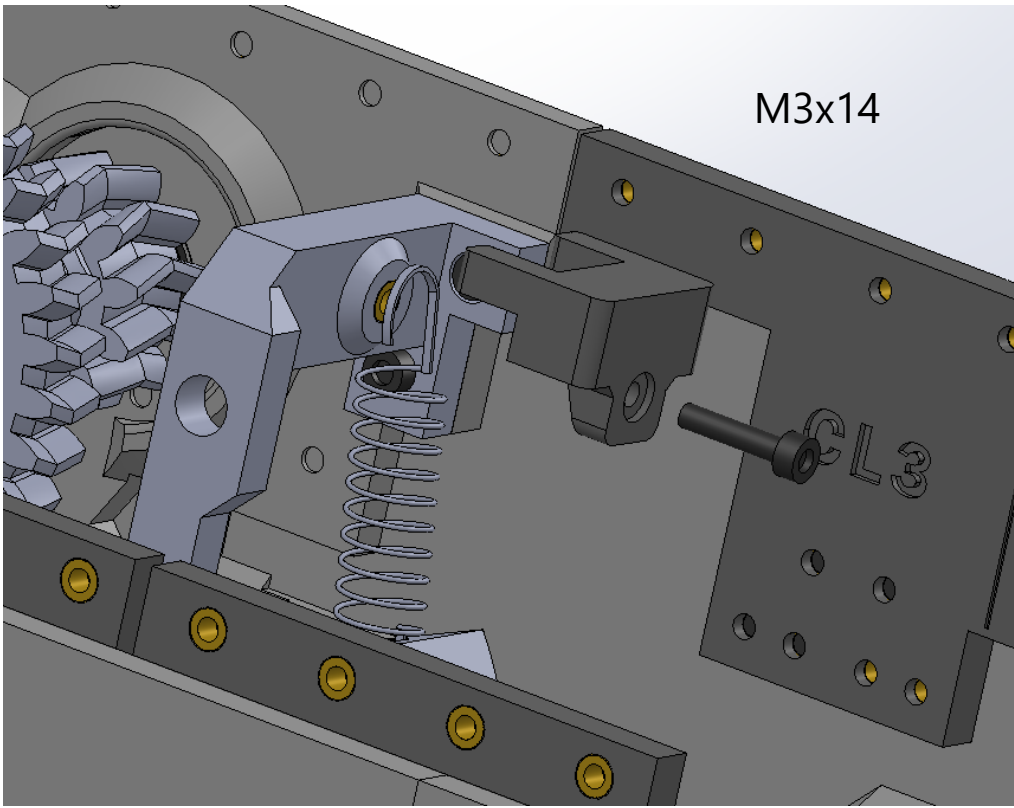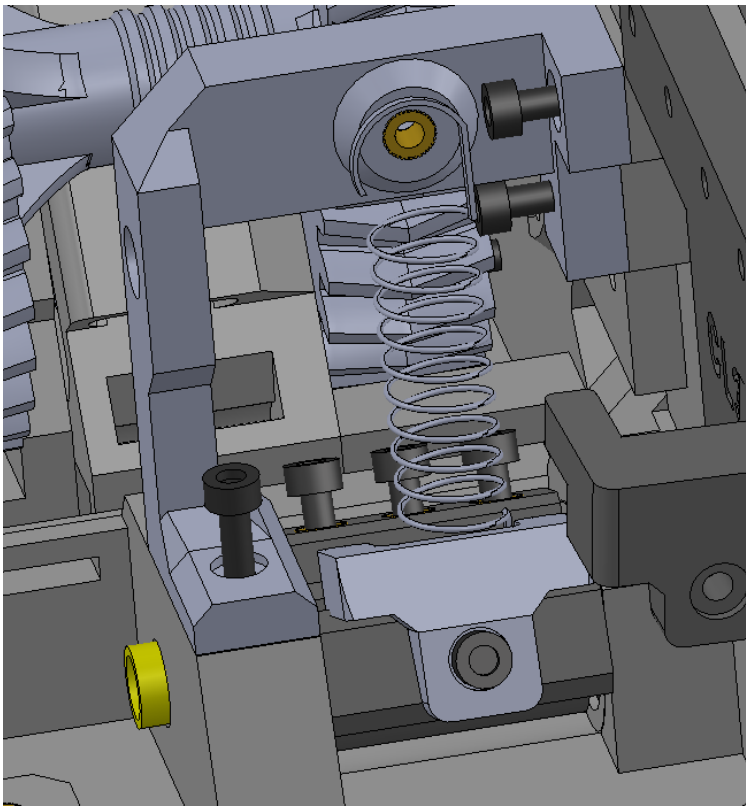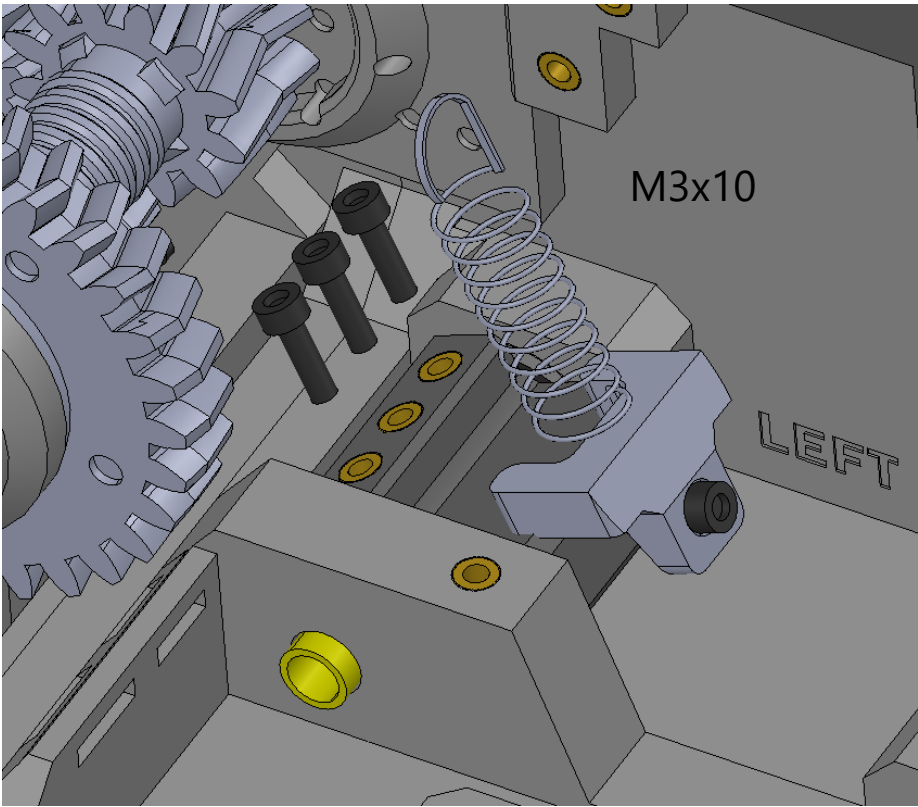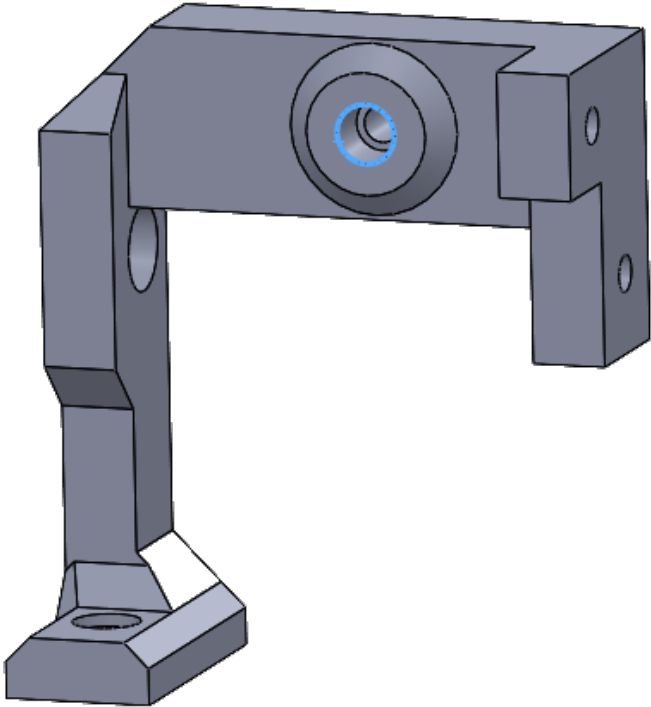
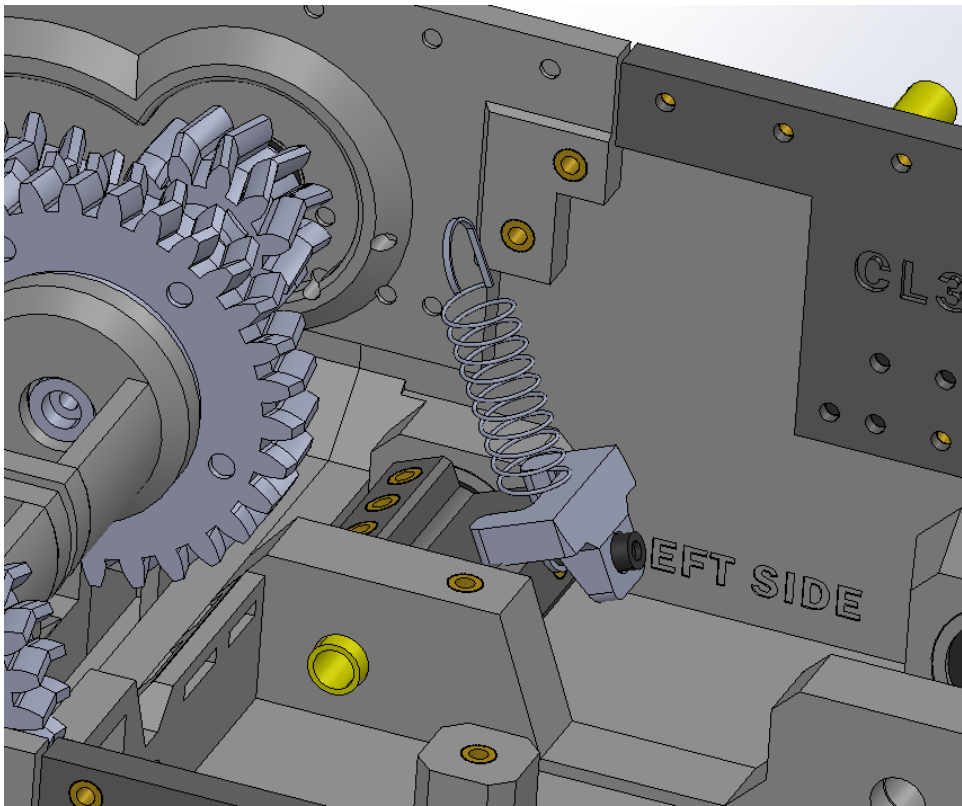


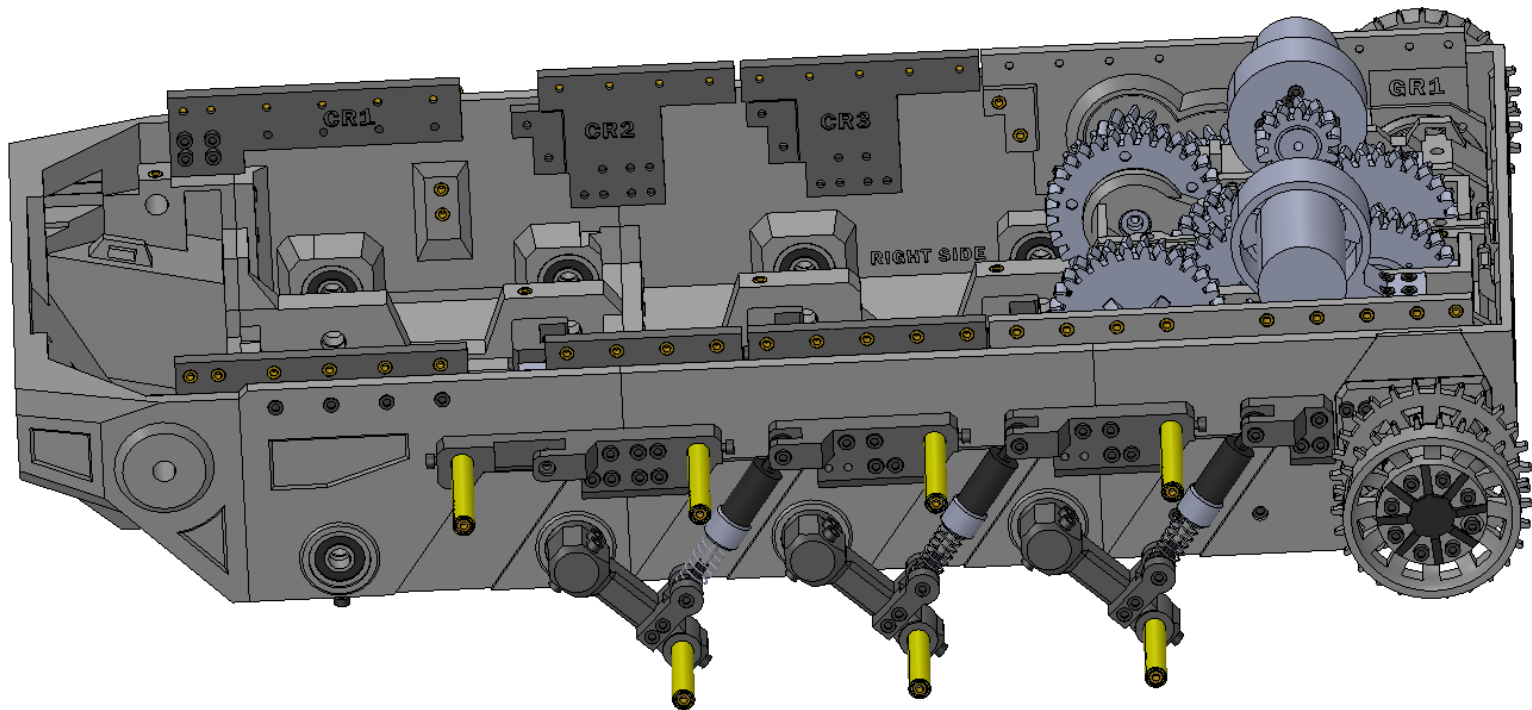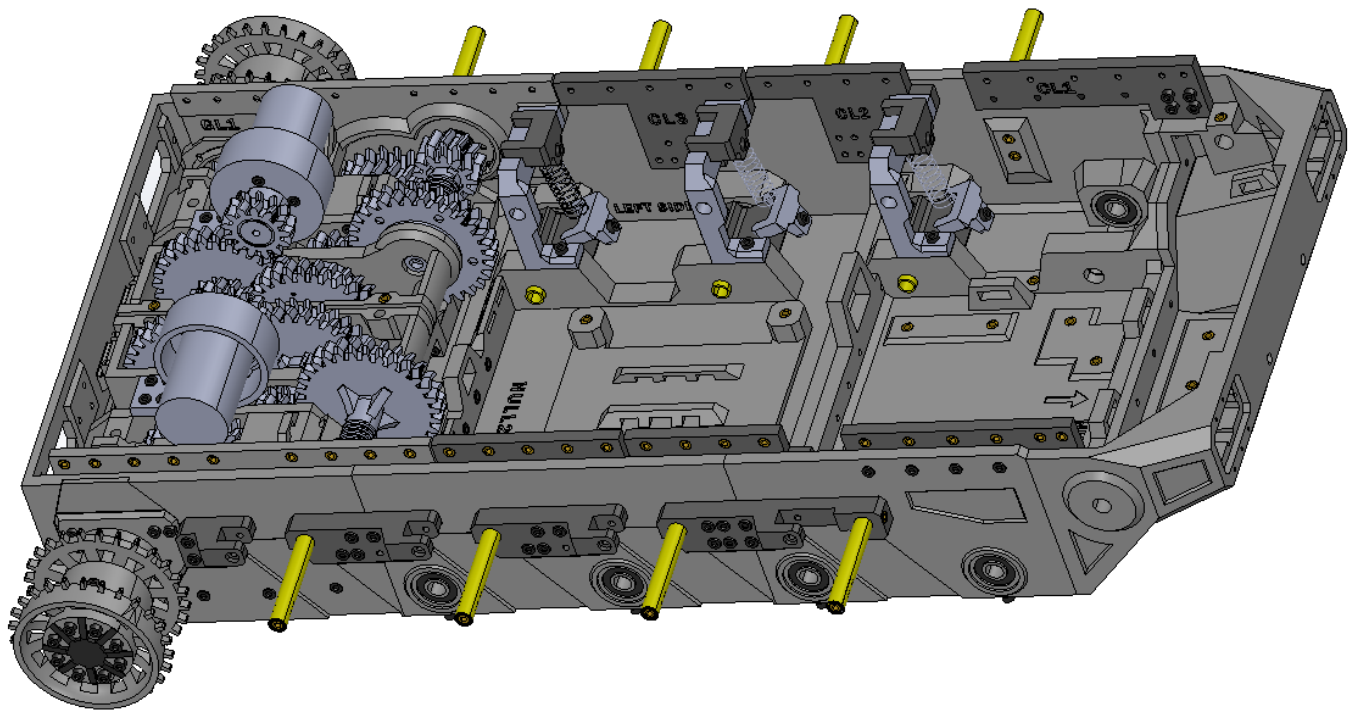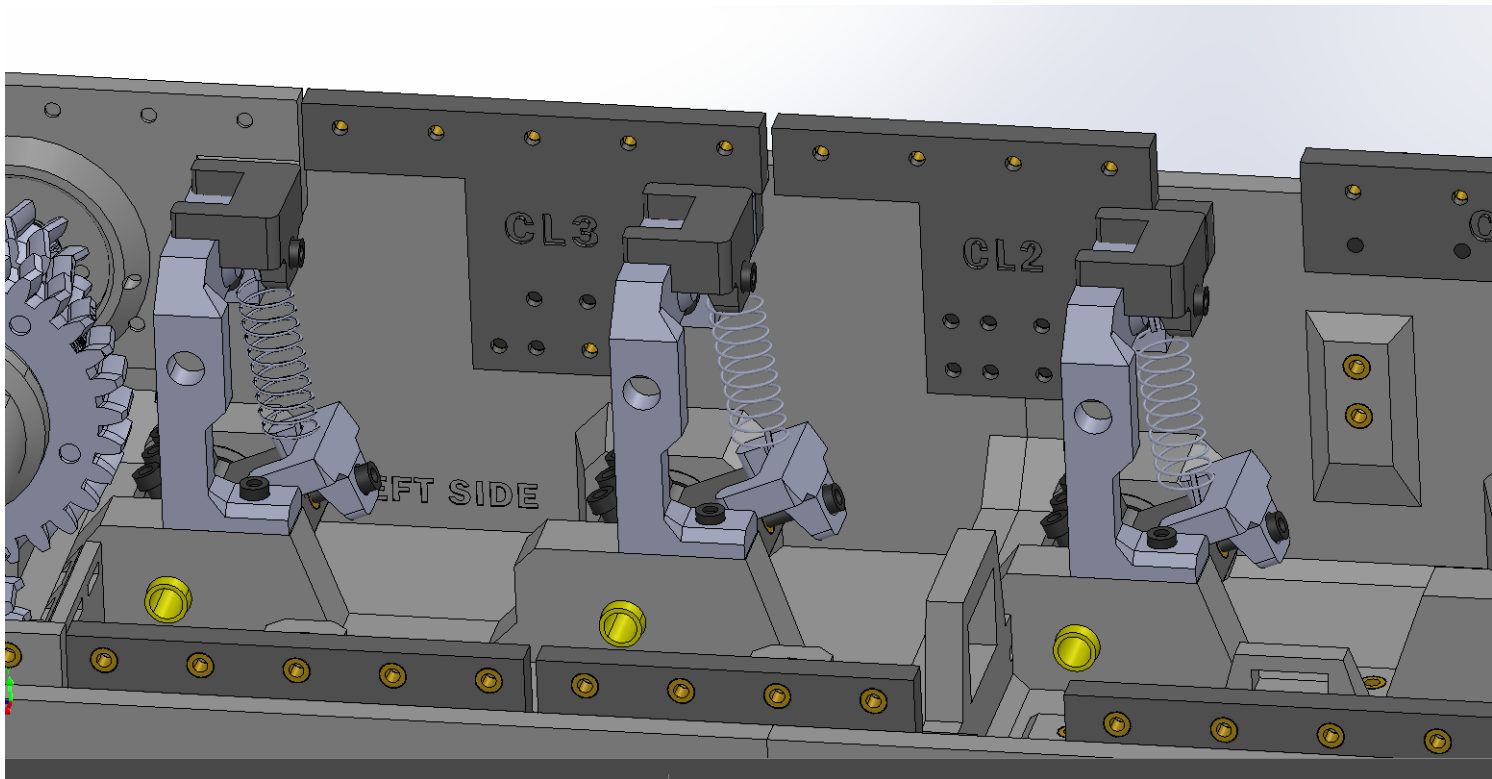

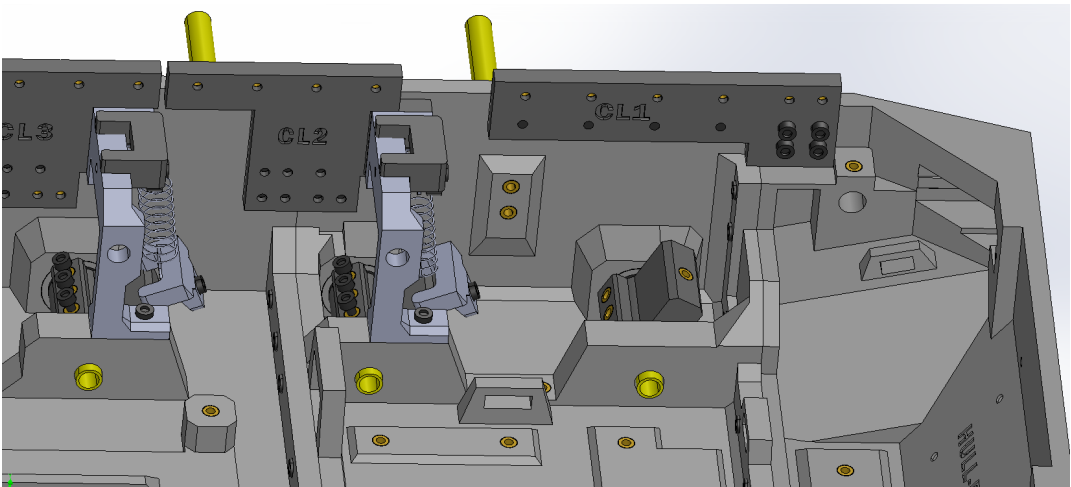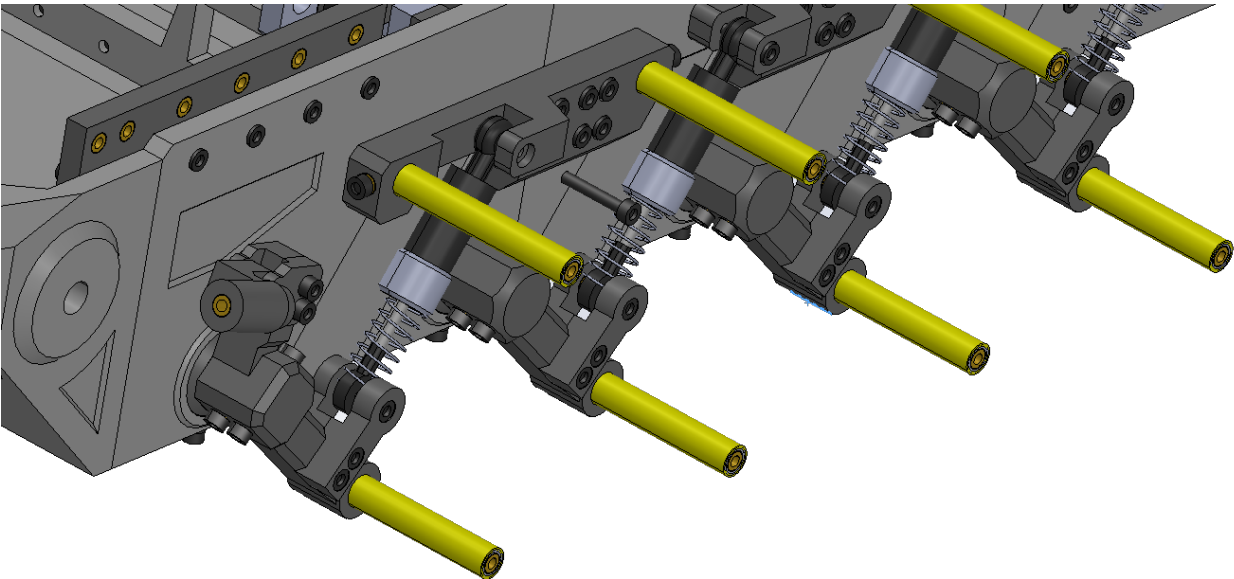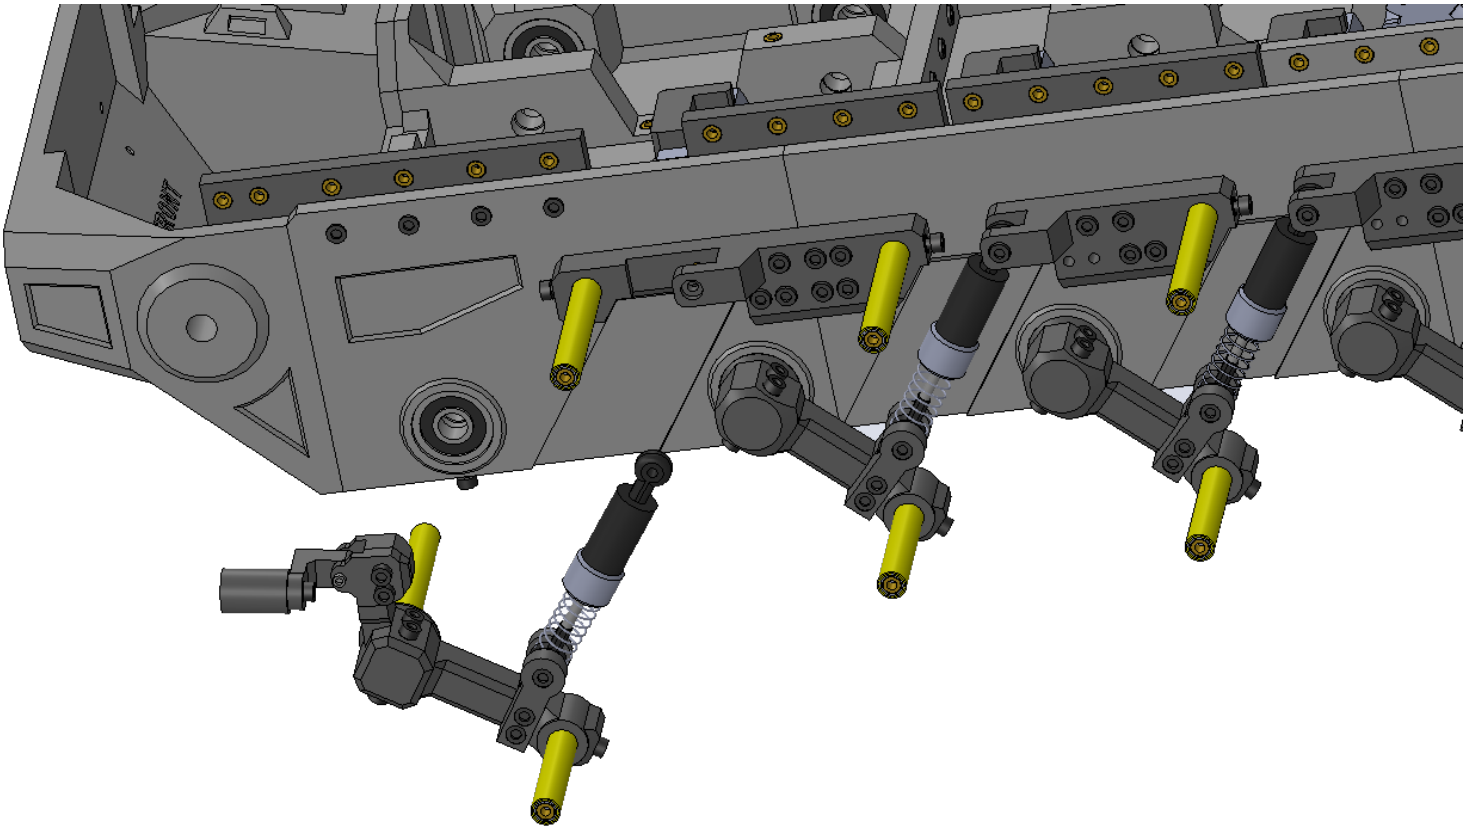

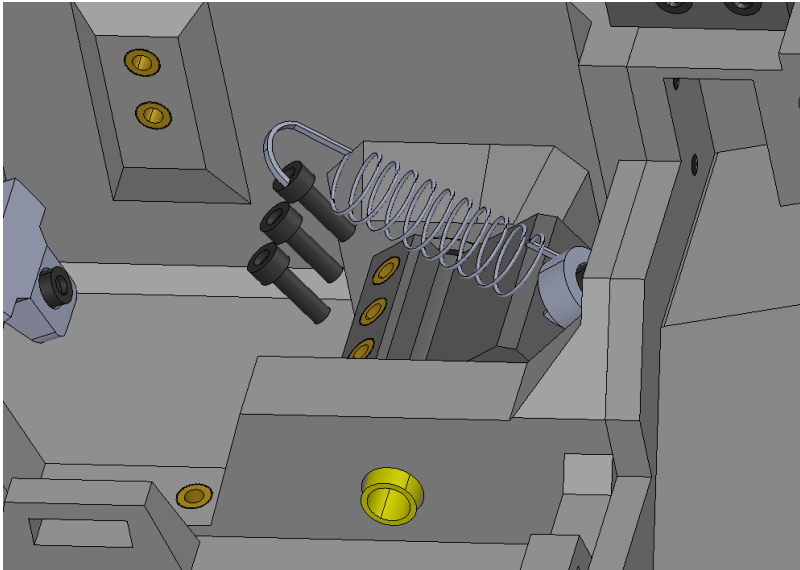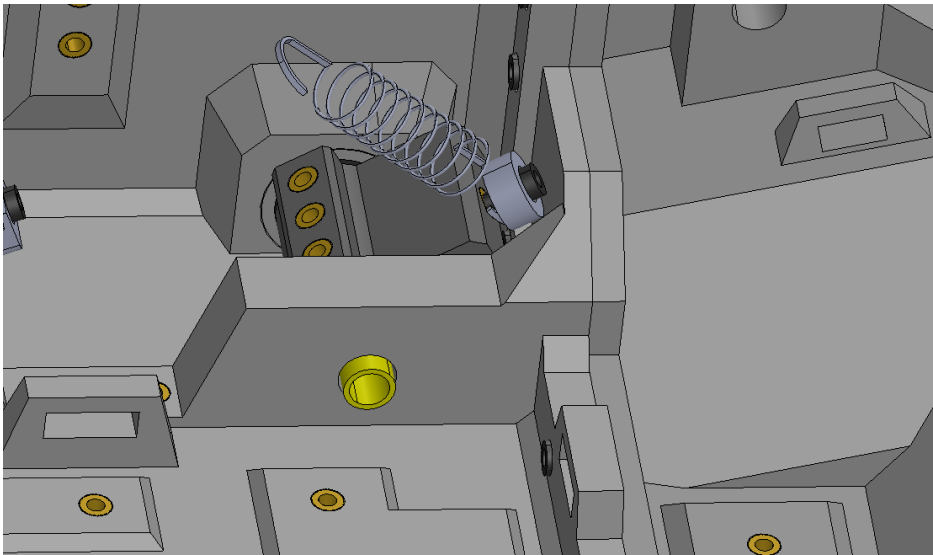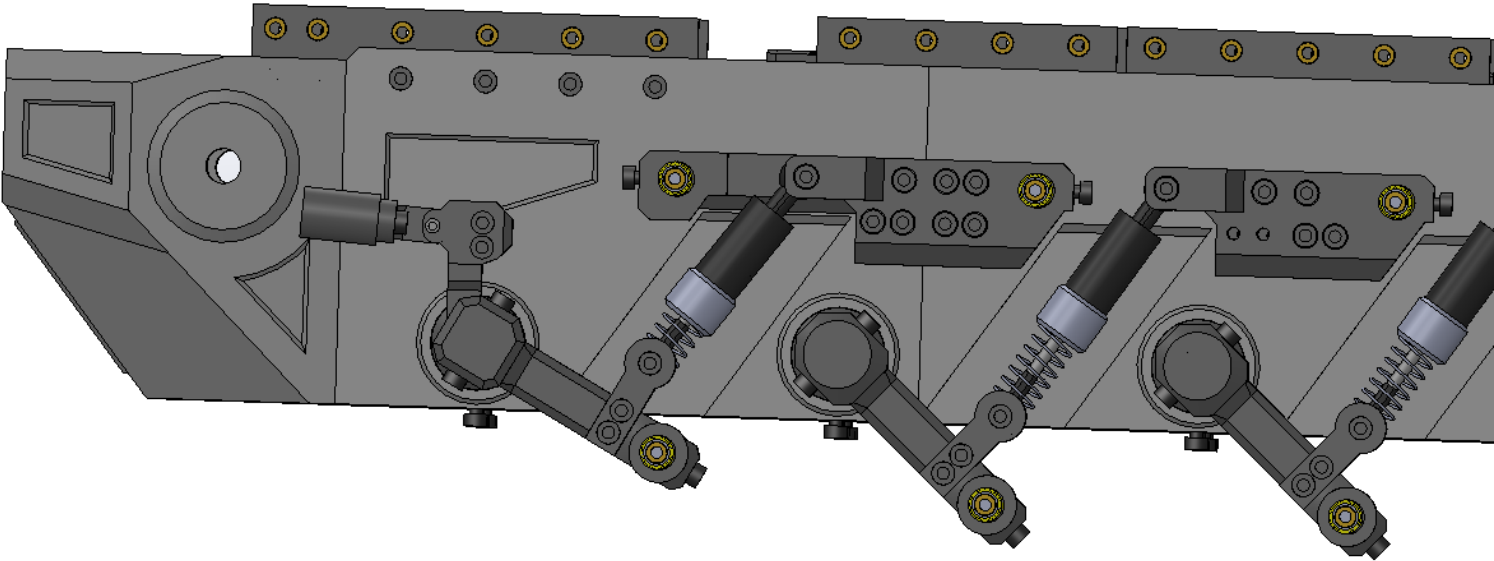

M3x10

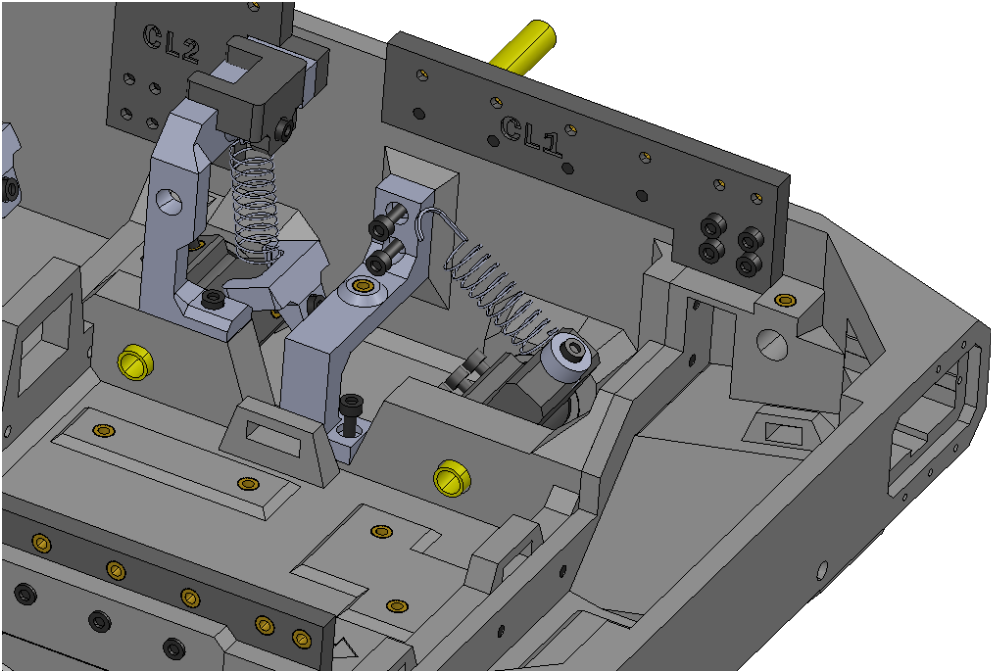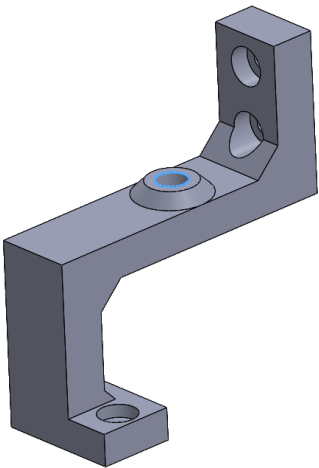

M3x8

